

Use & care

Enjoy Lock & Lock and be sure to review "Use & Care" instructions to ensure full enjoyment of product and proper usage.

General

- * Wash before use.

Washing instructions:

- * Top rack dishwasher safe.
- * Do not use abrasive cleaners and scrubbers.
- * Silicone seal can be removed for cleaning if necessary.
Do not use a sharp object to remove.

Microwave use:

- * Unlock all four latches and loosen lid before use in microwave.
- * The container base and lid are microwave safe for reheating purposes only.
- * Do not use lid or base in oven, under browning elements or on stove top.
- * Avoid overheating food high in oil, fat, sugar, or Tomato content to prevent permanent stains, pitting or other dangers associated with high temperature.