

KitchenAid® Digital 12" Convection Bake Countertop Oven FAQ's

What are the 9 Pre-Programmed Functions?

The KitchenAid® Digital Convection Bake Countertop Oven features 9 Pre-Programmed cooking modes specially designed for a variety of cooking tasks: Bake, Asado Roast, Broil, Keep Warm, Reheat, Pizza, Cookie, Bagel and Toast.

What is Asado Roast?

The Asado Roast mode uses two staged cooking to allow larger items like whole chickens or pork roasts to develop a crispy crust while slowly cooking the interior to retain the juices within the meat.

What is Even-Heat™ Technology?

The KitchenAid Even-Heat™ system helps provide consistent cooking results, without cold spots or overcooking. By cycling different heating elements on and off, and using certain elements for only part of the cooking cycle, the Even-Heat™ system produces tender, juicy roasts or pizzas with deliciously browned cheese -automatically.

What is convection cooking?

Convection cooking uses fans to circulate hot air inside the oven to provide faster, more even cooking. The KitchenAid® Digital Convection has a fifth heating element which helps to shorten preheating time.

What is the highest temperature the oven can achieve?

The KitchenAid® Digital Countertop Oven utilizes Even-Heat™ Technology for temperature control from 150° F to 450° F. It displays a temperature read within 5°F.

Does the Digital Countertop oven shut off when the timer runs through?

Yes, when the cooking cycle is complete, a tone will sound and the oven will shut off.

Are there any accessories for Digital Countertop oven?

Yes. Included is a 12" non-stick deep dish pan & grilling rack.

What is the best way to clean the Digital countertop oven?

Wipe the outside of the Countertop Oven with a clean, damp cloth and dry thoroughly. A non-abrasive liquid cleaner may be used for stubborn stains. The walls on the inside of the Countertop Oven have a blue, non-stick coating for easy cleaning. Remove heavy spatter after use with a nylon or polyester mesh pad, sponge, or cloth dampened with warm water. Dry with a paper towel or soft, dry cloth. It is important to not use cleaning agents. The oven rack, multipurpose pan, grilling rack and crumb tray are dishwasher safe, but hand washing is recommended.

What is the Push to Select knob?

The Push to Select knob is an easy to use and intuitive design to help you navigate the display and cooking modes.

Does the Digital countertop oven come with instructions?

Yes, a Use & Care Guide is included.