

Bio Cleaner S/3 Multi-Purpose Cleaning Clay w/6 Cloths

Q: On what surfaces can I use Bio Cleaner Multi-Purpose clay cleaner?

A: Bio Cleaner works well on most non-porous surfaces such as **Kitchen** stove tops (glass & porcelain), Wood Floor (Finished Wood / Laminate), stainless steel sinks, frying pans, microwave, glass oven door, Silver / Brass / Chrome, drip pan, and granite counter tops, etc. **Bathroom** Shower floor, Chrome Fixtures, Glass Shower Door, Ceramic Tiles, and Porcelain Bath/Sinks. **Outdoor** PVC furniture, Car Rim, BBQ Grill, and more.

Q: What surfaces should I NOT use Bio Cleaner on?

A: Bio Cleaner should not be used on porous surfaces, such as raw wood, matte painted surfaces, raw concrete, car paint finish, fabrics, and carpet.

As for upright stainless steel appliances (refrigerators, dishwashers, and oven doors) it is not recommended due to the various grades of stainless steel.

Q: How do I clean my glass stove top?

A: Wet the sponge, rub over the clay and apply to your surface.

Some white powdery film, from the clay, may occur. Thoroughly rinse the surface well and wipe dry.

Q: How do I remove the white powdery film?

A: Sometimes you will see a white powdery film, which is left from the clay. This means the surface has not been thoroughly rinsed. Continue rinsing until the powder is completely gone.

Q: How do I store Bio Cleaner?

A: After each use, let the clay and sponge dry completely before closing the lid. Once closed, Bio Cleaner should be stored in a dry place, not above 110°F