

Compass Home Solar Lighted 10 x 10 EZ Open Pop-up Gazebo

Assembly and Safety Instructions



- FOR OUTDOOR USE ONLY -

IMPORTANT SAFEGUARDS

Definitions

Whenever used, the following identify safety and property damage messages and designate a level of hazard seriousness.



- This is the safety alert symbol. It alerts you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER - Indicates a hazardous situation, which, if not avoided, will result in death or serious injury. Usage of this signal word is limited to the most extreme situations.

WARNING - Indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

CAUTION - Indicates a hazardous situation, which, if not avoided, may result in minor/moderate injury.

NOTICE - Addresses practices not related to personal injury, such as product and/or property damage.



READ ALL INSTRUCTIONS BEFORE USE



WARNING - To reduce the risk of fire, electrocution, or serious personal injury:

- This product is not a toy. Only adults should assemble/disassemble this product for use and/or storage. Extra caution and close supervision are necessary when assembling/disassembling or using this product near children.
- To avoid a pinch hazard, do not insert fingers, hands, or other body parts between the folding parts of the product, especially when assembling or disassembling the product for use or storage.
- Always ensure the legs of the product are fully extended and securely in place before each use. During use, periodically check the legs to ensure they are securely positioned and/or secured.
- Do not stand under this product during a lightning storm.
- Disassemble and store the product before inclement weather arrives.
- Never barbecue or use open flames (e.g., candles, lanterns, fireworks) under or near this product.

 




 



CAUTION - To reduce the risk of personal injury:

- This product is intended for use as a decorative sunshade and is not designed to withstand severe weather conditions (e.g., high wind, heavy rain). Do not use the product for any other purpose.
- Do not leave the product permanently assembled, as it is a temporary structure.
- Do not lean on or attempt to climb up on this product.
- Wear sunblock when using this product. Standing in the shade of this product will not protect you from the damaging rays of the sun.
- Always position this product on a firm, level, stable ground surface that allows insertion of the Ground Stakes to secure product placement.
- Discontinue use of this product if any parts show signs of instability or wear.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

Parts List

Description	Illustration	Qty
Carrying Case with Wheels		1
Gazebo Frame		1
Canopy Fabric		1
Guy Cord		4
Ground Stake		8
Solar Panel		1
Anchor Bag		4

NOTICE: *Before beginning assembly, ensure all listed parts and hardware are included.*

STOP! STOP! STOP! STOP!

IMPORTANT 1ST TIME ASSEMBLY INSTRUCTIONS

1. Assembling the gazebo frame and fabric (ONLY NECESSARY FOR THE 1ST TIME ASSEMBLY)
 - a) Select the desired location for positioning the gazebo.
 - b) Remove the canopy fabric, solar panel, sand bags, guy cords and ground stakes from the carrying case for later use.
 - c) Place the gazebo frame on the desired location and remove the carrying case.
 - d) Connect plugs in between solar panel and socket on top of canopy, push down and tighten by twist clockwise until solar panel is securely fastened. (see Fig. 1)
 - e) Push inward on one of the levers located inside of the frame legs, and pull out the extension from the top portion of the leg to the 1st level. Repeat for the remaining legs. (see Fig. 2)

NOTICE: *There are four holes in each leg for adjusting the height of the canopy. Do not fully extend legs downward at this time.*

- f) Gently lift one outer frame leg and pull open the frame partially until you extend the frame to a full arm's length-approx. 4 feet. (see Fig. 3)
- g) Pull out the extendable awning bar from the top of the gazebo leg. Fully extend the bar and gently push it downwards to lock it in position. Repeat for the remaining extendable awning bars. (see Fig. 4)
- h) Place the canopy fabric over the partially opened frame. Align all four corners on the fabric to the tip of extendable awning bars. Assemble the vent cover to the canopy fabric by using the hook and loop straps attached. (see Fig. 5)

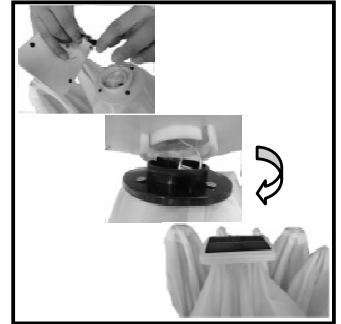


Fig. 1

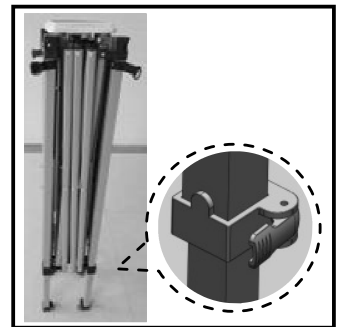


Fig. 2

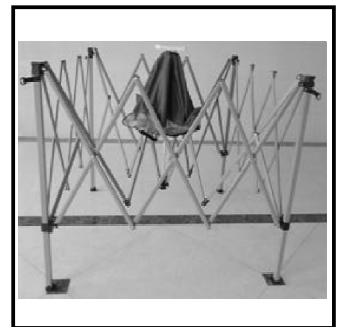


Fig. 3

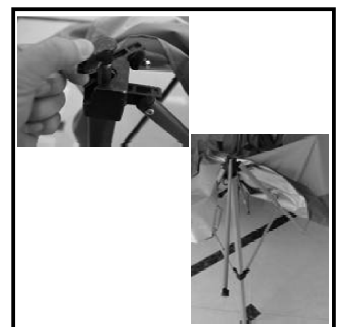


Fig. 4

- i) Step underneath the canopy and firmly push the centered frame handle upward until the clamps snap into place and rest securely over the frame brace. (see Fig. 6&7)
- j) Use the hook and loop straps to secure each corner of the fabric to the upper portion of each leg and secure remaining hook and loop straps to the frame. (see Fig. 8)

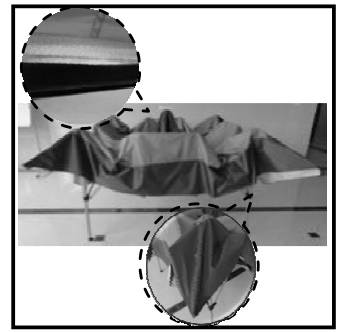


Fig. 5

- 2. Extend the leg to the desired height (second or third hole from the bottom of the leg) push inward on the lever located inside of a leg, and release to insert the safety pin into the selected hole. Repeat to adjust each remaining leg. (see Fig. 2)

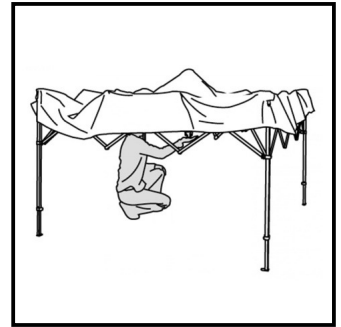


Fig. 6

- 3. Secure the placement of the canopy by:

- a) inserting the stakes through the ends of the legs. (see Fig. 6)
- b) unfolding the four guy cords, locating on the top, outside corners of the lintel or the canopy when without awning (step 5.), extending the guy cords to ground level, securing the end of the guy cords to ground stakes, and then inserting the ground stakes into the ground. (see Fig. 8)
- c) filling up anchor bags with sand and securely tie on all 4 legs.

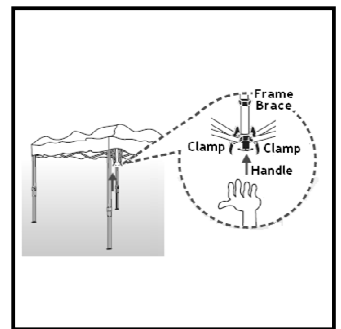


Fig. 7

WARNING: *The guy cords and ground stakes can present a tripping hazard, resulting in serious personal injury. Use extra caution near the guy cords and ground stakes when the product is in use and during assembly/ disassembly.*

- 4. Use the switch on the roof rib to operate the lights. 8 hours of charge will yield 8 hours of LED usage depending on degree of sunlight exposure.

NOTICE: *To prevent damage, store the solar panel in the box provided when not in use.*

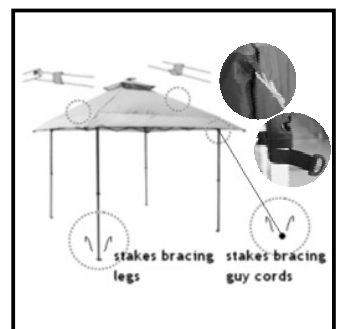


Fig. 8

- 5. For quick set up without awnings, skip point 1. g) to remain the extendable awning bars inside the leg tubes. Fix the canopy to the legs and fold the 4 canopy corners and secure with the hook and loop pads attached. (see Fig. 9)

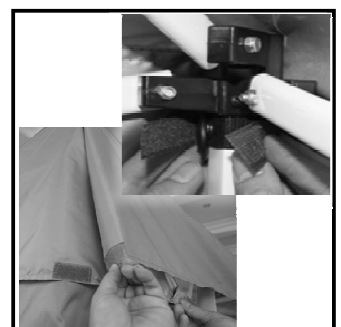


Fig.9

To Disassemble & To Store

1. Remove sand bags or ground stakes.
2. Push inward one of the levers located inside of the legs and release the safety pin from the hole in the leg, and lower the height of the canopy. Repeat for the remaining legs. (*see Fig. 10*)
3. Step underneath the lowered canopy and release the clamps securing the handle to the frame brace by pressing the clamps inward and pulling down on the handle. (*see Fig. 11*)
4. Step out of the canopy. Gently lift the extendable awning bars, remove the canopy corners, and restore the bars back in the tubes. Gently lift one leg and push inward until the frame is folded. (*see Fig. 12*)

NOTICE: Do not use excessive force when disassembling the canopy. If the frame or canopy feels stuck and will not close, slightly open the legs again, gently jiggle the frame and canopy, and then continue pushing the legs inward.

5. Place the folded canopy horizontally on a flat surface.
6. Push inward one of the levers located inside of the legs, release the safety pin, and slide the leg upward into the top portion of the leg. Repeat for the remaining legs. (*see Fig. 13*)
7. Remove the solar panel by turn it counterclockwise and disconnect the plug from the socket. Store the solar panel in the box provided. (*see Fig. 14*)
8. Make sure debris (e.g., grass, dirt) is removed from the ends of the legs and store the product into the carrying case.

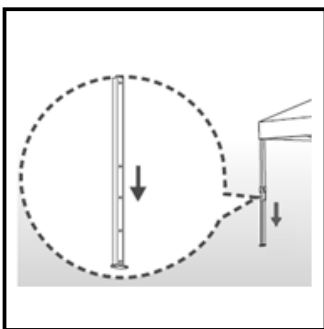


Fig. 10

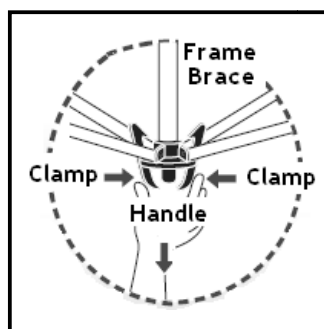


Fig. 11

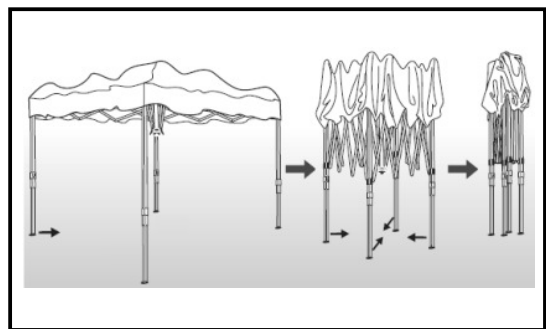


Fig. 12

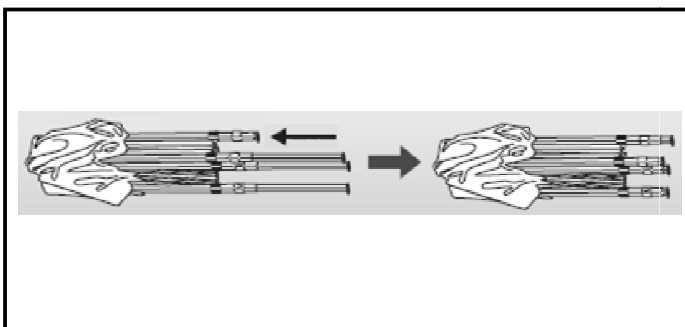


Fig. 13

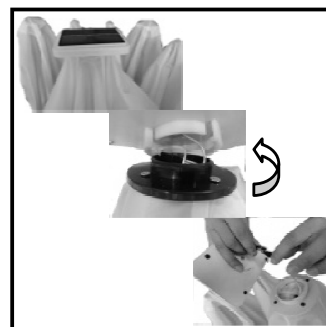


Fig. 14

Care and Maintenance

- Disassemble the product during inclement weather and immediately after each use.
- Always make sure the canopy is dry before storing the product, to avoid product damage from mold and mildew.
- Do not use abrasive cleaners or pads to clean the product.
- After each use and to remove loose dirt or debris, wipe the metal frame with a soft, dry cloth before storing the product.
- Every few months, clean the canopy using a soft brush and warm, soapy water. Rinse and dry thoroughly.
- Every few months, clean the frame of the product following instructions in the “Rust on Metal Finishes” section below.
- Store the product in a cool, dry location.

Rust on Metal Finishes

Rust is unavoidable when metal products are used outdoors. Rust is a chemical reaction between oxygen, water, and metal. To help avoid rust:

- Keep the product out of inclement weather as much as possible.
- Avoid knocking metal parts against each other or dragging items across a concrete or tile floor. Each nick in the metal is a place for oxygen and water to contact the metal and begin rust formation.
- Wash metal parts with soapy water, using a soft brush in the crevices, after each use if the product is used weekly or more often or at least every three to four weeks, and always before storing. Rinse thoroughly, dry completely, and then coat the metal with a car wax of your choice. This temporarily protects the metal from the oxygen and water in the air. Since the coating is thin, however, it must be replenished periodically to retain its protective qualities.
- If rust begins to form on the metal, use a rust removal product and follow the product instructions to clean off the rust. Then either wax (as described above) or paint the exposed metal (with paint recommended for use on metal) to help prevent further rusting.

Battery Disposal Information

- The battery located on top of the canopy is not changeable.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries.
- Do not dispose of batteries in fire.
- Batteries should be recycled or disposed of as per state and local guidelines.

item# KGS0117U/ M46591 000 000

made in China

American Customer Service hotline: 1-855-259-5094