

Plow & Hearth

Item #:52331/52332/52333 Product Name: Solar Mobile with Chimes



USE AND CARE INSTRUCTIONS

Please read these instructions and keep them for future reference

Setup time approximately 5 minutes Outdoor Use

Soothing, tinkling sounds mix with translucent beauty when the wind blows, and these delicate, dangling creatures really shine when the sun goes down. Just hang your LED mobile in bright sunlight and the solar panel will charge all day to give off 6-8 hours of nighttime illumination.

With the solar light turned on, place your mobile where it will be exposed to full sun for a minimum of twenty-four (24) hours, before its first use. This will ensure the battery is fully charged, and should provide up to eight (8) hours of nighttime illumination. To ensure maximum brightness and a beautiful display, hang the lantern where it will be exposed to direct sunlight during the day.

SETUP

1. Gently lift the mobile and chimes out of the package. If necessary, untangle the chimes and strings so that each figurine hangs freely
2. Before hanging, check to ensure all the strings are securely attached to the solar panel housing, and that the switch on the underside panel is in the on position. The switch needs to be on during the initial charge

USE

1. Move the switch to the ON position, located on the underside of the solar panel, and as darkness falls, the translucent figurines will light. When storing, turn the light off by moving the switch to the OFF position
2. The battery may need to be replaced after a year of continuous use. First, remove the chimes by twisting them counterclockwise, then open the battery compartment using a #0 Philips head screwdriver (not included) to remove the one (1) screw on the underside of the panel. Gently pull the wires aside to allow sufficient room to replace the battery
3. For best results, use a **rechargeable** AA 600 mAh or greater 1.2v battery, inserted following the polarity shown on the battery housing. Only a rechargeable battery should be used. When replaced, the capacity of the battery shall not be less than the recommended capacity. Failure to insert the battery in the correct polarity, as indicated, may shorten the life of the battery, cause the battery to leak, or otherwise damage the unit
4. Close the battery compartment, reinsert the screw in the battery compartment, then tighten the screw carefully until seated securely. Do not over tighten. Reattach the chimes in a clockwise direction.



Note: Choose a location for your mobile where the solar panel will have the most exposure to sunlight during the day. A full charge will normally take one full day of direct sunlight. Occasionally wipe the top of the solar panel with a soft cloth to remove any dust or debris that may have collected. This will ensure the brightest nighttime display. It's best during high winds to bring the mobile indoors to prevent any damage to this item.

Note: Do not dispose of batteries in fire or in landfills. Batteries should be recycled or disposed of as per state and local guidelines



Battery must be recycled or disposed of properly. Do not short circuit or dispose of in fire.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notes: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.