

eurolflex®

monster®



MULTI-FUNCTION HAND VACUUM INSTRUCTION MANUAL



For Authentic Monster Replacement Parts
Call **888.896.8786**

Model #:
H056

IMPORTANT SAFETY

SAVE THESE INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be observed, including the following:

Read all instructions before using this appliance.

WARNING: To reduce the risk of fire, electrical shock, or injury:

1. Do not leave appliance unattended when plugged in. Unplug from outlet when not in use.
2. Do not use outdoors or on wet surfaces.
3. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
4. Use only as described in this manual. Use only manufacturer's recommended attachments.
5. Do not use with damaged cord or plug. Do not use vacuum if it has been dropped, damaged, left outdoors, or dropped in water. Return it to an authorized service center.
6. Do not pull or carry by cord, use cord as a handle, or pull cord around sharp edges or corners. To unplug, grasp the plug to remove – do not pull on cord.
7. Keep cord away from heated surfaces.
8. Do not put any objects into openings. Do not use with any opening blocked – keep free of dust, lint, hair and anything that may reduce air flow.
9. Do not handle plug or appliance with wet hands.
10. Do not attempt to change accessories while unit is running.
11. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
12. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
13. Always switch unit off before unplugging.
14. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where the vapors or materials may be present.
15. Look closely at your vacuum and follow all labels and marking instructions.

E TY INSTRUCTIONS

 
SAVE THESE INSTRUCTIONS

16. Keep the end of hose, wands and other openings away from your face and body.
17. Do not use the vacuum cleaner without Dust Cup Filter in place.
18. Always unplug this appliance before connecting or disconnecting Flex Hose, Extension Tubes or Accessories.
19. Always unplug this appliance before removing or replacing Dust Cup and/or Dust Cup Filter.
20. Store the vacuum indoors. Put vacuum away after use to prevent accidents.
21. Using improper voltage may result in damage to the motor and possible injury to the user. Correct voltage is listed on the rating label.
22. Use only on dry, indoor surfaces.
23. Do not use for any purpose other than described in this user's guide.
24. If the cleaner is damaged, it must be repaired by the manufacturer or its service agent or a similarly qualified person in order to avoid safety issues to the operator.
25. Use only approved and supplied parts and accessories. Use of any other kind of accessory is not recommended.
26. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of appliance by a person responsible for their safety.
27. This appliance is intended for household and residential use only.
28. Read and follow all important notices in this guide.

For Authentic Monster Replacement Parts
Call **888-896-8786**


Product Description

For Authentic Monster Replacement Parts
Call **888-896-8786**

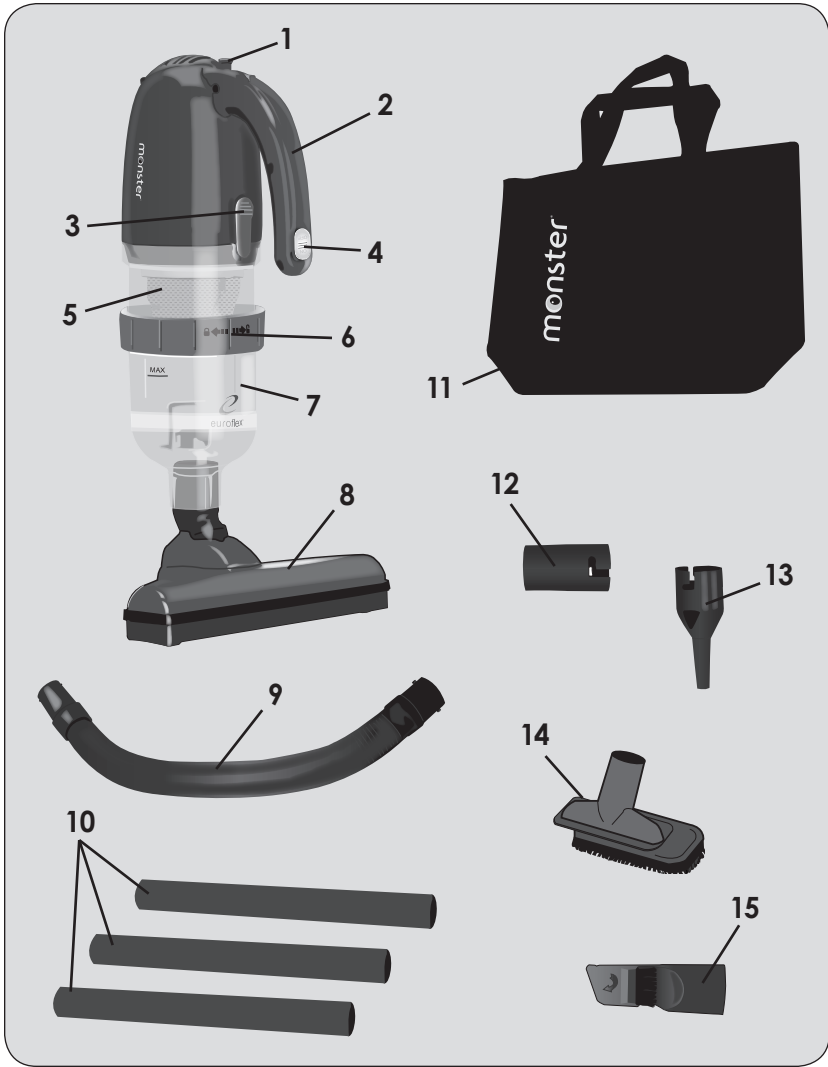


- | | |
|----------------------------|------------------------------|
| 1 - Blower Opening Release | 9 - Flex Hose |
| 2 - Handle | 10 - (3) Extension Tubes |
| 3 - Dust Cup Release | 11 - Tote Bag |
| 4 - Power Button | 12 - Connector |
| 5 - Dust Cup Filter | 13 - Blower Nozzle |
| 6 - Dust Cup Lock | 14 - Square Upholstery Brush |
| 7 - Dust Cup | 15 - Dual-Use Crevice Tool |
| 8 - Floor Brush | |

 1 Accessories – Uses & Descriptions

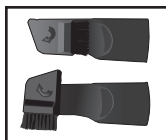

Dual-Use Crevice Tool – Use for narrow spaces such as drawers, window tracks, cupboards, dashboards and vehicle consoles. Rotate Brush on the end and use it to clean up crumbs and dust particles from tight spaces.

 Square Upholstery Brush – (A.) can be used for upholstery, blinds, books, and more, or... Slide bristles off (B.) and use to clean furniture even more thoroughly.

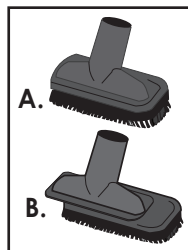

Connector – Use to connect Accessories to Flex Hose.

Blower Nozzle – Use on end of Flex Hose to blow leaves or dust and dirt from window tracks and corners.



Flex Hose – Connect to bottom portion of unit and use with Accessories for more flexible control. Insert in top of unit for use with the Blower Nozzle.

Extension Tubes – Use with the Floor Brush to create an upright floor vac. Or, use with other Accessories to extend your reach.





For Authentic Monster Replacement Parts
Call **888-896-8786**

 
Before using your H056 Multi-Function Hand Vacuum, please take a minute to familiarize yourself with the unit, its functions and how to properly connect Accessories.

2 Expand the Dust Cup




The Dust Cup can be expanded by holding the Handle, turning the Dust Cup Lock toward the "Unlock"  symbol, and pulling the Dust Cup down.

Once expanded, turn the Dust Cup Lock to the "Lock"  symbol, and lock Cup in place.

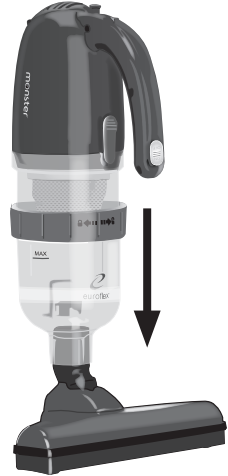

3 Attach Accessories Directly to Unit

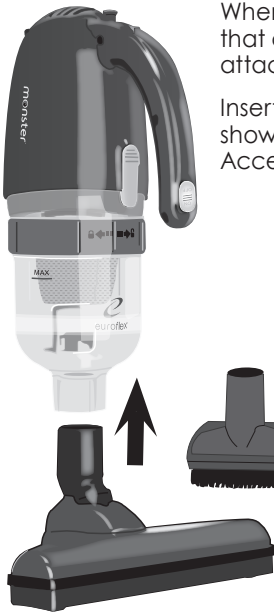 

When cleaning automobile interiors or small areas that do not require a long reach, we suggest attaching the needed Accessory directly to the unit.

Insert Main Floor Brush or any of the Accessories shown, directly in the Dust Cup opening. Be sure Accessory is pushed securely in place before using.

IMPORTANT
ALWAYS REMOVE THE PLUG FROM ELECTRICAL OUTLET BEFORE ATTACHING OR REMOVING ACCESSORIES!

For Authentic Monster Replacement Parts
Call **888-896-8786**



4 Attach Flex Hose & Accessories to Unit

A. Insert Flex Hose

Insert the end of Flex Hose with the 2 small squares on either side into the grooves inside the Dust Cup opening. Be sure to press Hose in as far as it will go.

B. Attach Connector to Flex Hose

  Line up opening on Connector with round button on other end of Flex Hose. Insert Flex Hose in Connector and turn Hose to right to lock in place.

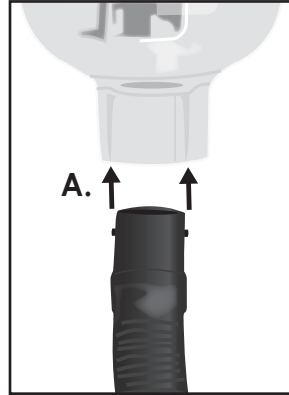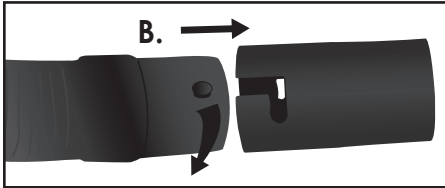


Once Flex Hose is inserted in Dust Cup and Connector is attached to Hose, insert any of the Accessories below directly in the Connector opening.

You can also connect Extension Tube(s) to the Flex Hose to reach further. *(Connect 1, 2 or all 3 Tubes to the Flex Hose.)* Insert narrow end of Extension Tube in Connector opening, then insert Accessory in the larger end of the Extension Tube.



IMPORTANT

 ALWAYS REMOVE THE PLUG FROM ELECTRICAL OUTLET BEFORE ATTACHING OR REMOVING ACCESSORIES!

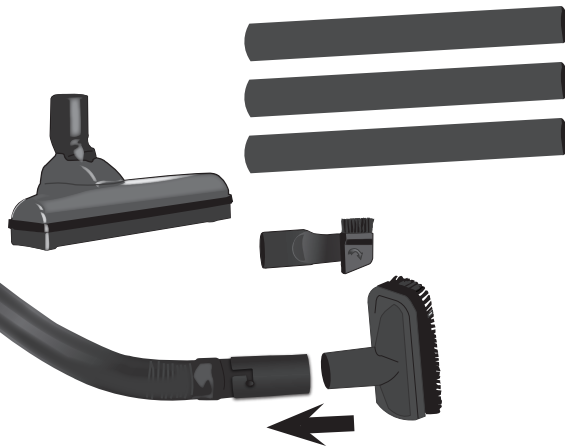

For Authentic Monster Replacement Parts
Call **888-896-8786**

5 Using the Extension Tube(s)



Insert the narrow end of Extension Tube in the Dust Cup opening and press firmly in place.

Firmly insert Accessory in the other end of the Extension Tube and your vacuum is converted to a stick cleaner.

Attach additional Extension Tube(s) to the end of the first, and use as a floor vacuum, or to get to those really hard-to-reach places.

For Authentic Monster Replacement Parts
Call **888-896-8786**

 
- Attach the Floor Brush to clean hardwood floors and carpets.
- Attach the Square Brush to clean ceilings, draperies and ceiling fans.
- Attach the Crevice Tool for ceiling corners and other tight spaces.

IMPORTANT

ALWAYS REMOVE THE PLUG FROM ELECTRICAL OUTLET BEFORE ATTACHING OR REMOVING ACCESSORIES!



6 Using Unit as a Blower

When you need to clean up leaves, clear dirt from doorwall and window tracks, or sawdust from floor corners, the H056 Vacuum can also be used as a Blower.

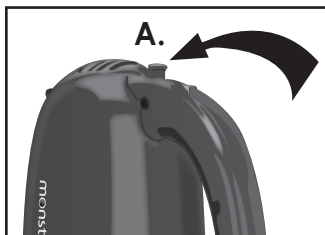

A. Pull the Blower Opening Release up and away from the Handle.

  B. Firmly insert the end of Flex Hose with the 2 small squares on either side into the opening.

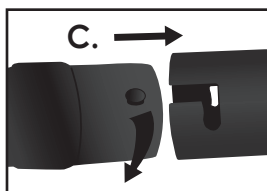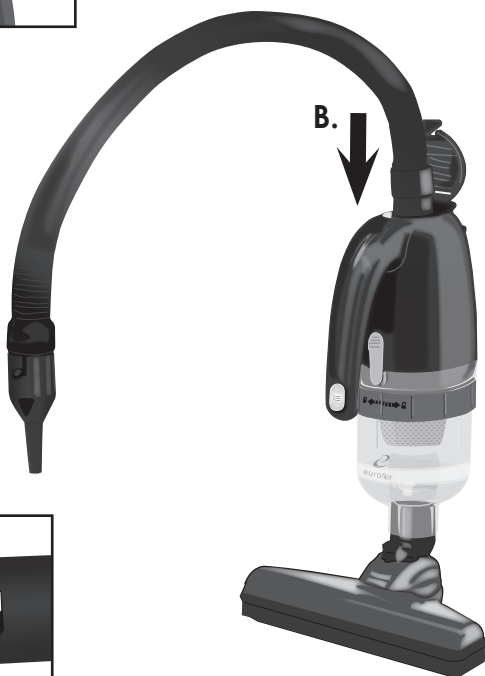

C. Attach Blower Nozzle to Flex Hose

Line up opening on Blower Nozzle with round button on other end of Flex Hose.

Insert Flex Hose in Blower Nozzle and turn Hose to right to lock in place.

For Authentic Monster Replacement Parts
Call **888-896-8786**

CAUTION

The hand vacuum is a powerful unit. Be sure to hold it firmly, as it can slip from your hand and may cause injury.

ALSO...Ensure the Dust Cup opening and all Accessories are free of obstructions at all times. If clogged, the motor will overheat and could become damaged.

7 Operating the H056 Unit

Whether you are using the H056 as a Vacuum or Blower, the usage steps are the same as listed below

- Hold the vacuum firmly using the Handle.
- Plug Power Cord in an electrical outlet.
- Slide the Power Switch to the "On" position and begin vacuuming or blowing.
- When finished, turn Switch "Off", unplug unit, bundle power cord and place unit in a cool, dry location.

8 Changing & Cleaning Dust Cup & Filter**A. Remove Dust Cup**

Push Dust Cup Release at top and remove Dust Cup from vacuum (see image at left).

B. Remove Filter from Dust Cup

Lift Filter from top of Dust Cup.

**C. Empty Debris from Dust Cup and Filter**

Empty debris in trash can.



NOTE: We recommend replacing the Dust Cup Filter every three (3) months to ensure peak performance of the unit.

Cleaning Filter

When Filter becomes extremely dirty, you can wash it by hand.

- Rinse Dust Cup Filter with cold water and **ALLOW IT TO AIR DRY COMPLETELY.**

Do not use a washing machine to clean Dust Cup Filter. Do not use a hair dryer to dry the Filter. AIR DRY ONLY.

- Insert Filter in the Dust Cup.

***IMPORTANT* NEVER use the H056 vacuum without a Filter in place.**

- Match up rounded cutout on Dust Cup with the Dust Cup Release and snap Cup in place.

Issues	Possible Causes	Solutions
Hand Vacuum will not operate.	No power coming from electrical outlet.	Check fuse or breaker, and replace fuse or reset breaker if needed.
	Unit needs servicing.	Send/take appliance to an authorized service center.
Hand Vacuum will not pick up, or suction power is weak.	Dust Cup is full.	Empty Dust Cup (see above).
	Dust Cup filter needs cleaning.	Remove Dust Cup filter and check for object(s) in air duct and remove.
Dust escaping from Hand Vacuum.	Dust Cup is full.	Empty Dust Cup.
	Dust Cup filter installed incorrectly.	Review Dust Cup instructions (see above).
	There is a hole in Dust Cup filter.	Replace Dust Cup filter (see above).
Hand Vacuum brushes will not pick up.	Dust Cup is full.	Empty Dust Cup.
	Attachment may be clogged.	Unclog attachment.

For Authentic Monster Replacement Parts
Call **888-896-8786**

LIMITED WARRANTY

Euroflex Americas warrants this product to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase, when utilized for normal household use, subject to the following conditions, exclusions and exceptions.

Should any defect covered by the terms of the limited warranty be discovered within one (1) year, Euroflex Americas will repair or replace any defective part provided the unit is returned by the original purchaser, freight prepaid, to:

U.S.: Euroflex Americas, 3795 Lamar Avenue, Memphis, TN 38118

Canada: Euroflex Canada, 391 Steelcase Road, W., Unit 16, Markham, ON., L3R 3V9, Canada

Proof of purchase and \$9.95 for handling and return packing/shipping charges must be included.

The liability of Euroflex Americas under this warranty is limited solely to the cost of the replacement parts or the complete unit at our option. LABOR CHARGES ARE NOT INCLUDED.

This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered with or used for commercial purposes. This warranty does not apply to any defect arising from misuse of the product, negligence, failure to follow Euroflex's instructions, use on current or voltage other than that stamped on the product, alteration or repair not authorized by Euroflex, or damage due to faulty packaging or mishandling in transit (by any common carrier). Repair or disassembly by anyone other than a Euroflex authorized service center will void the warranty.

This warranty is extended to the original purchaser of the unit and excludes all other legal and/or conventional warranties. The responsibility of Euroflex Americas, if any, is limited to the specific obligations expressly assumed by it under the terms of the limited warranty. In no event is Euroflex Americas liable for incidental or consequential damages of any nature whatsoever. Some States/Provinces do not permit the exclusion or limitation of incidental or consequential damages, so the above may not apply to you.

This warranty gives you specific legal rights which vary from state to state or province to province.

If you have questions or concerns regarding your Euroflex appliance, please contact Customer Service. Please **do not return any product without contacting Euroflex for return authorization.** Unauthorized returns, as well as C.O.D. shipments, will be refused.

*Important: After receiving return authorization, carefully pack item to avoid damage in shipping. Be sure to include your name, complete address and phone number with note giving purchase information, model number and what you believe is the problem with item. We recommend you insure the package (as damage in shipping is not covered by your warranty). Mark the outside of your package "ATTENTION CUSTOMER SERVICE".

We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

For Authentic Monster Replacement Parts, call 888.896.8786

You can register your product online at: **www.euroflexusa.com**



euroflex[®] EUROFLEX AMERICAS
CUSTOMER SERVICE • 888.896.8786

H056 QVC 08/07/13

EFLX-055AA