

Please make sure to read the enclosed Shark® Owner's Guide prior to using your unit.

Shark

ROTATOR®

FREESTYLE PRO

Cordless Vacuum



QUICK START GUIDE

Use this Quick Start Guide to learn about your new vacuum's great features.

Join The Clean Evolution.™

When it comes to cleaning, we're not afraid to get our hands dirty. At Shark®, we're constantly working to evolve and innovate products to meet the needs of people like you. Because our job is to make 5-star-worthy products that make your life a whole lot easier.

Shark

For questions or to register your product, contact us at
800-798-7398 or visit us online at sharkclean.com



@sharkcleaning


SV1112_170428

©2017 SharkNinja Operating LLC. SHARK is a registered trademark of SharkNinja Operating LLC. ROTATOR and SHARK are trademarks of SharkNinja Operating LLC.


SV1112

WHAT'S INSIDE:

- A** Handle
- B** Main Body
- C** Motorized Floor Nozzle
- D** Screw
- E** Charging Adapter
- F** Precision Charger Base

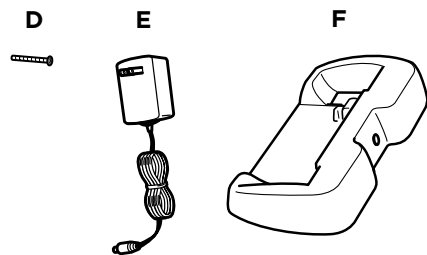


ASSEMBLY

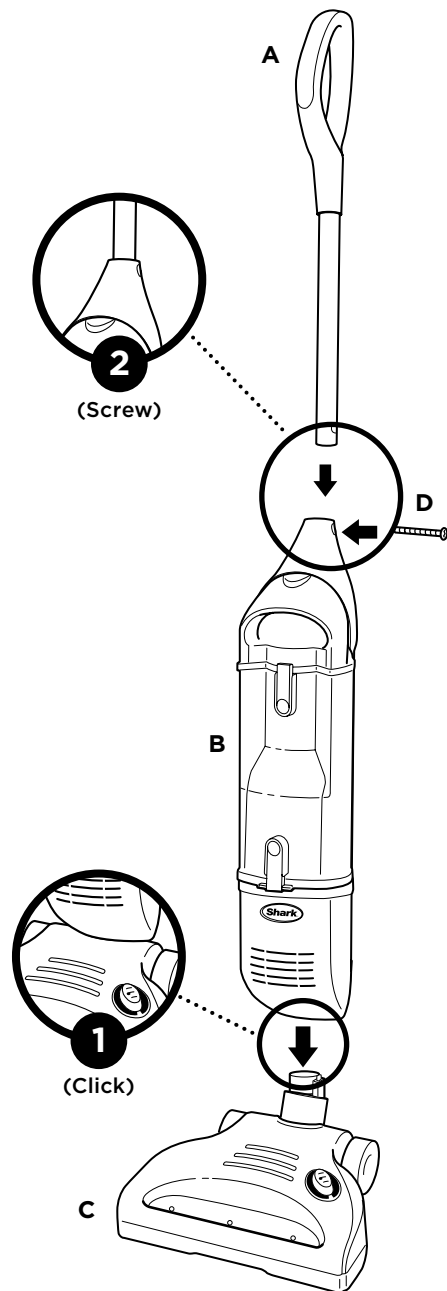

HOW TO CHARGE

Insert the charging adapter plug by aligning the arrows on the plug and charging jack. Push in until it clicks into place.

Place vacuum on precision charger base.

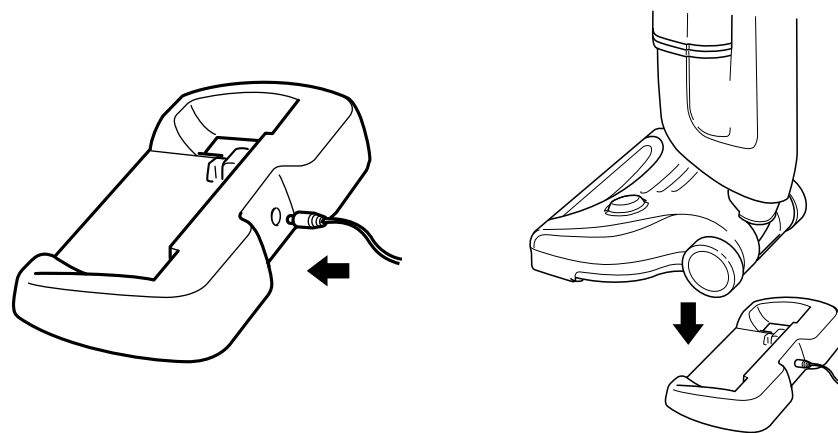


CLEANING

Press the power button once to turn on the carpet setting.


The brushroll will spin quickly in this mode to get deep carpet cleaning.

Press the power button a second time to turn on the bare floor setting. The brushroll will spin slowly in this setting to vacuum the surface litter on carpet and bare floors.


Press the power button a third time to turn off the vacuum.

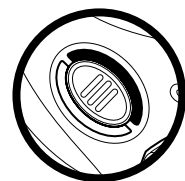

Carpet

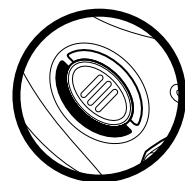


Bare Floor

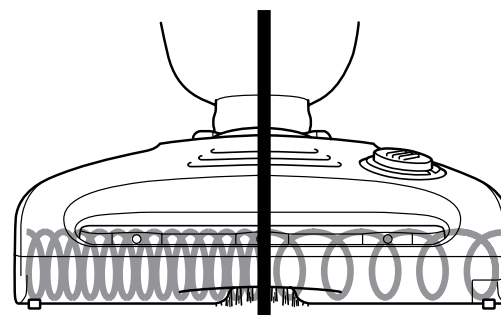

EMPTYING THE DUSTCUP

Press down on the dust cup release button and lift dust cup out.

Hold dust cup over a trash bin and press the dust cup empty latch.

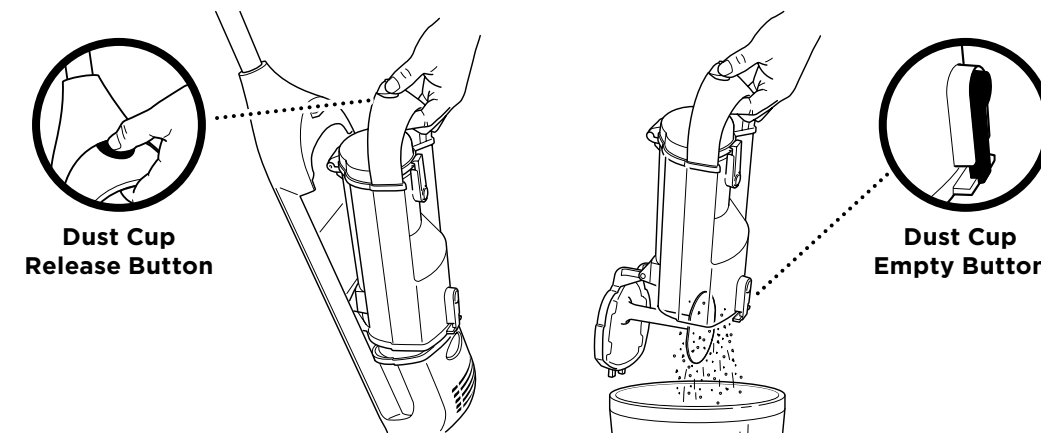

TROUBLESHOOTING

WARNING: To reduce the risk of shock and unintended operation, turn power off and unplug unit before servicing.

Vacuum is not picking up debris. No suction or light suction.

Empty dust cup, clean filters, check all openings for blockages.

Vacuum will not operate.

Charge the vacuum until half of the oval flashes, indicating full charge. Check for blockages.

Charging indicator does not illuminate.

Make sure there is no debris on the metal charge contacts on the floor nozzle or charging adapter, then make sure the charging adapter is properly plugged into the outlet and charging jack.

TIP:

Wash filters every 3 months to keep the suction strong.

Rinse filters and allow to air-dry completely. Tap loose dirt from foam filters as needed between washes.