 


WHAT'S INSIDE:







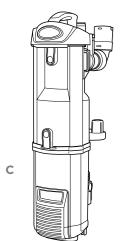

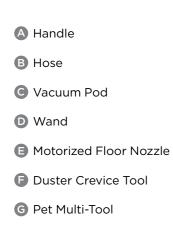

- Pet Power Brush
- Under Appliance Wand
- 18" Flexi Crevice Tool
- K Multi-Angle Dusting Brush

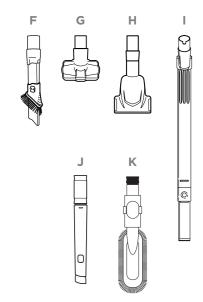

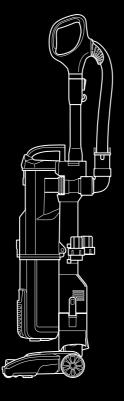

Shark.

For questions or to register your product, contact us at 1-800-798-7398 or visit us online at sharkclean.com




©2017 SharkNinja Operating LLC. SHARK is a registered trademark of SharkNinja Operating LLC. DUOCLEAN and JOIN THE CLEAN EVOLUTION are trademarks of SharkNinja Operating LLC.

For additional parts and accessories, visit sharkaccessories.com




(Click)

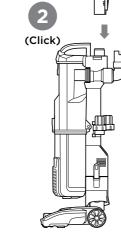


ASSEMBLY

Place pod onto motorized floor nozzle.

Insert wand into top of pod.

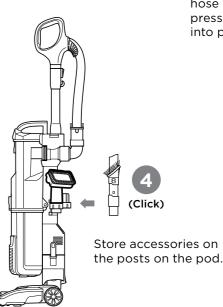

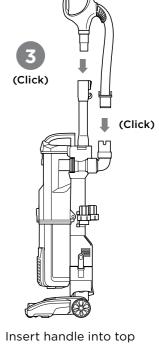


of wand, then connect hose to back of pod, pressing until it clicks into place.

Join The Clean **Evolution**.^{**}

 When it comes to cleaning, we're not afraid to get our hands dirty. At Shark[®], we're constantly working to evolve and innovate products to meet the needs of people like you. Because our job is to make 5-star-worthy products that make your life a whole lot easier.





HAVING **TROUBLE?**

ISSUE

Vacuum is not picking up debris. No suction or light suction.

Solution

Empty dust cup, clean filters, check all openings for blockages.

ISSUE

Vacuum lifts area rugs.

Solution


Turn off the unit to disengage the brushroll, then restart by pushing the Power button.

ISSUE

Brushroll and/or Soft Roller does not spin. The Brushroll Indicator Light on the floor nozzle turns red.


Solution

Turn off and unplug the vacuum immediately. Remove any blockages, then reconnect and turn vacuum back on. If Brushroll Indicator Light on the floor nozzle is green, the blockage has been successfully cleared. If the light is still red, please contact customer service at 1-800-798-7398.

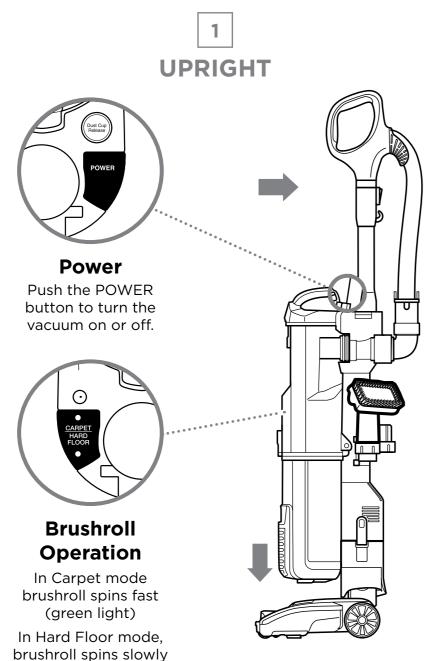

(no light)

2 WAYS TO CLEAN:

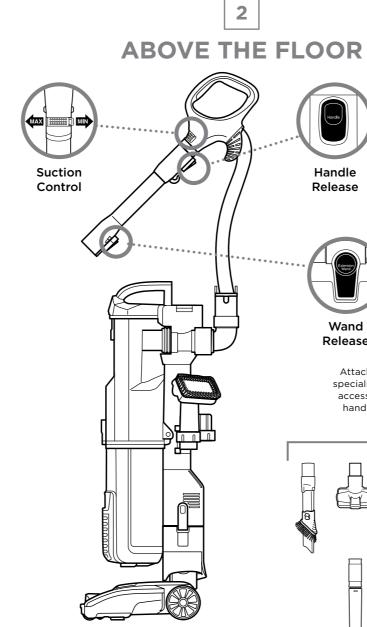

DUOCLEAN™ TECHNOLOGY

MAINTENANCE

Empty dust cup after each use







Handle Release



Wand Release

> Attach any of the specialized cleaning accessories to the handle or wand.

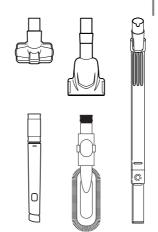


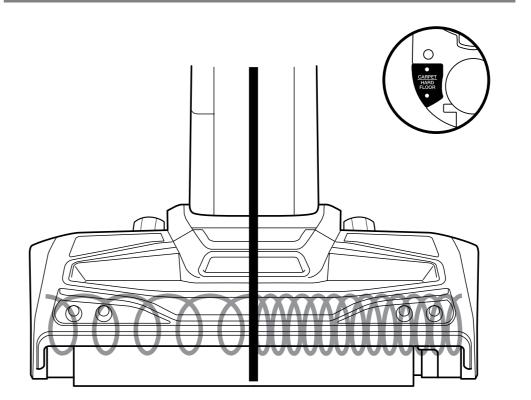

ON CARPETS*

The Soft Roller pulls in large particles, while the deep-cleaning bristle brush removes embedded fine dirt.


> Carpet Optimized brushroll speed for carpets.

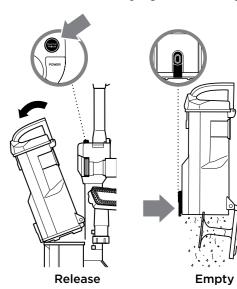

TIP:

every month to keep the suction strong

Maintaining the Soft Roller

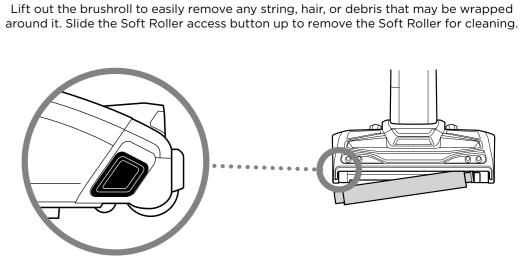

ON FLOORS

Direct engagement with the Soft Roller

removes large particles, small particles,

and stuck-on dust.

Hard Floor

Gentle on bare floors and delicate area rugs.

