

CARING FOR YOUR *Mia2*[™]

To keep your Mia 2 in optimum condition, care for it as follows: Do not use abrasive cleansers or chemicals to clean any part of Mia 2. Do not put any part of the Mia 2 in the dishwasher.

HANDLE

Once a week remove the brush head and wash the handle using warm soapy water to remove any residue buildup. The handle is sealed and fully waterproof. Never attempt to open the brush handle for any reason.

CHARGER

IMPORTANT: Unplug the charger, then wipe it with a soft, damp cloth. Do not immerse the charger in water.

BRUSH HEADS

We recommend that the Clarisonic brush head be replaced every 3 months as the bristles become fatigued and less effective over time. Once a week, remove the brush head from the handle and rinse with warm soapy water to remove any residue.

To remove the brush head, ① grip the brush head firmly, then push and twist it counter-clockwise (like a medicine cap). ② Pull the head away from the handle.

To attach the brush head, push down and twist the head clockwise until it snaps into place. Be sure you hear a tight snap.

TIP: Use the brush head cap to easily remove and attach the brush head with a simple twist.

