

CARE AND USE

BUTTERBALL® XXL

PREMIUM DIGITAL INDOOR ELECTRIC TURKEY FRYER

- 1 Masterbuilt recommends cleaning unit prior to use.
- 2 Disconnect electric cord from outlet, before cleaning, servicing and/or removing heating element. Electrical shock can result in personal injury or death.
- 3 Do not pour used oil in sink. Drain it back into oil containers.
- 4 Turn appliance off, unplug and let cool for 2 hours if using water, 5 hours if using oil before cleaning or storing.
- 5 Clean outer shell, cord, control panel and element with a damp cloth or sponge using a mild detergent. Dry thoroughly. NEVER put these parts in a dishwasher or submerge in water.
- 6 Clean lid, inner pot, valve spout, lifting hook and basket with a damp cloth or sponge using a mild detergent. Rinse and dry thoroughly.

Please refer to your manual for a complete list of warnings on all of our products.

WWW.MASTERBUILT.COM

