



*recipes
inside!*

#DMM100

RETRO MILKSHAKE MAKER

Instruction Manual | Recipe Guide





RETRO MILKSHAKE MAKER



Important Safeguards.....	4-9
Parts & Features.....	10
Using Your Retro Milkshake Maker	11-13
Tips & Tricks.....	14
Cleaning & Maintenance	15
Recipes.....	17-20
Customer Support.....	22
Warranty.....	23


the dash team!

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Please read this manual carefully before using the appliance.
- When using electrical appliances, basic safety precautions should be followed including:
 - Read all instructions.
 - Remove all bags and packaging from the appliance before use.
 - Make sure the appliance is cleaned thoroughly before using.
 - Never leave the appliance unattended when in use.
 - Do not use the appliance for other than its intended use.
 - For household use only. Do not use outdoors.
 - Close supervision is necessary when any appliance is used by or near children.
 - Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number
- 1-800-898-6970 for information on examination, repair, or adjustment.
- Never touch moving parts.
- Never operate appliance when empty.
- Never add ingredients while the appliance is operating.
- Never use hot ingredients.
- Keep hands and utensils out of container to reduce the risk of injury to persons or damage to the mixer.
- Never add to container while appliance is operating.
- Container must be properly in place before operating appliance.
- Do not touch surfaces that may be hot. Use handles or knobs provided.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 9AM-9PM EST Monday-Friday or by email at support@storebound.com.
- Do not place the appliance on or near a hot gas burner, hot electric burner, or in a heated oven.

IMPORTANT SAFEGUARDS

- Refrain from using attachments that are not recommended by the appliance manufacturer, as doing so can result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces or hang over the edges of tables or counters.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not a toy. Do not let children use this appliance. Close supervision is necessary when any kitchen appliance is used by or near children.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord. Permanently Installed - Make sure appliance is OFF when not in use, before putting on or taking off parts, and before cleaning. Remove plug from outlet when the appliance is not in use, before putting on or taking off parts, and before cleaning. Allow to cool before handling.
- Never use harsh, abrasive or caustic cleaners to clean this appliance.
- To protect against electrical shock do not immerse cord, plugs, portable appliances or Motor Base in water or other liquid.
- Do not place the Motor Base in a dishwasher.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or personal injury.
- Make sure that the voltage indicated on the appliance matches the local mains voltage. Always make sure that the plug is inserted into a grounded wall socket properly.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- The power supply cord is short to reduce risk from becoming entangled in or tripping over a longer cord. An

IMPORTANT SAFEGUARDS

extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as high as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

L'utilisation d'appareils électriques nécessite de prendre des mesures de sécurité de base, y compris:

- Lisez toutes les instructions.
- Retirez tous les sacs et emballages de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance lorsqu'il est utilisé.
- Assurez-vous que l'appareil est bien nettoyé avant de l'utiliser.
- Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
- N'utilisez pas l'appareil à d'autres fins que celles pour lesquelles il a été conçu.
- Pour usage domestique seulement.
- Ne pas utiliser à l'extérieur.
- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou près des enfants.
- Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.
- Ne faites pas fonctionner un appareil avec un cordon ou une fiche endommagé(e), après un dysfonctionnement de l'appareil, une chute ou un dommage quelconque. Contactez le fabricant au numéro de téléphone 1-800-898-6970 du service clientèle pour plus d'informations sur l'examen, la réparation ou le réglage.
- Ne touchez jamais les pièces en mouvement.
- N'utilisez jamais l'appareil lorsqu'il est vide.
- N'ajoutez jamais d'ingrédients lorsque l'appareil est en marche.
- Ne jamais utiliser d'ingrédients chauds.
- Pour un entretien autre que le nettoyage, veuillez contacter Storebound directement au 1-800-898-6970 de 9h à 21h HNE, du lundi au vendredi ou par courriel à support@storebound.com.
- Ne placez pas l'appareil sur ou près d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé.

IMPORTANT SAFEGUARDS

- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car cela pourrait provoquer un incendie, une électrocution ou des blessures.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre sur les bords des tables ou des comptoirs.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales réduites ou un manque d'expérience et de connaissances à moins d'être supervisé et instruit par une personne responsable de leur sécurité.
- Éteignez l'appareil, puis débranchez-le de la prise lorsqu'il n'est pas utilisé, avant d'assembler ou de désassembler des pièces et avant de le nettoyer. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation. Installé en permanence - Assurez-vous que l'appareil est éteint lorsqu'il n'est pas utilisé, avant d'ajouter ou de retirer des pièces et avant de le nettoyer.
- Débranchez la prise lorsque vous n'utilisez pas l'appareil, avant d'ajouter ou de retirer des pièces et avant de le nettoyer. Laisser refroidir avant de manipuler.
- N'utilisez jamais de nettoyeurs puissants, abrasifs ou corrosifs pour nettoyer cet appareil.
- Pour vous protéger contre les chocs électriques, n'immergez pas le cordon, les fiches, les appareils portables ou le socle de moteur dans l'eau ou tout autre liquide.
- Ne placez pas le Moteur de Base dans une lave-vaisselle.
- StoreBound décline toute responsabilité pour les dommages causés par une mauvaise utilisation de l'appareil.
- Une mauvaise utilisation de l'appareil peut entraîner des dommages matériels ou même des blessures.
- Assurez-vous que la tension indiquée sur l'appareil correspond à la tension secteur locale. Assurez-vous toujours que la fiche est correctement insérée dans une prise murale mise à la terre.
- Cet appareil a une fiche polarisée (une lame est plus large que l'autre). Pour réduire le risque d'électrocution, cette fiche ne peut être insérée dans une prise polarisée que d'une seule façon. Si la fiche ne rentre pas complètement dans la prise, inversez la prise. Si cela ne vous convient toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.

- Un cordon d'alimentation court doit être fourni pour réduire le risque de s'emmêler ou de trébucher sur un cordon plus long. Une rallonge peut être utilisée si des précautions sont prises lors de son utilisation. Si une rallonge est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins égale à la puissance nominale de l'appareil. La rallonge doit être disposée de manière à ne pas tomber sur le comptoir ou la table de travail, où elle pourrait être tirée par des enfants ou trébucher involontairement.
- Gardez les mains et les ustensiles à l'écart du récipient afin de réduire les risques de blessures corporelles ou de détérioration du mixeur.
- Ne jamais ajouter au récipient lorsque l'appareil est en marche.
- Le conteneur doit être correctement en place avant d'utiliser l'appareil.
- Ne touchez pas les surfaces pouvant être chaudes. Utilisez les poignées ou les boutons fournis.

GARANTIES IMPORTANTES:
VEUILLEZ LIRE ET CONSERVER CE
MODE D'EMPLOI ET D'ENTRETIEN

PARTS & FEATURE



USING YOUR RETRO MILKSHAKE MAKER

BEFORE USING YOUR MILKSHAKE MAKER

- Remove all packaging materials.
- Check that the Milkshake Maker has no visible damage and that no parts are missing.
- Before using the appliance for the first time or before using it after prolonged storage, wash and dry the appliance along with any accompanying accessories. See “Cleaning & Maintenance” for instructions.
- Please do not remove the Mixing Wand.



USING YOUR RETRO MILKSHAKE MAKER



- 1** Place the appliance on a stable, flat, heat-resistant surface (**photo A**). Plug the Milkshake Maker into a wall socket.
- 2** Prepare your ingredients and add them to the Milkshake Cup (**photo B**).

USING YOUR RETRO MILKSHAKE MAKER



- 3** Slide the lip of the Milkshake Cup into the Cup Support and rest the bottom of the Milkshake Cup on the Cup Rest **(photo C)**.
- 4** Once the Milkshake Cup is securely and properly placed onto the Cup Rest, turn the Milkshake Maker on to the "Pulse" setting by pressing the On/Off/Pulse Switch up into the "II" position. Hold this button down for approximately 10-15 seconds. Then run the Milkshake Maker on the "I" setting for approximately 30-45 seconds **(photo D)**. Do not run the Milkshake Maker for more than 3 minutes at a time.

TIPS & TRICKS

If you wish to add fruits to your milkshake, blend the fruits before you put them into the Milkshake Cup. This will help achieve a creamier result.

The more wet ingredients you add, the creamier your milkshake will be. Dry and frozen ingredients produce a thicker milkshake.

The longer you run the Milkshake Maker, the creamier your milkshake will be. Do not run your Milkshake Maker for more than 3 minutes at a time.

For best results, place wet ingredients in the Milkshake Cup before dry ingredients.

If using ice, use crushed ice only. Whole ice cubes may damage the appliance.

Only use the Milkshake Cup provided with the Milkshake Maker.

Softer ingredients give better results.

For the frothiest milkshakes, use well-chilled milk.

CLEANING & MAINTENANCE

Remove the plug from the wall socket.

Clean the appliance after every use.

Do not clean the appliance or the Milkshake Cup with metal kitchen utensils or abrasive cleaning materials as this may damage the appliance.

Wipe the outside of the appliance with a moist cloth.

Clean the inside of the Milkshake Cup with hot water and a non-abrasive sponge.

Any other servicing should be performed by an authorized representative.

Wipe down the Mixing Wand with a moist cloth or a non-abrasive sponge.

CAUTION: The Mixing Wand is not removable.



RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals

RECIPES

The chart on the opposite page is a guide to help you create tons of tasty milkshake flavors. Keep in mind that more solid ingredients need to be blended before being added to the Milkshake Maker and slightly adjusting the ratio of ice cream to milk will make for a creamier or thicker milkshake.

These recipes are guidelines. The temperature of your ice cream, or milk will produce slightly different consistencies. Try adjusting the ratio of ice cream to milk to achieve a creamier or thicker milkshake.

For the following recipes, add your ice cream to the Milkshake Cup, then the milk and extra ingredients. Pulse in the Milkshake Maker for 10-15 seconds on setting "II" then mix for another 30-45 seconds on setting "I". Once mixed, pour your shake into a glass and top with toppings.

Flavor	Ice Cream	Milk	Extra Ingredients	Fun Toppings & Special Instructions
Classic Vanilla	1½ cup Vanilla	1 cup	n/a	Whipped cream, cherries
Chocolatey Goodness	1½ cup Chocolate	1 cup	n/a	Whipped cream, chocolate sauce
Peanut Butter and Banana	1½ cup Vanilla	1 cup	1 blended banana, 1 cup peanut butter	Whipped cream, chocolate sprinkles
Sweet Strawberry	1½ cup Vanilla	1 cup	Handful of strawberries, blended	Whipped cream, mint
PB+J	1½ cup Vanilla	1 cup	2 tbsp peanut butter, 2 tbsp grape jelly	Whipped cream, crushed peanuts
Black & White	1½ cup Vanilla	1 cup	1 tbsp malt powder, hot fudge	Another scoop of ice cream ** Coat your glass with hot fudge before pouring milkshake. Top milkshake with scoop of ice cream and more hot fudge.

RECIPES

Flavor	Ice Cream	Milk	Extra Ingredients	Fun Toppings & Special Instructions
Chocolate egg cream	none	½ cup	½ cup of seltzer, chocolate syrup	** Pour seltzer first and let fizz. Use caution while mixing to not overfizz.
S'mores	1½ cup Chocolate	1 cup	Handful of marshmallows, softened	** Toast marshmallows until browned then add to milkshake mixture. Top with whipped cream and Graham crackers.
Boozy banana	1½ cup Vanilla	1 cup	1 blended banana, 2 oz. rum	Whipped cream
Irish Cream Shake	1½ cup Chocolate	1 cup	2 oz. Irish cream	Whipped cream



CUSTOMER SUPPORT

**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below.
Contact us at **1 (800) 898-6970** or support@bydash.com



Hey **Hawaii!** You can reach our customer service team from **3AM to 3PM**.
And also, **Alaska**, feel free to reach out from **5AM to 5PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Retro Milkshake Maker is an electrical appliance.

Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz

Power Rating 100W

Stock#: DMM100_20220728_v8



1-800-898-6970 | @bydash | bydash.com