

Frequently Asked Questions

1. Can I prepare foods other than fried dishes with my Power AirFryer XL Pro™ ?

You can prepare a variety of dishes including steaks, chops, burgers, and baked goods. See the **Power AirFryer XL Pro™ Recipe Guide**.

2. Is the Power AirFryer XL Pro™ good for making or reheating soups and sauces?

Never cook or reheat liquids in the **Power AirFryer XL Pro™** .

3. Is it possible to shut off the Unit at any time?

Press the **Power Button** once or remove the **Outer Basket**. **CAUTION:** When removing the **Outer Basket**, do not move **Sliding Button Guard** forward until the **Fry Basket** and **Outer Basket** are resting on a level, heat-resistant surface.

4. What do I do if the Unit shuts down while cooking?

As a safety feature, the **Power AirFryer XL Pro™** has an **Auto Shut-Off** device that prevents damage from overheating. Remove the **Outer Basket** and set it on a heat-resistant surface. Allow the **Unit** to cool down. Remove the power cord from the outlet. Restart with the **Power Button**.

5. Does the Unit need time to heat up?

If you are cooking from a “cold start,” add 3 minutes to the cook time to compensate.

6. Can I check the food during the cooking process?

You can remove the **Outer Basket** at any time while cooking is in progress. During this time, you can “shake” the contents in the **Fry Basket** if needed to ensure even cooking.

7. Is the Power AirFryer XL Pro™ dishwasher safe?

The **Fry Basket** and **Outer Basket**, as well as the **Cake Pan, Rack** and 4 **Skewer** accessories are dishwasher safe. The **Unit** itself containing the heating coil and electronics should never be submersed in liquid of any kind or cleaned with anything more than a hot, moist cloth or nonabrasive sponge with a small amount of mild detergent.

8. What happens if the Unit still does not work after I have tried all the troubleshooting suggestions?

Never attempt a home repair. Contact the manufacturer and follow the procedures set forth by the warranty. Failure to do so could render your warranty null and void.

9. What is the purpose of the Sliding Button Guard?

The **Sliding Button Guard** helps to ensure you do not press the **Basket Release Button** accidentally. Pressing the **Basket Release Button** causes the **Outer Basket** to separate from the **Fry Basket** and may result in injury if not done on a level, heat-resistant surface.

Information provided by Cheer Master Trading Ltd.