

Cleaning & Storage

Clean the **Power AirFryer XL Pro™** after each use. The **Outer Basket**, **Fry Basket** and **Cake Pan** accessory are coated with a special non-stick surface. Never use abrasive cleaning materials or metal kitchen utensils on these surfaces.

1. Remove the power cord from the wall socket and be certain the appliance is thoroughly cooled before cleaning.

Note: Separating the **Outer Basket** from the **Fry Basket** will allow them to cool quicker.

CAUTION: Do not move **Sliding Button Guard** forward until **Fry Basket** and **Outer Basket** are resting on a level, heat-resistant surface. **Outer Basket** will separate from the **Fry Basket** and may cause injury.

2. Wipe the outside of the appliance with a warm, moist cloth and mild detergent.
3. Clean the **Outer Basket**, **Fry Basket** and accessories with hot water, a mild detergent, and a nonabrasive sponge.

Note: The **Fry Basket** and **Outer Basket**, as well as the **Cake Pan**, **Rack** and 4 **Skewer** accessories are dishwasher safe.

Tip: Should **Outer Basket** and **Fry Basket** contain difficult to remove food particles, leave the **Fry Basket** and **Outer Basket** assembled, fill with hot, soapy water, and soak for 10 minutes.

4. Clean the inside of the appliance with hot water, a mild detergent, and a nonabrasive sponge.
5. If necessary, remove unwanted food residue from the heating element with a cleaning brush.

Storage

1. Unplug the appliance and let it cool down thoroughly.
2. Make sure all components are clean and dry.
3. Place the appliance in a clean, dry place.

Environment

Dispose of all unwanted appliances according to local environmental regulations.

Preserve the planet.

