


Please make sure to read the enclosed Ninja Owner's Guide prior to using your unit.

NINJA


BLENDER 1200

QUICK ASSEMBLY

BLENDER PITCHER

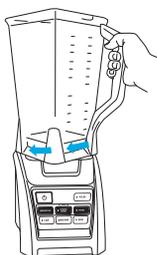

1. Place pitcher on base and turn clockwise to lock in place.

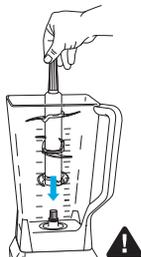


2. Holding the stacked blade assembly by the top of the shaft, insert it into the pitcher.



3. Align arrows on lid and handle, then lower handle to lock in place.

QUICK TIP

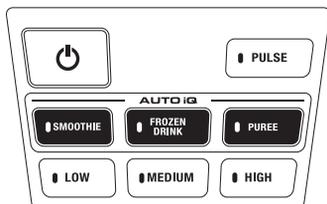

Auto-iQ™ Technology: features intelligent programs that combine unique timed pulsing, blending, and pausing patterns with auto shutoff feature that do the work for you.

Smoothie: 50 Seconds

Frozen Drink: 70 Seconds

Puree: 60 Seconds



WARNING: Stacked Blade Assembly is sharp and not locked in place. Make sure lid is locked onto pitcher before pouring. If pouring without lid, carefully remove blade assembly first. Failure to do so will result in a risk of laceration. Refer to the Ninja Owner's Guide for additional information.

CLEANING

Dishwasher: Containers, lids, and blade assemblies are all top-rack dishwasher safe. Ensure the blade assembly is removed from the container before placing in the dishwasher.

Hand-washing: Wash containers, lids, and blade assemblies in warm, soapy water. When washing the blade assemblies, use a dishwashing utensil with a handle to avoid direct hand contact with blades. Handle blade assemblies with care to avoid contact with sharp edges. Rinse and air-dry thoroughly.



WARNING: Handle the blade assemblies with care when washing, as the blades are sharp. Contact with the blades' edges can result in laceration.

QUESTIONS? We're here to help. Call **1-877-646-5288** or visit **ninjakitchen.com**