

USE & CARE

Enjoy Lock & Lock and be sure to review "Use & Care" instructions to ensure full enjoyment of product and proper usage.

General

- Wash before use.

Washing instructions:

- Top rack dishwasher safe.
- Do not use abrasive cleaners and scrubbers.
- Silicone seal can be removed for cleaning if necessary.
Do not use a sharp object to remove.

Microwave use:

- Unlock all four latches and loosen lid before use in microwave.
- The container base and lid are microwave safe for reheating purposes only.
- Do not use lid or base in oven, under browning elements or on stove top.
- Avoid overheating food high in oil, fat, sugar, or Tomato content to prevent permanent stains, pitting or other dangers associated with high temperature.