



Cook's Essentials®

AUTOMATIC SMOOTH EDGE CAN OPENER W/AUTO STOP

- Easily opens cans with the touch of a button
- Innovative Auto-Stop technology automatically stops when done
- Automatically cuts around the side of the can, leaving no sharp edges
- Built-in magnet for easy lid lifting
- Requires no strenuous squeezing or turning



1. Blade
2. Metal gear
3. Battery compartment
4. ON/OFF switch
5. Magnet

STEP 1:



Remove battery cover by pulling tab and lifting cover.
Insert 4 AA batteries in the correct poles as indicated, place cover on top of batteries and push down until tab clicks into place

STEP 2:



Place the opener on top of can so that edge of can is in between blade and metal gear.

STEP 3:



Press the switch and turn it on. Opener will automatically rotate and open can. Once can is completely open, can opener will automatically stop and back off the edge of the can.

STEP 4:



Lift opener up and away from lid. Use magnet in center of opener to pick up lid.

Note:

- Will not work on dented or bent edge cans
- Not recommended for commercial size cans

Cleaning:

Your opener can be cleaned with a damp towel. Do not submerge or clean under running water. Do not wash in dishwasher

Warning:

- Read all instructions carefully before use
- Keep out of reach of children
- Use AA alkaline batteries only
- **Battery disposal:**
Never dispose of batteries in fire because they could explode. Small quantities may be safely and legally (except in California) placed in your trash can.
If you have large numbers of alkaline batteries (say dozens or hundreds or more) to dispose at once contact your trash disposal company or municipal waste disposal department for instructions.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadium) batteries. (product operates by at least 2 batteries).
- Failure to insert batteries in the correct polarity, as indicated in battery compartment, may result in failure or battery leakage
- Do not dispose of batteries in fire
- Remove batteries when not in use for an extended period of time

Trouble Shooting:

Can opener will not operate	Check battery compartment is securely fastened. Replace batteries if needed.
Can opener operates slowly and/or motor is struggling	Replace batteries.
Can opener stops but does not back off can	Try restarting can opener. Remove battery cover and replace with new batteries. Restart the can opener. Do not forcefully remove from can.
Lid does not lift off	It may be necessary to lift lid manually instead of using magnet.
Opener failed to open can	Check to see opener is correctly positioned on can. Check can for dents or bent edges. If can is okay and opener is positioned correctly, restart opener.

MADE IN CHINA