

# Quick Start Guide\*

## Round Basket

\*See owner's manual for complete assembly and operating instructions and important safety information before using this product.

### STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Power AirFryer Pro Elite.

### STEP 2



Put food into the Round Basket and place inside the Unit.

### STEP 3



Select one of the one-touch cooking presets to begin cooking cycle. If setting manually, select time and temperature, then press the Power/Start-Stop Button.

### STEP 4



Remove the Round Basket from the Power AirFryer Pro Elite using the Fetch Tool and oven mitts and enjoy! Let Unit run after time has expired to cool off. Unit will automatically shut down.

Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).

# Quick Start Guide\*

## Crisper Trays

\*See owner's manual for complete assembly and operating instructions and important safety information before using this product.

### STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Power AirFryer Pro Elite.

### STEP 2



Arrange food on Crisper Trays and place inside the Unit.

### STEP 3



Select one of the one-touch cooking presets to begin cooking cycle. If setting manually, select time and temperature, then press the Power/Start-Stop Button.

### STEP 4



Remove the Crisper Trays from the Power AirFryer Pro Elite wearing oven mitts and enjoy! Let Unit run after time has expired to cool off. Unit will automatically shut down.

Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).

# Quick Start Guide\*

## Rotisserie Spit

\*See owner's manual for complete assembly and operating instructions and important safety information before using this product.

### STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Power AirFryer Pro Elite.

### STEP 2



Carefully poke Rotisserie Shaft through food and place inside the Unit. For detailed instructions, please see the owner's manual.

### STEP 3



Select one of the one-touch cooking presets to begin cooking cycle. If setting manually, select time and temperature, then press the Power/Start-Stop Button.

### STEP 4



Remove the Rotisserie from the Power AirFryer Pro Elite using the Fetch Tool and oven mitts and enjoy! Let Unit run after time has expired to cool off. Unit will automatically shut down.

Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).

# Quick Start Guide\*

## Rotisserie Spit & Skewers

\*See owner's manual for complete assembly and operating instructions and important safety information before using this product.

### STEP 1



Make sure the Drip Tray is in place. Press the Power/Start-Stop Button to turn on the Power AirFryer Pro Elite.

### STEP 2



Carefully poke Skewers through food and insert them into the Skewer Racks making sure they're evenly spaced. For detailed instructions, please see the owner's manual. Place assembled Rotisserie Spit inside the Unit.

### STEP 3



Select one of the one-touch cooking presets to begin cooking cycle. If setting manually, select time and temperature, then press the Power/Start-Stop Button.

### STEP 4



Remove the Rotisserie Spit from the Power AirFryer Pro Elite using the Fetch Tool and oven mitts and enjoy! Let Unit run after time has expired to cool off. Unit will automatically shut down.

Unpack all parts from the box and remove any clear or blue protective film on the components. Wash with warm soapy water before first use (only select accessories are dishwasher safe).