

Use & Care Instructions

Enjoy Lock & Lock and please review Use & Care instructions to ensure full enjoyment of your product and proper usage.

Cleaning

- Wash before use.
- Dishwasher safe glass container.
- Top rack dishwasher safe plastic lid.
- If washing by hand use lukewarm water with a soft towel.
- Do not use abrasive cleaners or scrubbers.
- Silicone seal in plastic lid can be removed for cleaning if necessary. Do not use a sharp object to remove.

General

- The glass is durable however it can crack or break on impact.
- Use care when using utensils as glass can crack or break on impact.
- Do not nest the container as it could damage the glass. Please keep the lid on when storing.

Freezer Usage

- Allow room for expansion when freezing liquid items like soup, stock, sauce, juice, etc. as expansion could cause damage to glass container.
- Please keep some space between food and wall of container when storing.

Oven Usage

- Remove plastic lid when using in oven.
- Glass container is oven safe to 750 Degree F (400 Degree C).
- Do not overheat empty container in oven for a long period of time.
- Do not put in direct contact with open flame.
- Use oven mitt when removing glass container from oven as the surface can be very hot.
- Do not clean the container with wet towels or place on a wet surface when the glass is heated as a sudden change in temperature could damage the glass.

Lid Usage

- Unlock all four latches and loosen lid when using in Microwave.
- The lid is microwave safe for the reheating purpose only.