



K49326

# IMMERSION BLENDER



To my fellow home chefs,

I am incredibly excited to bring new kitchen innovations to your home. With my Pro For Home collection, we have created high quality products that will deliver pro chef results that are sure to impress.

Included with your purchase are a few recipes that I use at home and in my restaurants. I hope you enjoy them as much as I do.

Cheers,

For more recipes, cooking tips and products follow me @geoffreyzakarian and visit [geoffreyzakarian.com](http://geoffreyzakarian.com).



# CONTENTS

Important Safeguards .....	4-5
Parts & Features .....	6-7
Using Your Immersion Blender.....	8-11
Removing Mashing Attachment Blades.....	12
Cleaning & Maintenance. ....	13
Customer Support .....	14
Warranty .....	15

## IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all packaging and labels from appliance prior to use.
- Make sure appliance is cleaned thoroughly before using.
- Never leave appliance unattended when in use.
- Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
- Make sure that appliance is installed out of reach from children.
- Close supervision is necessary when any appliance is used by or near children.
- Always make sure that the Blending, Whisking, or Mashing Attachment is locked securely in place before engaging the motor. Do not remove the Blending, Whisking or Mashing Attachment before the blender is finished operating.
- Do not place your fingers or other objects into the appliance while it is operating. If food becomes lodged in the blades, turn off and unplug the appliance before trying to dislodge the ingredients.
- Keep hands and utensils away from the moving blades while the appliance is engaged to reduce the risk of severe injury or property damage.
- Wait until the blades come to a complete stop before removing the Blending, Whisking or Mashing Attachments to prevent the drive gear from becoming damaged.
- Make sure that the appliance is turned off after each use. Make sure that the motor stops completely before disassembling.
- When cleaning, do not submerge the Motor Base (with electrical parts) in any liquid; instead use a soft wet cloth to wipe it down. The Immersion Blender Motor Base is NOT dishwasher safe.
- **CAUTION:** Blades are sharp and can cause injury! Handle and clean with care. Wash using a brush or gloves. Do not touch the blades in the base of the Blending Attachment.
- Store appliance in a dry place.
- Do not operate this appliance with an external timer. When blending thick or tough ingredients for a prolonged period of time, the temperature monitoring system may shut down the motor to prevent overheating. If this happens, unplug the blender and place the Motor Base in a well-ventilated area, allowing it to cool down for 45 minutes. Try removing some of the ingredients before continuing to blend.
- When using the Immersion Blender, keep the blending time below 2 minutes to prevent the motor from overloading or overheating.

- If the motor stops abruptly, allow the motor temperature to decrease before continuing to blend.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
  - For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM–7PM PT Monday–Friday or by email at [support@storebound.com](mailto:support@storebound.com).
  - Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
  - Refrain from using attachments that are not recommended by the appliance manufacturer, as this can result in fire, electric shock, or personal injury.
  - Do not let the cord touch hot surfaces or hang over the edge of a table or counter.
  - Do not operate the appliance for more than 10 minutes at a time.
  - This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction

- concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, and storing and when not in use.
  - StoreBound shall not accept liability for damages caused by improper use of the appliance.
  - Improper use of the appliance can result in property damage or personal injury.
  - This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
  - The power supply cord is short to reduce risk from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

## IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

## PARTS & FEATURES



Storage Hook

Speed Adjuster

Turbo Button

Power Button

Motor Base

## PARTS & FEATURES



Whisking Attachment




Blending Attachment



Mashing Attachment



Whisking Attachment Screw

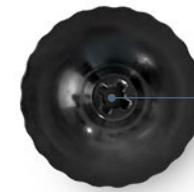

Whisking Attachment Lock

## USING YOUR IMMERSION BLENDER

### Before using your Immersion Blender

Read the entire instruction manual and save it for further use.

Use a wet cloth to wipe down the Motor Base.

Wash the Blending, Whisking, and Mashing Attachments with hot, soapy water.

Use a dish brush to clean the blades. Do not use your hands.

**WARNING:** do not submerge the Motor Base in water or other liquids.

ATTACHMENT/SETTING	FUNCTION
Blending Attachment	The Blending Attachment is used for normal blending. You can blend soups in a mixing bowl, or smoothies in a mason jar.
Whisking Attachment	The Whisking Attachment is used for whipping, beating eggs, or mixing batter.
Mashing Attachment	The Mashing Attachment is perfect for mashing potatoes or smoothing out dips like guacamole.
Turbo	To use the Turbo Setting you must hold down the Turbo Button. This will give you a little extra power. You can also use this as a "Pulse" setting.



## USING YOUR IMMERSION BLENDER



Attach the appropriate attachment and make sure it clicks into place. **(Photo A)**

Plug the cord into an electrical outlet.

Place ingredients in a mixing bowl or other container. Do not use the Immersion Blender on or in non-stick cookware as it may damage the non-stick coating.



Set your desired speed on the Speed Adjuster. **(Photo B)**



Place the Blending, Whisking, or Mashing Attachment into the bowl with the ingredients. **(Photo C)**

## USING YOUR IMMERSION BLENDER



Press and hold the Power Button to turn on the Immersion Blender. You will need to hold the Power Button down for the duration of your blending. Make sure to use a firm grip, so as to not drop the blender when in use. **(Photo D)**

## REMOVING MASHING ATTACHMENT BLADES



You can remove the blade on the Mashing Attachment to make cleaning easier. To do so, place the Mashing Attachment Lock over the top of the Mashing Attachment. **(Photo A)**



Then use the Mashing Attachment Screw to unscrew the blade. **(Photo B)** Use extreme caution with the blade as it is sharp.

**Important:** Do not submerge the motor base in water or other liquids.

## CLEANING & MAINTENANCE

Before cleaning or moving the appliance, make sure to unplug the Immersion Blender.

Remove the Blending, Whisking, or Mashing Attachment from the Motor Base.

The Blending, Whisking, and Mashing Attachments are dishwasher safe. The Motor Base is not dishwasher safe.

If you prefer, you can wash the Blending, Whisking, and Mashing Attachments in the sink with hot, soapy water, using a brush to clean the blade.

Dry the Blending, Whisking, and Mashing Attachments thoroughly.

Wipe down the Motor Base with a damp cloth.

## DREAM TEAM IN YOUR KITCHEN

Chef Geoffrey Zakarian has teamed up with Dash, a leading manufacturer of cookware and kitchen tools, to bring you high-quality professional grade products specifically designed for home use. This collection provides a combination of innovation, craftsmanship and culinary expertise that will elevate your cooking endeavors.

We welcome and value all concerns and questions from our customers. Please do not hesitate to contact us for product support, warranty, and maintenance related questions directly at: 1-800-898-6970 from 7AM-7PM PST, Monday-Friday, or by email at [zakarian@bydash.com](mailto:zakarian@bydash.com).

Power Rating: 120V ~ 60Hz

Wattage: 330W

**REPAIRS: DANGER!** Risk of electric shock! The Zakarian Immersion Blender is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the device.

### DASH - 1 YEAR LIMITED WARRANTY

Your Zakarian by Dash product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, Dash will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. Dash will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [zakarian@bydash.com](mailto:zakarian@bydash.com).

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. DASH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Made in China



1-800-898-6970 | [zakarian@bydash.com](mailto:zakarian@bydash.com)