



WINE OPENER



To my fellow home chefs,

I am incredibly excited to bring new kitchen innovations to your home. With my Pro For Home collection, we have created high quality products that will deliver pro chef results that are sure to impress.

Included with your purchase are a few recipes that I use at home and in my restaurants. I hope you enjoy them as much as I do.

Cheers,

For more recipes, cooking tips and products follow me  
[@geoffreyzakarian and visit \[geoffreyzakarian.com\]\(http://geoffreyzakarian.com\)](https://www.instagram.com/geoffreyzakarian)



## CONTENTS

Important Safeguards .....	4
Parts & Features .....	6
Using Your Wine Opener.....	7
Cleaning & Maintenance.....	8
About Your Wine Opener Batteries .....	10
Customer Support & Warranty.....	11

## IMPORTANT SAFEGUARDS

# IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Using a charger other than the one provided may result in damage to the appliance unless it meets the correct specifications (see page 8 of this manual).
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM-7PM PT Monday-Friday or by email at [support@storebound.com](mailto:support@storebound.com).
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- **WARNING:** Corkscrew is sharp. Keep fingers away from moving parts. Do not insert fingers into the Main Body.





Foil Cutter



Charging Cord

**NOTE:** Before first use, fully charge the Wine Opener. The Wine Opener should charge for eight hours when using for the first time. After the first time, the Wine Opener should fully charge after two and a half hours

1. Hold the wine bottle tightly on a stable surface. If necessary, use the Foil Cutter to remove the foil from the top of the wine bottle. When using the Foil Cutter, ensure that the metal blades on the cutter are secured around the foil wrapper, then rotate the cutter 90° to remove the foil.
2. Secure the Corkscrew on the cork of your wine bottle. Make sure the wine bottle is resting on a table or other flat, stable surface. Press the Lower Button on the Main Body of the appliance and allow the Corkscrew to remove the cork. A blue light will turn on indicating it is working. **There is no need to apply any additional pressure, as the appliance will automatically remove the cork.** When the cork is completely inside the Main Body of the appliance, stop pressing the Lower Button on the Main Body.
3. Press the Upper Button on the Main Body to reverse the Corkscrew and remove the cork (a red light will turn on indicating it is working). The Corkscrew will begin to reverse itself, raising the cork out of the Main Body.
4. Stop pressing the Upper Button, and remove the cork from the Corkscrew by hand after it is outside the Main Body of the Wine Opener.

## CLEANING & MAINTENANCE



Clean the Main Body of the appliance with a damp cloth and dry thoroughly

The Geoffrey Zakarian Wine Opener is NOT dishwasher safe.

Store your device in a dry place, away from moist or corrosive materials. Do not submerge the device in water or other liquids, and do not expose the device to high-heat environments. Exposing the device to extreme temperatures may decrease the battery life or damage the Wine Opener.



## CHARGING THE BATTERIES

Before first use, fully charge the Wine Opener. The Wine Opener should charge for eight hours before being use for the first time. After the first time, the Wine Opener should fully charge after two and a half hours.

The Wine Opener comes with a USB-C Charging Cord. This can be plugged into an adapter and then into a wall outlet or other charging port.

When charging, the clear base of the Wine Opener will illuminate blue. At the top of the Wine Opener, you will see flashing lights that indicate how fully charged the Wine Opener is.

A two and a half hour charge can open approximately 40 bottles of wine. To open a single bottle, charge for 90 seconds.

For best longevity, recharge the Wine Opener approximately every two months.

## DISPOSAL METHOD

Rechargeable batteries built into a machine, tool, toy or other product (i.e., rechargeable flashlight) must be handled as hazardous waste when the item no longer holds a charge.

## REPLACEMENT METHOD

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

## DREAM TEAM IN YOUR KITCHEN

Chef Geoffrey Zakarian has teamed up with Dash, a leading manufacturer of cookware and kitchen tools, to bring you high-quality professional grade products specifically designed for home use. This collection provides a combination of innovation, craftsmanship and culinary expertise that will elevate your cooking endeavors.

### CUSTOMER SUPPORT

Contact Customer Support regarding repairs to the product. We welcome and value all concerns and questions from our customers. Please do not hesitate to contact us for product support, warranty, and maintenance related questions directly at:

**1-800-898-6970** from 7AM-7PM PT, Monday-Friday, or by email at [zakarian@bydash.com](mailto:zakarian@bydash.com).

## DASH - 1 YEAR LIMITED WARRANTY

Your Zakarian product by Dash is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, Dash will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. Dash will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [zakarian@bydash.com](mailto:zakarian@bydash.com). There are no express warranties except as listed above.

**REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. DASH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

**REPAIRS: DANGER!** Risk of electric shock! The Geoffrey Zakarian Wine Opener is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the device.

Power Rating: 25W  
Input 5V, 2000mA  
Battery Capacity: 500mAh (1.85Wh)  
Model#: K49779  
K49779\_IM\_20190703\_v3

**PLEASE NOTE:**  
**THE WINE OPENER  
IS NOT DISHWASHER-SAFE**



1-800-898-6970 | [zakarian@bydash.com](mailto:zakarian@bydash.com)