



**14" RAPID SKILLET WITH TRUGLIDE PRO™**



To my fellow home chefs,

I am incredibly excited to bring new kitchen innovations to your home. With my Pro For Home collection, we have created high quality products that will deliver pro chef results that are sure to impress.

Included with your purchase are a few recipes that I use at home and in my restaurants. I hope you enjoy them as much as I do.

Cheers,

For more recipes, cooking tips and products follow me @geoffreyzakarian and visit [geoffreyzakarian.com](http://geoffreyzakarian.com)



# CONTENTS

- Important Safeguards ..... 4-7
- Parts & Features ..... 8-9
- Using Your Zakarian 14” Rapid Skillet.....10-11
- Cleaning & Maintenance. ....12
- Customer Support .....14
- Warranty ..... 15

## IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than its intended use. For household use only.
- Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or is damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact Dash directly at 1-800-898-6970 from 7AM-7PM PST Monday-Friday or by email at zakarianbydash.com.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the power cord touch hot surfaces or hang over the edges of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- Dash shall not accept liability for damages caused by improper use of the appliance.
- Never touch the Base while the Zakarian 14” Rapid Skillet is in use.
- Do not use the appliance if any of the parts are damaged.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not deep fry food in the Zakarian 14” Rapid Skillet.
- To avoid injury, we recommend allowing the Zakarian 14” Rapid Skillet to return to room temperature before detaching the Control Probe from the Base.
- Allow the Zakarian 14” Skillet to cool completely before moving, cleaning, or disassembling.
- Always attach the Control Probe to the Zakarian 14” Rapid Skillet first before plugging the

appliance into the outlet. Before unplugging, make sure the Zakarian 14” Rapid Skillet is turned to “Off”, then remove the plug.

- Be cautious when moving the appliance if there are hot liquids inside.
- Do not touch the Base or TruGlide Pro™ Cooking Surface when the Zakarian 14” Rapid Skillet is hot. Use the Handles.
- Improper use of the Zakarian 14” Rapid Skillet can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- The longer cord should be arranged so that it does not drape over the countertop or table where it can be pulled on by children or tripped over unintentionally.

## IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

### GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN


When using electrical appliances, basic safety precautions should be followed, including:

- Lors de l'utilisation d'appareils électriques, les mesures de sécurité élémentaires doivent être suivies, notamment:
  - Lisez toutes les instructions.
  - Retirez tous les sacs et emballages de l'appareil avant utilisation.
  - Ne laissez jamais l'appareil sans surveillance pendant son utilisation.
  - Assurez-vous que l'appareil est nettoyé à fond avant de l'utiliser.
  - N'utilisez pas cet appareil pour un usage autre que celui auquel il est destiné. Pour usage domestique seulement.
  - Ne pas utiliser à l'extérieur.
  - Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou à proximité d'enfants.
  - N'utilisez pas cet appareil avec un cordon ou une fiche endommagé, après un dysfonctionnement, une chute ou un endommagement quelconque de l'appareil. Retournez l'appareil au centre de service autorisé le plus proche pour examen, réparation ou réglage.
  - Pour un entretien autre que le nettoyage, veuillez contacter Dash directement au 1-800-898-6970 de 7h à 19h, du lundi au vendredi ou par courrier électronique à l'adresse [zakarianbydash.com](http://zakarianbydash.com).
- Une extrême prudence doit être utilisée lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil car cela pourrait provoquer un incendie, un choc électrique ou des blessures.
- Ne laissez pas le cordon d'alimentation toucher des surfaces chaudes ou pendre du bord d'une table ou d'un comptoir.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience et de connaissances, à moins de recevoir une surveillance et des instructions concernant leur utilisation par une personne responsable de leur sécurité.
- Assurez-vous toujours de débrancher l'appareil de la prise de courant avant de le déplacer, de le nettoyer, de le ranger et lorsqu'il n'est pas utilisé.
- Dash n'acceptera aucune responsabilité pour les dommages causés par une utilisation incorrecte de l'appareil.
- Ne touchez jamais la base lorsque la poêle Zakarian de 14 pouces est en cours d'utilisation.

- N'utilisez pas l'appareil si l'une des pièces est endommagée.
- Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé.
- Ne faites pas frire les aliments dans le poêlon Zakarian de 14 po.
- Pour éviter tout risque de blessure, nous recommandons de laisser la poêle Zakarian 14 "revenir à la température ambiante avant de détacher la sonde de contrôle de la base.
- Laissez la poêle Zakarian de 14 po refroidir complètement avant de la déplacer, de la nettoyer ou de la désassembler.
- Attachez toujours la sonde de contrôle à la poêle Zakarian 14 "avant de brancher l'appareil à la prise. Avant de débrancher, assurez-vous que le poêle Zakarian 14 "est réglé sur" Off ", puis retirez la prise.
- Soyez prudent lorsque vous déplacez l'appareil s'il contient des liquides chauds.
- Ne touchez pas la base ni le plat antiadhésif lorsque la poêle Zakarian 14 "est chaude. Utilisez les poignées.
- Une mauvaise utilisation de la poêle Zakarian 14 "peut provoquer des dommages matériels, voire corporels.
- Cet appareil est doté d'une fiche polarisée (une des lames est plus large que l'autre). Pour réduire le risque de choc électrique, cette fiche ne peut être insérée dans une prise polarisée. Si la fiche ne s'insère pas complètement dans la prise, inversez-la. Si le problème persiste, contactez un électricien qualifié. Ne modifiez pas la fiche de quelque manière que ce soit.
- Le cordon le plus long doit être disposé de manière à ne pas se poser sur le comptoir ou la table où il peut être tiré par des enfants ou trébuché par inadvertance.

### GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MANUEL D'INSTRUCTIONS ET D'ENTRETIEN

14" Rapid Skillet with TruGlide Pro™

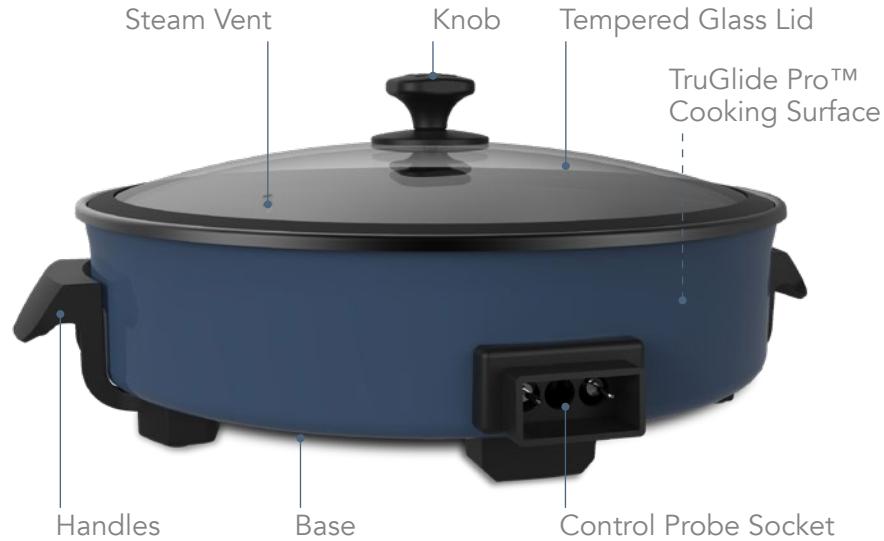

Control Probe Detail



Stainless Steel Rack



USING STAINLESS STEEL RACK

Before first use, ensure that all parts of the Stainless Steel Rack and Zakarian 14" Rapid Skillet are clean and wiped down.

The Stainless Steel Rack can be used to steam items inside the Skillet. It is not designed for use in an oven or other cooking appliance.

In order to steam food in the Skillet using the Stainless Steel Rack, first add several cups of water to the Skillet's TruGlide Pro™ Cooking Surface. Insert the Control Probe into the Control Probe Socket and plug in the Skillet. Turn the Temperature Control Dial to medium.

Add the Stainless Steel Rack to the Skillet, place the food you wish to steam on the Rack, and cover with the Tempered Glass Lid. Heat until food is steamed to your liking.

When removing cooked food from the Skillet, be sure to use heat-safe utensils and gloves, as the Rack and Lid, as well as the steam itself, may be hot. Do not directly touch the Stainless Steel Rack, water, or cooking surface.

Use only silicone, wood, or nylon utensils on the Cooking Surface to preserve the TruGlide Pro™ coating.

After using, unplug the Skillet and wait to cool before removing the Stainless Steel Rack. Clean, dry, and store in a cool, dry place. The Stainless Steel Rack is dishwasher safe, however the rest of the Skillet is NOT dishwasher safe.

## USING YOUR ZAKARIAN 14” RAPID SKILLET

Clean the Zakarian 14” Rapid Skillet and all of its components prior to assembly and use. DO NOT use the Skillet near water or other liquids, with wet hands, or while standing on a wet surface. Make sure the Handles are securely fastened to the Base prior to each use. Do not touch the Base or non-stick TruGlide Pro™ Cooking Surface without heat-protective cooking gloves while the Skillet is in use.

**Note:** When using your Skillet for the first time, you will need to attach the Knob to the Tempered Glass Lid with a screwdriver. Attach just enough so that the Knob does not become loose when on the Lid. **CAUTION: Do not overtighten the Knob.**

- 1 Set the Base on a clean, stable, and dry surface.
- 2 Unwind the power cord to the preferred length. Inspect the cord for any signs of damage or significant wear.
- 3 Plug the Control Probe Connector into the Control Probe Socket located on the Base of the 14” Rapid Skillet. Be sure to properly align the Connector’s single prong with the middle hole before pushing in the Control Probe connector .
- 4 Make sure the Temperature Control Dial located on the Control Probe is set to “Off,” and then plug your Skillet into an outlet or power supply.
- 5 Turn the Temperature Control Dial clockwise to “Low.” It is strongly recommended that you do not begin cooking at a high temperature as this will likely cause the food to splatter or burn when placed in the Skillet.
- 6 Place your ingredients into the Skillet. Allow the food to cook for several minutes. Increase the heat until you reach the temperature that is appropriate for your recipe.
- 7 When you are finished cooking with your Skillet, turn the Temperature Control Dial to “Off.” Wait for your Skillet to cool before cleaning the appliance.

## USING YOUR ZAKARIAN 14” RAPID SKILLET

### TEMPERATURE SETTINGS GUIDE

The Temperature Control Dial has 3 heat levels. The Indicator Light located on the Control Probe will glow orange when the Zakarian 14” Rapid Skillet is turned on.

**Note:** You may want to use the Tempered Glass Lid to increase the heat level or decrease cooking time. When placed over the TruGlide Pro™ Cooking Surface, the Glass Lid locks in heat and moisture, allowing foods to cook at a faster pace. This also prevents the food from drying out in the Skillet.

HEAT LEVEL	DIRECTIONS
Low	Use for simmering sauces or stews, poaching eggs, cooking bacon, for caramelizing onions, reheating food, or for melting butter.
Medium	Use for scrambling or frying eggs, making grilled cheese, stir frying, or sautéing.
High	Use for boiling water or soup, searing meat, making pancakes, cooking hamburgers or meatballs.

**TruGlide Pro™ Cooking Surface:** The Zakarian 14” Rapid Skillet’s TruGlide Pro™ Cooking Surface helps to prevent food from adhering to the Skillet. Metal utensils may scratch or dent the TruGlide Pro™ Cooking Surface. To avoid damaging your Skillet, make sure to use only wooden, nylon, or silicone cooking utensils when preparing your food.

## CLEANING & MAINTENANCE

Never use abrasive cleaning agents to clean your appliance as this may damage the Zakarian 14" Rapid Skillet. To prevent damage to the Skillet, make sure to dry thoroughly after washing. Any other services should be performed by an authorized service representative.

### **CLEANING YOUR ZAKARIAN 14" RAPID SKILLET:**

Turn the Temperature Control Dial to the "Off" position before unplugging and cleaning. The Skillet should be cooled down before attempting to clean.

Do not submerge the Base or Control Probe in water or other liquids. Instead, unplug the Control Probe and place in a safe, dry place. Fill the Skillet with a small amount of warm, soapy water and gently scrub with a sponge until clean. Carefully rinse the TruGlide Pro™ Cooking Surface so that no extra soap remains, making sure not to wet the Control Probe Socket.

- Wash the Tempered Glass Lid in warm, soapy water.
- Wipe down the Base with a damp cloth.
- Thoroughly dry the Skillet before storing.



## DREAM TEAM IN YOUR KITCHEN

Chef Geoffrey Zakarian has teamed up with Dash, a leading manufacturer of cookware and kitchen tools, to bring you high-quality professional grade products specifically designed for home use. This collection provides a combination of innovation, craftsmanship and culinary expertise that will elevate your cooking endeavors.

We welcome and value all concerns and questions from our customers. Please do not hesitate to contact us for product support, warranty, and maintenance related questions directly at: 1-800-898-6970 from 7AM-7PM PST, Monday-Friday, or by email at [zakarian@bydash.com](mailto:zakarian@bydash.com).

Power Rating: 120V ~ 60Hz

Wattage: 1400W

Model #: K50030

**REPAIRS: DANGER!** Risk of electric shock! The Zakarian 14” Rapid Skillet with TruGlide Pro™ is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the device.

### DASH - 1 YEAR LIMITED WARRANTY

Your Zakarian by Dash product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, Dash will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. Dash will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to [zakarian@bydash.com](mailto:zakarian@bydash.com).

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. DASH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Stock #: K50030\_20190916\_v2

Made in China



1-800-898-6970 | [zakarian@bydash.com](mailto:zakarian@bydash.com)