



Bundt® Cake Maker





Bundt® Cake Maker

Important Safeguards	4 - 8
Parts & Features	10
Before Using Your Alex by Dash Bundt Maker	11
Using Your Alex by Dash Bundt Maker.....	12-16
Cleaning & Maintenance	17
Storing Your Alex by Dash Bundt Maker.....	18
Notes.....	20-21
Customer Support.....	22
Warranty.....	23

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Please read and save this instruction manual.
- When using electrical appliances, basic safety precautions should be followed including:
 - Read all instructions.
 - Remove all bags and packaging from appliance before use.
 - Do not use appliance outdoors or for commercial purposes.
 - Never leave appliance unattended when in use.
 - Only use the appliance on a stable, dry surface.
 - Make sure the appliance is cleaned thoroughly before using.
 - Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
 - Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
 - Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM-7PM PT Monday-Friday or by email at support@bydash.com.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet. Do not use appliance for other than intended use.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with

supervision and instruction concerning use of the appliance by a person responsible for their safety.

- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- Turn the appliance OFF, then unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension

cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally. If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

- Warning: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Cover Handle.
- DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Mini Bundt® Maker is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Mini Bundt® Maker and its non-stick Cooking Surface.
- DO NOT use the Mini Bundt® Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- Allow Mini Bundt® Maker to cool completely before moving, cleaning, or storing.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

L'utilisation d'appareils électriques nécessite de prendre des mesures de sécurité de base, y compris:

- Veuillez lire et conserver ce manuel d'utilisation.
 - Lors de l'utilisation d'appareils électriques, les mesures de sécurité de base doivent être suivies, notamment:
 - Lisez toutes les instructions.
 - Retirez tous les sacs et emballages de l'appareil avant utilisation.
 - N'utilisez pas cet appareil à l'extérieur ou à des fins commerciales.
 - Ne laissez jamais l'appareil sans surveillance lorsqu'il est utilisé.
 - Utilisez l'appareil uniquement sur une surface stable et sèche.
 - Assurez-vous que l'appareil est nettoyé à fond avant de l'utiliser.
 - Ne pas utiliser cet appareil pour un usage autre que celui auquel il est destiné. Pour usage domestique seulement. Ne pas utiliser à l'extérieur.
 - Une surveillance étroite est nécessaire
- lorsqu'un appareil est utilisé par ou à proximité d'enfants. Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.
- Ne pas utiliser cet appareil avec un cordon ou une fiche endommagé, après un dysfonctionnement de l'appareil, une chute ou un dommage quelconque. Renvoyez l'appareil à un centre de service agréé le plus proche pour un examen, une réparation ou un réglage.
 - Pour tout entretien autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 7h à 19h du lundi au vendredi ou par courrier électronique à support@bydash.com.
 - Ne placez pas l'appareil sur ou à proximité d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé. Une extrême prudence doit être utilisée lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds. Attachez toujours d'abord la fiche à

l'appareil, puis branchez le cordon dans la prise murale. Pour déconnecter, éteignez toutes les commandes, puis retirez la fiche de la prise murale. N'utilisez pas cet appareil pour un usage autre que celui prévu.

- Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil car cela pourrait provoquer un incendie, un choc électrique ou des blessures.
- Ne laissez pas le cordon toucher des surfaces chaudes ou pendre des bords de tables ou de comptoirs.
- Cet appareil n'est pas destiné à être utilisé par des personnes (y compris des enfants) ayant des capacités physiques, sensorielles ou mentales réduites, ou manquant d'expérience et de connaissances, à moins qu'une personne responsable de leur sécurité ne les supervise et ne les instruisse.
- Assurez-vous toujours de débrancher l'appareil de la prise avant de le déplacer, de le nettoyer, de le ranger et lorsqu'il n'est pas utilisé.
- StoreBound n'acceptera aucune responsabilité pour les dommages causés par une utilisation incorrecte de l'appareil.
- Une utilisation inappropriée de l'appareil peut entraîner des dommages matériels, voire corporels.
- Cet appareil est doté d'une fiche polarisée (une lame est plus large que l'autre). Pour réduire les risques d'électrocution, cette fiche ne peut être insérée dans une prise polarisée. Si la fiche n'entre pas complètement dans la prise, inversez-la. Si le problème persiste, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque manière que ce soit.
- Éteignez l'appareil, puis débranchez-le de la prise lorsqu'il n'est pas utilisé, avant d'assembler ou de désassembler des pièces et avant de le nettoyer. Pour débrancher, saisissez la fiche et retirez-la de la prise. Ne tirez jamais sur le cordon d'alimentation.
- Un cordon d'alimentation court doit être fourni afin de réduire les risques d'enchevêtrement ou de trébuchement

GARANTIES IMPORTANTES: VEUILLEZ LIRE ET CONSERVER CE MODE D'EMPLOI ET D'ENTRETIEN

Garanties Importantes

- Un cordon d'alimentation court doit être fourni afin de réduire les risques d'enchevêtrement ou de trébuchement sur un cordon plus long. Une rallonge peut être utilisée si elle est utilisée avec soin. Si une rallonge est utilisée, le calibre électrique indiqué doit être au moins égal à celui de l'appareil. La rallonge doit être disposée de manière à ne pas se poser sur le comptoir ou la table, où elle pourrait être tirée par des enfants ou faire trébucher dessus par inadvertance. Si l'appareil est du type mis à la terre, le cordon ou la rallonge doit être un cordon à 3 fils.
- **AVERTISSEMENT:** Surfaces chaudes ! Ne touchez jamais la surface de cuisson ou le couvercle pendant l'utilisation de l'appareil. Soulevez et baissez toujours le couvercle à l'aide de sa poignée.
- **NE soulevez PAS le couvercle pour que votre bras se trouve au-dessus de la surface de cuisson brûlante, car cela pourrait entraîner des blessures. Soulevez par le côté.**
- Afin d'éviter les risques de feux, d'électrocution, ou de dommages corporels, ne mettez pas le cordon, la prise ou l'appareil dans ou à proximité de l'eau ou d'autres liquides. Le Mini Pâtissier n'est PAS lavable en machine.
- N'utilisez jamais des produits d'entretien abrasifs pour nettoyer l'appareil, car cela pourrait endommager Le Mini Pâtissier et sa surface de cuisson anti-adhérente.
- N'utilisez PAS Le Mini Pâtissier à proximité de l'eau ou d'autres liquides, avec des mains mouillées, ou si vous vous tenez sur une surface mouillée.
- Laissez Le Mini Pâtissier refroidir complètement avant tout déplacement, nettoyage ou entreposage.

GARANTIES IMPORTANTES:
VEUILLEZ LIRE ET CONSERVER CE
MODE D'EMPLOI ET D'ENTRETIEN



Parts & Features



Before Using your Alex by Dash Bundt Maker

1. Carefully unpack the Electric Rotating Bundt Cake Maker and remove all packaging and materials.
2. Before using your Electric Rotating Bundt Cake Maker for the first time, lift the Lid to expose the Removable Cake Tray. Grasp the Handles to remove. Wash and rinse the Cake Tray before use.
3. Wipe upper and lower bundt cake plates with a damp cloth to remove all dust, then dry. Wipe outer surfaces and base with a slightly damp, soft cloth or sponge.

CAUTION: Take care to prevent water from running into the appliance. NEVER IMMERSE THE BUNDT MAKER IN WATER OR ANY OTHER LIQUIDS!



4. Before using, re-insert the Removable Cake Tray into the Lower Bundt Plate. Align the Removable Cake Tray handles with the cutouts in the body, making sure the bottom sits flat into the Lower Bundt Plate. (Photo 1)



5. Store Electric Rotating Bundt Cake Maker with the lid closed. Turn the unit to the vertical position and fold the handle down for compact storage until use. (Photo 2)

NOTE: If the Removable Cake Tray Handles are not correctly positioned, the Bundt Cake Maker will not rotate.

Using Your Alex by Dash Bundt Maker



1. Place the Electric Rotating Bundt Cake Maker on a flat, stable surface.



2. **IMPORTANT:** Make sure the Removable Cake Tray is in position in the Lower Bundt Plate.



3. If the Lid Handle is folded, unfold to extend and close the lid. Fold handle to either side to avoid contact during use.



4. Prepare cake batter.

Using Your Alex by Dash Bundt Maker



5. Plug unit into a 120 V AC electrical outlet to preheat. The red Power Light will illuminate.

NOTE: When the Electric Rotating Bundt Cake Maker is heated for the first time, it may emit slight smoke or odor. This is normal and should disappear after 1 or 2 uses. This does not affect the safety of the appliance. However, as it may affect the flavor of the first cake prepared in the Electric Rotating Bundt Cake Maker, it is recommended that this cake be discarded.



6. After approximately 2 to 3 minutes, the green READY light will illuminate, indicating the unit is preheated and is ready for use.



7. Using the Lid Handle, rotate the unit counter-clockwise until the Bundt Cake Maker's bundt cake plates are positioned flat and locked into a stable horizontal position, with indicator lights on top. Unfold the lid handle and lift to expose the bundt cake plates.

IMPORTANT: Make sure the removable cake tray is in position in the lower cake plate.

Using Your Alex by Dash Bundt Maker

WARNING: The Electric Rotating Bundt Cake Maker is designed to bake with the removable cake tray. To prevent damage to the unit or injury to persons, never add batter or bake any cake in the unit without first making sure the cake tray sits flat in the bottom of the Lower Bundt Plate, and the Cake Tray Handles are fitted properly in the cutouts in the body.

NOTE: Improper assembly of the Removable Cake Tray will prevent the Bundt Cake Maker from rotating.



8. Apply a generous coat of oil or cooking spray to the upper and lower cake plates and removable cake tray. Use a paper towel if necessary, or a soft brush or silicone utensil. Do not use metal utensils as they may scratch the coating.



9. Pour 2 to 2-1/2 cups batter onto the Removable Cake Tray, in the center of the Lower Cake Plate. DO NOT add batter past the top ridge in the mold.

NOTE: Avoid pouring batter over the center of the mold if possible.

IMPORTANT: Quantity of batter needed may vary depending on the batter consistency.

Using Your Alex by Dash Bundt Maker



10. Use the Lid Handle to lower the Lid; rotate the unit clockwise 180° until the bottom side is facing up. Fold handle to either side to avoid contact during baking.



11. Allow the Bundt Cake Maker to bake undisturbed for 13 to 15 minutes, according to recipe directions. The green Ready Light will cycle on and off as the unit maintains baking temperature.

IMPORTANT: Recipes may vary in bake time and brownness; lighter batters with more sugar will brown quicker.



12. At the end of the bake time, rotate counterclockwise 180° until the maker is right-side up. Unfold the Handle and extend to lift the Lid. Test the cake for doneness by inserting a wooden toothpick 1 inch from the edge. The cake is done when the toothpick comes out clean. If not, close and rotate the Bundt Cake Maker again and continue baking for 1-2 minute intervals between testing.



13. Use the Cake Tray Handles to lift the bundt cake out of the lower plate. Slide the cake out onto a cooling rack.

NOTE: If additional cakes are to be baked, wipe down the Removable Cake Tray and replace it within the Bundt Maker, keeping the Bundt Cake Maker lid closed to retain heat. Always wait until the green Ready Light is illuminated before adding fresh batter.



14. When baking is complete remove the Bundt Cake and unplug the power cord from the electric outlet and allow unit to cool. Do not clean the cooking surfaces until the Bundt Cake Maker has been fully cooled.

- Remove the plug from the outlet and allow the Maker to cool completely before cleaning.

CAUTION: Unplug the Alex by Dash Bundt Maker from the electrical outlet and allow to cool thoroughly before cleaning.

- The removable cake tray should be cleaned after every use. The removable cake tray is top rack dishwasher safe.
- Never immerse the Bundt Cake Maker in water or other liquids. Never place the Bundt Cake Maker in dishwasher. To clean the Plates, wipe them down with a clean, soft cloth or sponge.
- To condition plates and removable cake tray: Brush a generous coat of vegetable oil onto the lower and upper bundt cake plates. Spread oil with an absorbent kitchen towel and wipe off any excess oil.
- Carefully follow suggested cleaning procedures below. After a time, if cakes show signs of sticking, recondition as needed.
- To protect the nonstick surface of your Bundt Maker, use only plastic, nylon or wooden utensils. To remove any batter baked onto the bundt cake plates, pour a small amount of cooking oil onto the hardened batter. Allow to set for 5 minutes, then wipe softened batter off with a paper towel or soft cloth. Remove stubborn stains with a plastic mesh puff or pad.
- A clean round kitchen brush or a toothbrush works well to remove baked-on batter from the plates and body. For best results, use only products with directions stating they are safe for cleaning non-stick cooking surfaces. Do not use steel wool or coarse scouring pads.
- The exterior finish should be cleaned with a non-abrasive cleaner and a soft, damp cloth or sponge. Dry thoroughly.

Storing Your Bundt Maker

- Make sure The Bundt Maker is unplugged and fully cooled.
- For convenient, compact storage, turn the unit vertically and fold the handle down.
- Store Electric Rotating Bundt Cake Maker in its box, in a clean, cool area.
- Do not put any stress on the cord where it enters unit, as this could cause cord to fray and break.





**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below.

Contact us at **1 (800) 898-6970** or support@bydash.com

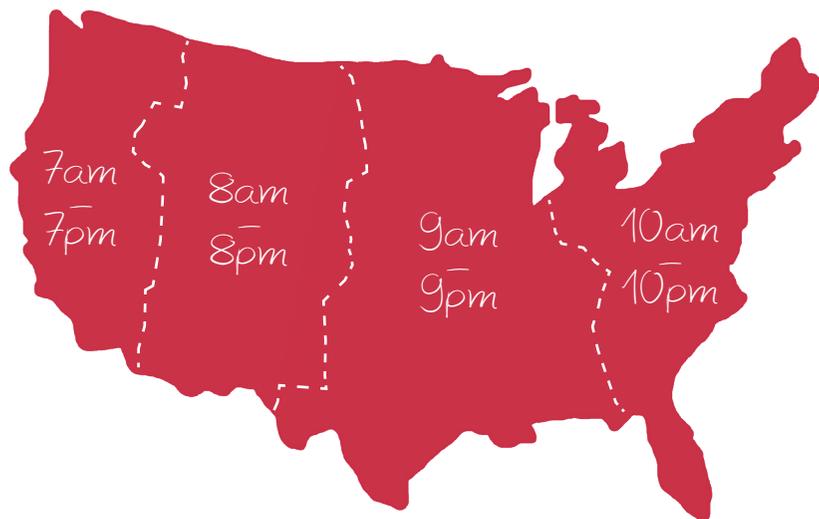

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM**.
And also, **Alaska**, feel free to reach out from **6AM to 6PM**.

DASH - 1 YEAR LIMITED WARRANTY

Your Alex by Dash product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, Dash will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. Dash will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. DASH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.


**PFOA
FREE**

Voltage 120V ~ 60Hz
Power Rating 900W
K51473_20210420_v1



1-800-898-6970 | @bydash | bydash.com