



K52092

ELECTRIC SALT & PEPPER GRINDERS



To my fellow home chefs,

I am incredibly excited to bring new kitchen innovations to your home. With my Pro For Home collection, we have created high quality products that will deliver pro chef results that are sure to impress.

Cheers,

For more recipes, cooking tips and products follow me
@geoffreyzakarian and visit geoffreyzakarian.com.



CONTENTS

Important Safeguards	4
Parts & Features	6
Assembling Your Salt & Pepper Grinders.....	7-9
Using Your Salt & Pepper Grinders.....	10-11
Cleaning & Maintenance.	12
Customer Support	14
Warranty	15

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all packaging and labels from appliance prior to use.
- Make sure appliance is cleaned thoroughly before using.
- This appliance must only be used by or under the supervision of a responsible adult.
- Be sure to insert the batteries with correct positive (+) and negative (—) polarity.
- Do not use appliance for other than its intended use.
- Do not use the appliance if it is damaged or has malfunctioned.
- DO NOT drop or hit the grinder against a hard object. This can cause the grinder to malfunction or stop working completely.
- Do not immerse in any liquid; instead use a soft wet cloth to clean.
- Store appliance in a dry place away from direct sunlight.
- DO NOT mix old and new batteries. Replace all batteries at the same time.
- DO NOT mix Alkaline, standard (carbon-zinc), or rechargeable (Ni-Cad, Ni-MH, etc.) batteries.
- When the grinder is not used for more than a month, remove the batteries from the grinder to prevent it from leaking. If it leaks, carefully wipe away the liquid inside the battery compartment and replace the batteries with a new one.
- Do not heat or disassemble batteries and never dispose of old batteries by throwing them into a fire.
- Do not dispose batteries into standard garbage disposal sites. Dispose of at available Battery Recycle Sites after fully discharging battery. Not doing so may violate local disposal laws and regulations. Please refer to local regulations for proper battery disposal.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM–7PM PT Monday–Friday or by email at support@bydash.com.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.





Remove the Cover by turning it slightly counterclockwise and lifting it off of the Motor **(photo A)**.



Install six AAA batteries around the Motor, aligning the positive (+) side of each battery with the positive indicator on battery well, and the negative (-) side with the negative indicator and springs **(photo B)**.

ASSEMBLING YOUR SALT & PEPPER GRINDER



Place the Cover back over the Motor and turn clockwise to secure **(photo C)**.



Remove the Spice Container by turning slightly clockwise **(Photo D)**.

ASSEMBLING YOUR SALT & PEPPER GRINDER



Fill the Spice Container with peppercorns or coarse dry salt **(photo E)**.



Reinstall the Spice Container by turning counter clockwise until it is fully fastened **(photo F)**.

Your Electric Salt and Pepper Grinder is now ready to use.

USING YOUR SALT & PEPPER GRINDER



Adjust the grind level to make it more fine by rotating the Coarseness Adjuster clockwise (**photo A**).



Adjust the grind level to make it more coarse by rotating the Coarseness Adjuster counterclockwise (**photo B**).



To start grinding, simply rotate the Grinder so that the Spice Container is on top. Rotate back to stop grinding (**photo C**).

CLEANING & MAINTENANCE

Do not expose your Salt and Pepper Grinders to heat.

Store your Salt and Pepper Grinders in a dry place.

To clean your Salt and Pepper Grinders, wipe the exterior with a damp cloth. Never immerse the Motor in water.

To clean the Spice Compartment, detach it from the Cover and wash it with warm, soapy water. Dry thoroughly before reassembling and storing.

The Salt and Pepper Grinders are not dishwasher safe. Do not put the Salt and Pepper Grinders or any of its components into a dishwasher.



DREAM TEAM IN YOUR KITCHEN

Chef Geoffrey Zakarian has teamed up with Dash, a leading manufacturer of cookware and kitchen tools, to bring you high-quality professional grade products specifically designed for home use. This collection provides a combination of innovation, craftsmanship and culinary expertise that will elevate your cooking endeavors.

We welcome and value all concerns and questions from our customers. Please do not hesitate to contact us for product support, warranty, and maintenance related questions directly at: 1-800-898-6970 from 7AM-7PM PST, Monday-Friday, or by email at zakarian@bydash.com.

Model #: K52092

REPAIRS: DANGER! Risk of electric shock! The Zakarian Salt and Pepper Grinders are an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the device.

DASH - 1 YEAR LIMITED WARRANTY

Your Zakarian by Dash product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, Dash will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. Dash will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to zakarian@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. DASH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Stock #: K52092_20210407_v1

Made in China



1-800-898-6970 | zakarian@bydash.com