



K54320

ELECTRIC ROTARY GRATER



To my fellow home chefs,

I am incredibly excited to bring new kitchen innovations to your home. With my Pro For Home collection, we have created high quality products that will deliver pro chef results that are sure to impress.

Included with your purchase are a few recipes that I use at home and in my restaurants. I hope you enjoy them as much as I do.

Cheers,

A handwritten signature in blue ink that reads 'Geoffrey Zakarian'. The signature is fluid and cursive, with the first and last names being more prominent.

For more recipes, cooking tips and products follow me
[@geoffreyzakarian](#) and visit [geoffreyzakarian.com](#).



CONTENTS

Important Safeguards	4-5
Parts & Features	7
Using Your Electric Grater.....	8-15
Cleaning & Maintenance.....	17-21
Customer Support	22
Warranty	23

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Using a charger other than the one provided may result in damage to the appliance unless it meets the correct specifications (see page 8 of this manual).
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM-7PM PT Monday-Friday or by email at support@storebound.com.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.
- Always be sure to unplug the appliance from the outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the appliance can result in property damage or even in personal injury.
- A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- **WARNING:** Grater is sharp. Keep fingers away when in use. Do not insert fingers into the Main Body.

FCC Compliance Statement

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.



PARTS & FEATURES



USING YOUR ELECTRIC GRATER

SETTING UP YOUR ELECTRIC GRATER

Remove the appliance from any packaging and plastic bags.

Attach the USB C Charging cable and plug the Grater in, allowing it to charge fully before first use. The charging light will be red while charging and white when fully charged.

Ensure the Safety Lock on the underside of the Grater is in the Locked position before assembling or handling the Grater. **(Photo A)**

Ensure the Grater Cylinder is locked into place. If not, use the Grater Cap to turn the Cylinder 90 degrees clockwise so that it is in the lock position. **(Photo B)**



USING YOUR ELECTRIC GRATER



NOTE: When attaching the Grater Cap to the Grater Cylinder, make sure the four notches on the Cap are aligned with the four indents on the rim of the Cylinder. When inserted this way, the prongs on the Cap will snap into place.

IMPORTANT: The notches and indents have to match up perfectly or it will not attach properly and you will have challenges using the cap with the cylinder.





USING YOUR ELECTRIC GRATER



Lift the Cover to Open the lid of the grater. **(Photo A)**



Add the cheese to the grater. If the cheese doesn't fit entirely, it helps to cut it into smaller blocks ~1-1.5" in size. **(Photo B)**

USING YOUR ELECTRIC GRATER



Close the Cover, pressing the cheese against the Grater Cylinder. **(Photo C)**



Make sure the cylinder is in the lock position and remove the Grater Cap from the side of the Grater in order to grate. You can use a bowl to collect grated cheese, or sprinkle it directly onto dishes. **(Photo D)**

USING YOUR ELECTRIC GRATER



Move the Safety Lock into the unlocked position. **(Photo E)**



Press the Power Button to begin grating, and keep holding down the Cover to maintain pressure. **(Photo F)**



USING YOUR ELECTRIC GRATER



Re-lock the safety lock on the underside of the Grater once you are finished grating or have run out of cheese. **(Photo G)**



When you are finished grating, lift the lid and remove any remaining cheese and/or rind from the device. Put the grater cap back onto the grater cylinder by following the grater cap assembly instructions on page 9. You can remove the Grater Cylinder by turning the grater cap counterclockwise until its in the unlock position. **(Photo H)** To clean properly, follow the cleaning & maintenance steps on the following pages.



CLEANING YOUR ELECTRIC GRATER



Before cleaning, ensure the Safety Lock is in the LOCKED position. **(Photo A)**



Lift the Lid and remove any remaining cheese or rind. **(Photo B)**



CLEANING & MAINTENANCE



Remove the Grater Cylinder by attaching the Grater Cap and turning the Grater Cylinder as a whole counterclockwise. **(Photo C)**



Lift the cover, and then press the side cover lock to remove the side cover. **(Photo D)**

CLEANING & MAINTENANCE



Once the Side Cover has been removed, you can remove the Grater Barrel. **(Photo E)**

Clean all removed parts with warm, soapy water and let dry completely before reassembling.

DO NOT clean the Grater in a dishwasher. The Grater Cylinder and Grater Barrel are dishwasher safe when removed from the appliance.



Attach in reverse order, adding the Grater Barrel, then clipping the Side Cover into place, and finally adding the Grater Cylinder and Grater Cap. **(Photo F)**



Attach the Grater Cylinder and Cap by putting both together, inserting, and then turning 90° clockwise to lock into place.

(Photo G)

Grater Barrel may go in the dishwasher when removed from appliance.

Cylinder may go in the dishwasher when removed from appliance.

Grater Cap may go in the dishwasher.

Pusher may **NOT** go in the dishwasher.

Cover may **NOT** go in the dishwasher.

Grater Housing may **NOT** go in the dishwasher.

Side Cover may **NOT** go in the dishwasher.

DREAM TEAM IN YOUR KITCHEN

Chef Geoffrey Zakarian has teamed up with Dash, a leading manufacturer of cookware and kitchen tools, to bring you high-quality professional grade products specifically designed for home use. This collection provides a combination of innovation, craftsmanship and culinary expertise that will elevate your cooking endeavors.

We welcome and value all concerns and questions from our customers. Please do not hesitate to contact us for product support, warranty, and maintenance related questions directly at: 1-800-898-6970 from 7AM-7PM PST, Monday-Friday, or by email at zakarian@bydash.com.

Power Rating: 120V ~ 60Hz

Wattage: 330W Max

Model #: K54320

Made in China

REPAIRS: DANGER! Risk of electric shock! The Zakarian Electric Grater is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances.

Contact Customer Support regarding repairs to the device.

DASH - 1 YEAR LIMITED WARRANTY

Your Zakarian by Dash product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, Dash will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. Dash will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to zakarian@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. DASH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

Stock #: K54320_20211206_v1



1-800-898-6970 | zakarian@bydash.com