



4-CUP RICE COOKER USER'S GUIDE

 
**Item No.: K61631
Model No.: RC-4E**

INTRODUCTION

Thank you for buying this Robert Irvine Rice cooker. Enjoy a variety of food with this appliance, including soups and stews. These instructions tell you how the product works and how to use it. Read the instructions carefully before you start using the appliance. Only use the appliance in manner described in the instructions. Keep these instructions in a safe place for future reference.

GENERAL DESCRIPTION

1. Base
2. Rice Bowl
3. Measuring Cup
4. Glass lid
5. On/OFF Button
6. Spatula
7. Retractable Cord

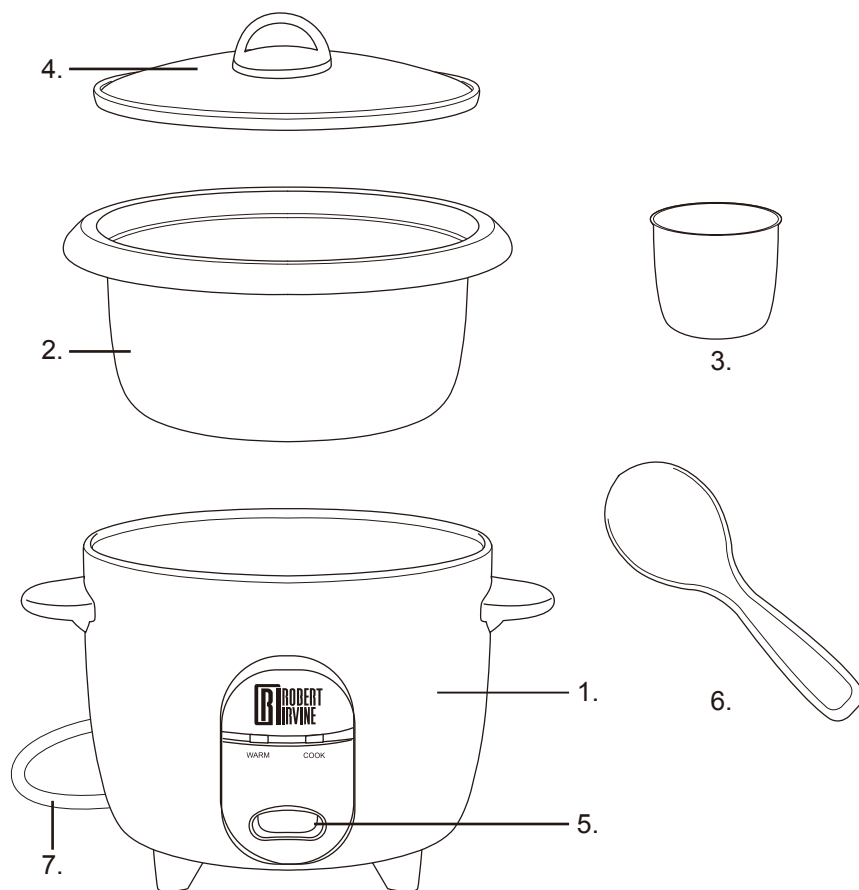

2

IMPORTANT SAFEGUARDS

When using your electrical appliances, basic safety precautions should always be followed including the followings:

- Read all instructions carefully.
- Do not touch hot surfaces, use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs, or main body in water or other liquid.
- Close supervision is necessary when any appliance is used by or nearby children.
- Unplug from outlet when out in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner bring the appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other liquids.
- Do not use appliance for other than intended use.
- The appliance must not be immersed in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the license repair shop.
- Preheating of the appliance is not necessary.
- * These units are "household use"

CAUTIONS TO READ BEFORE USING RICE COOKER

- Only use this product with the correct AC voltage outlet. (Please see the box and label at the bottom of rice cooker for the correct rate voltage.)
- Be sure to unplug AC cord when pan is not in cooker, or when cooker is not being used. Remember the "KEEP WARM" feature operates whenever the cord is plugged in
- Place the inner pot inside the cooker before operating. Turn the pot gently to right and left.
- If the switch button is difficult to press to the "cook" position, do not try to force it down. This difficulty usually occurs when inner pot is of fully inserted in cooker or when cooking has just finished.
- Place the lid on your inner pot while cooking, keep the lid in place after serving to prevent your rice from drying out or discoloring.
- Keep bottom of inner pot and surface of heater plate free of foreign matter to prevent operating malfunctions.

 
3

MAINTENANCE PROCEDURES

- Remove inner pot and lid and wash them in hot soapy water, taking care to rinse completely, then dry with a soft cloth.
- Clean outside of cooker with a clean damp cloth. Never clean any part of the cooker with abrasive cleaner. Use a damp cloth or sponge with water and mild dish detergent. Do not submerge any part of cooker in water. Wash only inner pot and lid.
- To clean the heating plate and thermo-control plate, use steel wool to polish or remove any residue. Then wipe with a damp cloth. Allow to dry completely before re-using. You must keep the heating plate and thermo-control plate free from any foreign objects, otherwise the cooker will not operate properly.
- Improper cleaning of cooker may cause unpleasant odors.
- Any residue to the vinegar or salt may cause pan to corrode.

HOW TO USE

1. Using the measuring cup provided in the package, measure and add rice to the inner pot.

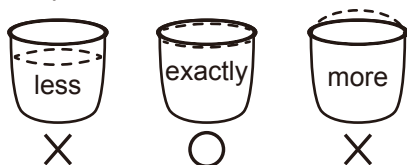

2. By measuring cup, add amount water to the rice inside the inner pot according to the following standard:


<u>Cups of Raw Rice</u>	<u>Water add to the line on pot</u>
4 cups	4 – 4 1/2 cups
2 cups	2 – 2 1/2 cups

3. Set inner pot in cooker. Place rice and water in inner pot. Close the lid firmly.
4. Plug in power cord. Do not plug in until ready to cook. If pot is not in cooker, cooking will not begin.
5. Press switch. The COOK indicator tells you the cooking has started.
6. When rice is done, the switch will pop up. After the switch pops up, leave covered for at least 15 minutes to steam rice.
7. Unplug after each use. Grasp the plug, not the cord.
8. When you stew, the water level should not more than 70% of the volume.
9. Do not attach the ventilating hole for fear scalding.

CAUTION

BEFORE STARTING TO COOK, CLEAN THE BOTTOM OF THE INNER POT AND THE SURFACE OF THE HEATER PLATE, THEN TURN THE INNER POT LOCKWISE SO THAT IT SITS PROPERLY ONTO THE HEATER PLATE INSIDE THE RICE COOKER. OTHERWISE, THE RICE COOKER WILL NOT WORK OR WILL BE DAMAGED.

 To reduce the risk of electric shock, cook only in the removable container

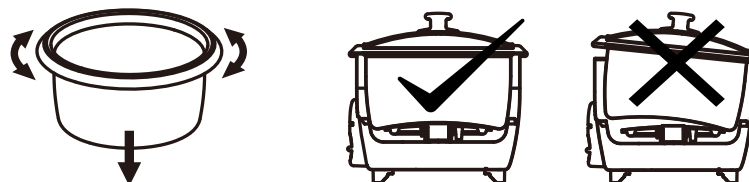

CARE & CLEANING

Always make sure the unit is in the OFF position and the power cord is UNPLUGGED before washing any parts of the rice cooker.

- The glass lid and non-stick inner pot of the rice cooker, measuring cup and spatula hand wash recommend, can simply be cleaned with a damp soapy cloth or sponge.
- The main base of the rice cooker can be cleaned with a damp soapy cloth or sponge.
NEVER IMMERSE THE BASE OF THE RICE COOKER INTO WATER OR ANY OTHER LIQUIDS FOR THIS MAY DAMAGE IT SEVERELY!
- Dry thoroughly before storing away the unit.
- NEVER USE ABRASIVE CLEANSERS OR MATERIALS TO CLEAN ANY PARTS OF THE RICE COOKER FOR THIS MAY DAMAGE THE SURFACES AND NON-STICK COATING.

WARRANTY

LIMITED 1 YEAR WARRANTY

This is the only express warranty for this product. Halex Holdings, LLC, warrants this product to be free from defects in material and workmanship for single-family household use for one year from the date of original purchase. Ordinary wear and tear including damage to the coating surface is excluded. Use of product for anything other than its intended purpose is also not warranted. We exclude liability for all consequential damages. Your exclusive remedy is repair or replacement of the nonconforming product, at our option. All liability is limited to purchase price. All other warranties, including any statutory warranty or condition of merchantability or fitness for a particular purpose, are disclaimed. You may have legal rights that vary depending on where you live. For repair or replacement, please contact our team with information on your product's proof of purchase and description of the problem. Customer Service Number: 800-459-2162

Cricket Product Labs a Div of Halex Holdings, LLC

Waltham, MA 02453

Made in China