


Rapid Cooker Functions



STEAM & CRISP

Evenly cook, brown, and crisp ingredients without drying them out.

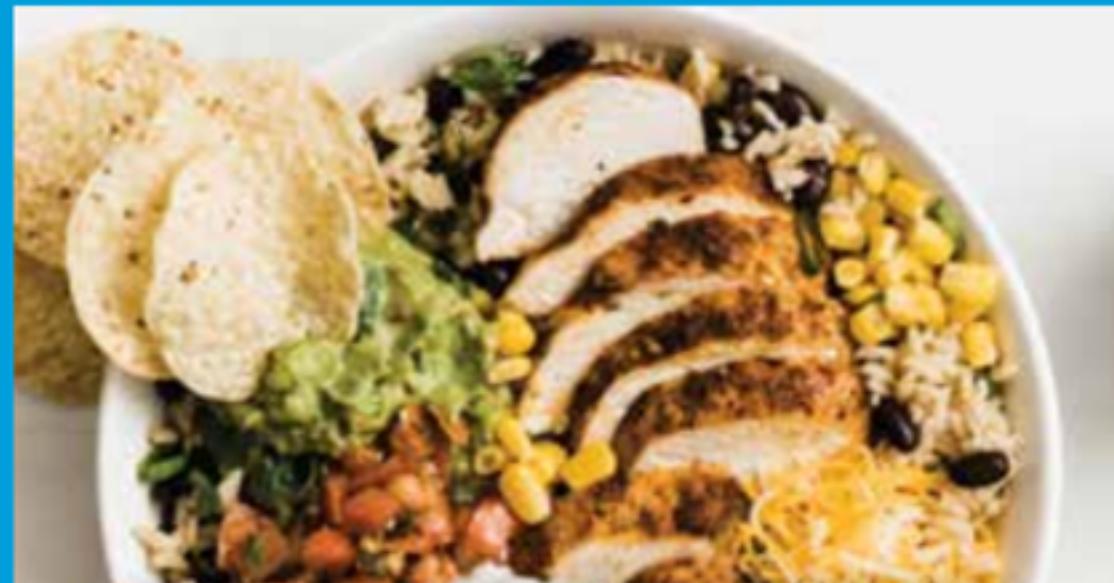

SPEEDI MEALS

Mains and sides done at the same time with infused steam and cyclonic air.



STEAM

Gently cook delicate foods at high temps to lock in moisture, flavor, and nutrients.



STEAM & BAKE

Promote even rise when baking while retaining moisture and fluffy texture.



PROOF

Create an environment for dough to rest and rise.

Please refer to Rapid Cooker recipes and charts for recommended Crisper Tray position.