


GOOD HOUSEKEEPING

recipes + usage instructions

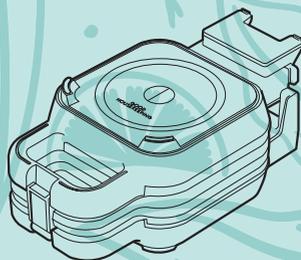

**BELGIAN & STUFFED
WAFFLE MAKER**

IMPORTANT SAFEGUARDS

BEFORE USING YOUR STUFFED WAFFLE MAKER, READ ALL INSTRUCTIONS CAREFULLY.

LIKE ANY ELECTRICAL APPLIANCE, THE WAFFLE MAKER MUST BE HANDLED WITH CARE AT ALL TIMES.


TO ENSURE YOUR SAFETY, THE FOLLOWING PRECAUTIONS SHOULD BE FOLLOWED.

- DO NOT immerse the product in water or other liquids or rinse under the tap.
- Please check that the voltage marked on the product matches the local power supply voltage, before connecting the product to the power supply.
- DO NOT use this product if the plug, power cord or product is damaged.
- This product is not intended for people (including children) who are physically impaired, have sensory or mental disabilities, or lack relevant experience and knowledge, unless someone responsible for their safety supervises or directs their use of the product.
- Keep the product and its cables out of the reach of children.
- Keep the power cord away from hot surfaces.
- Always place and use this product on a dry, stable and level surface.
- This product cannot be operated with an external timer or a separate remote control system.
- DO NOT use this product for any purpose other than as described in this user manual.
- The product must be allowed to cool before cleaning.
- DO NOT let the Power Cord hang over edge of table or counter or touch hot surfaces.
- DO NOT immerse the Waffle Maker in water. To protect against electrical shock, do not immerse the power cord, plug or appliance in any liquid.
- For indoor use only. Not intended for outdoor use.
- If this appliance begins to malfunction during use, immediately unplug the power cord.
- DO NOT use or attempt to repair a malfunctioning appliance.
- **WARNING: THIS ELECTRICAL APPLIANCE CONTAINS A HEATING FUNCTION. ALL SURFACES CAN DEVELOP HIGH TEMPERATURES. SINCE TEMPERATURES ARE DIFFERENTLY PERCEIVED BY DIFFERENT PEOPLE, THIS EQUIPMENT SHOULD BE USED WITH CAUTION.**
- The appliance should only be touched using the intended handles and gripping surfaces. Surfaces other than intended gripping surfaces need sufficient time to the cool down before being touched.
- This appliance is rated 800 watts and should be the only appliance operating on the circuit. The power cord must be plugged into an outlet that is properly installed.
- **WARNING: A SHORT POWER-SUPPLY CORD IS PROVIDED TO REDUCE THE HAZARDS RESULTING FROM ENTANGLEMENT OR TRIPPING OVER A LONGER CORD. IF IT IS NECESSARY TO USE AN EXTENSION CORD, IT SHOULD BE POSITIONED SUCH THAT IT DOES NOT DRAPE OVER THE COUNTER OR TABLETOP WHERE IT CAN BE PULLED ON BY CHILDREN OR TRIPPED OVER. THE MARKED RATING OF THE EXTENSION CORD MUST BE EQUAL TO OR GREATER THAN THE RATING OF THIS APPLIANCE. THE ELECTRICAL RATING IS LISTED ON THE BOTTOM OF THIS UNIT.**
- DO NOT place anything inedible inside the appliance or place the appliance in any container or small, confined space while the appliance is hot or in operation.
- Always operate the appliance on a horizontal surface that is level, stable and noncombustible.
- DO NOT leave this appliance unattended while in operation.
- DO NOT place your appliance on a cooktop, even if the cooktop is cool, because you could accidentally turn the cooktop on, causing a fire, damaging the appliance, your cooktop and your home.
- DO NOT attempt to dislodge food or open the appliance while in operation.
- DO NOT use sharp utensils (knives or forks) to extract food from the appliance. These implements can damage the appliance's protective nonstick coating.
- Always unplug the appliance after use and then allow the appliance to cool for 30 minutes before handling, cleaning or storing.

BELGIAN & STUFFED WAFFLE MAKER

SET INCLUDES

Waffle Maker
Waffle Ring

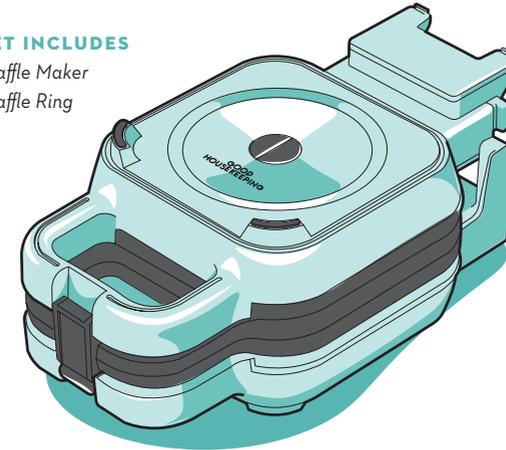

BEFORE FIRST USE FOR HOUSEHOLD USE ONLY.

- Carefully unpack Waffle Maker. Remove all packaging materials. Refer to Care & Cleaning Guide on page 8 in this booklet.
- Place appliance on flat, level surface, close to a 120V wall outlet.
- Open Waffle Maker and wipe the Upper Plate, Lower Plate and Waffle Ring with damp cloth so that they are clean.
- Wipe outside of Waffle Maker with damp soft cloth. Never immerse Waffle Maker, Power Cord or Plug in water or any other liquid.
- Close appliance.
- Plug into the wall outlet and preheat for 3 minutes or until green Ready Light turns on. You may notice some smoke coming from your Waffle Maker during this initial phase; this is normal. Season the Upper and Lower Plates with vegetable oil, using a heat-proof bristle brush, and wipe off excess with a paper towel. There is no need to season plates again.

SAVE THESE INSTRUCTIONS


WARNING! SHOCK HAZARD: THIS APPLIANCE HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER).

To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way.

If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with your Waffle Maker. The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.


PARTS & FEATURES

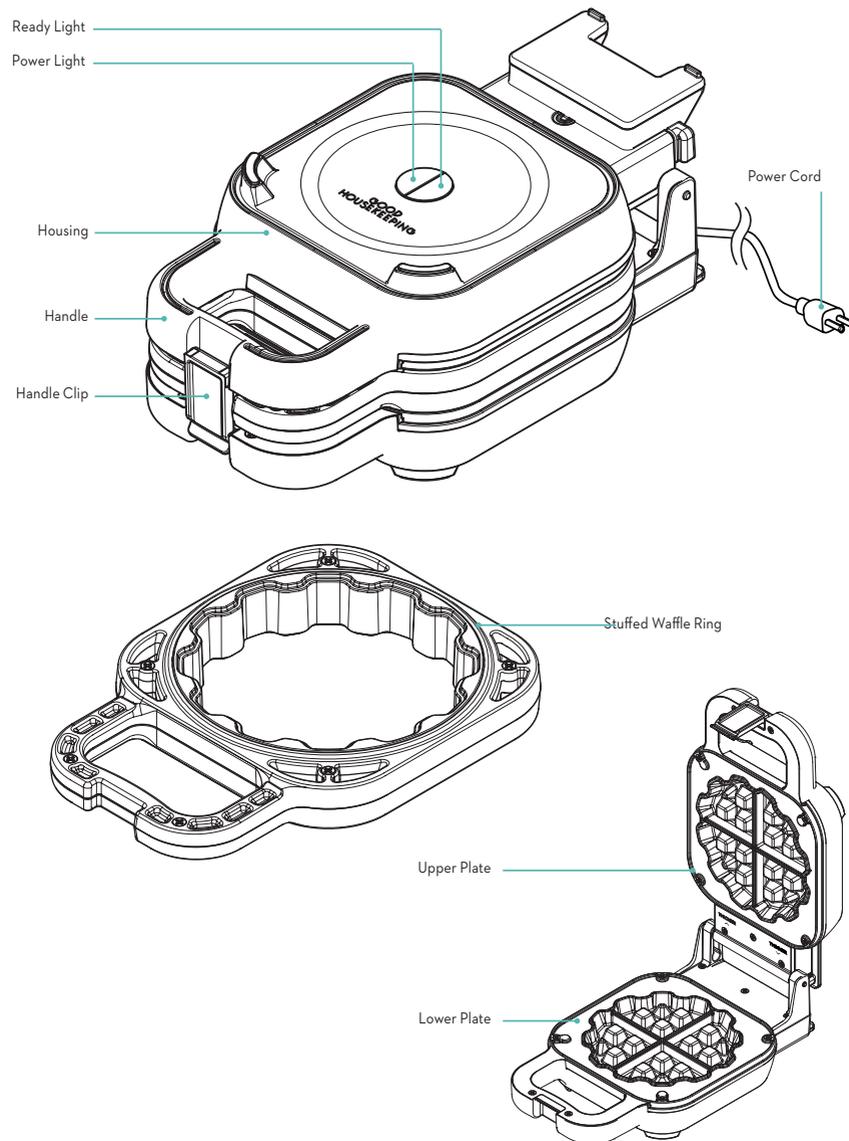

USING YOUR BELGIAN & STUFFED WAFFLE MAKER

How to make Standard Waffles

1. Plug in your Waffle Maker. Red Power Light will illuminate showing that Waffle Maker is on and starting to heat up. Green Ready Light will come on showing that the Waffle Maker has preheated, and appliance is now ready to use.
2. Open Lid using Handle.
3. Brush Upper and Lower Plates with small amount of oil to keep batter from sticking.
4. Pour enough batter into the center of the Lower Plate to cover the raised bumps. For thicker batters, it may be necessary to spread batter to cover plate.
5. Close Lid using Handle (do not lock Latch). While holding Handle, flip Waffle Maker 180° onto its other side.

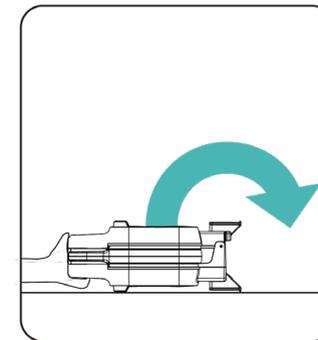

6. Set a kitchen timer for time as indicated in recipe. You will notice that the green Ready Light will cycle on and off during the cooking process, indicating that the correct temperature is being maintained.
7. When cooking time has completed, flip Waffle Maker 180° and carefully lift open Lid using Handle. If additional cooking is needed, simply close Lid and set kitchen timer for desired cooking time.
8. When waffle is cooked as desired, remove waffle using nylon or wooden spatula. Place waffle on plate serve with desired toppings.

DO NOT USE METAL UTENSILS TO REMOVE THE WAFFLE, AS THEY MAY SCRATCH AND DAMAGE THE COOKING SURFACES.

IF COOKING MORE THAN 1 WAFFLE IN A SESSION, BE SURE TO CLOSE THE LID IN BETWEEN WAFFLES TO MAINTAIN THE PROPER COOKING TEMPERATURE.

9. Always unplug appliance and allow to cool once you have finished cooking.


WARNING: SURFACES ARE HOT. TO AVOID HARM, NEVER TOUCH THE COOKING SURFACE DIRECTLY, OR THE EXTERIOR PARTS OF THE WAFFLE MAKER WHILE COOKING, EXCEPT FOR THE HANDLES.

How to make Stuffed Waffles

1. Open Lid using Handle. Insert Waffle Ring on top of Lower Plate. Refer to page 7 on how to use Waffle Ring.
2. Brush cooking oil on lates and Waffle Ring to keep batter from sticking.
3. Close Lid and plug in Waffle Maker and let it preheat. Red Power Light will illuminate, showing that Waffle Maker is on and heating up. Green Ready Light will come on showing that Waffle Maker has preheated, and appliance is now ready to use.
4. Pour enough batter into center of Lower Plate to cover the raised bumps. For thicker batters, it may be necessary to spread batter to cover plate.
5. Following recipe, spread filling evenly in center of batter. Avoid adding fillings too close to edges. Pour more batter over filling. Batter should be level with top of Waffle Ring.

WARNING: DO NOT OVERFILL WITH BATTER. BATTER WILL EXPAND DURING COOKING AND CAN SPILL OUT OF WAFFLE MAKER.

6. Close Lid using Handle. While holding on to Handle, flip Waffle Maker 180° onto its other side.

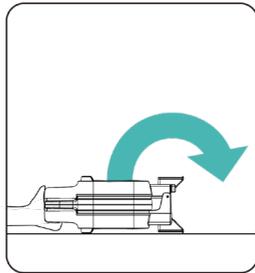

7. Set kitchen timer for time as indicated in recipe. You will notice that the green Ready Light will cycle on and off during the cooking process, indicating that the correct temperature is being maintained.
8. Cook waffle for approximately 5 to 10 minutes, depending on recipe used. Once cooking has been completed, using Handle flip Waffle Maker back to its original position.

DO NOT OPEN THE WAFFLE MAKER FOR AT LEAST 5 MINUTES. OPENING IT TOO SOON WILL CAUSE UNDERBAKED WAFFLE TO SPLIT, MAKING IT DIFFICULT TO REMOVE.
9. Carefully lift Lid using Handle. If additional cooking is needed, simply close Lid and set kitchen timer for desired additional cooking time.
10. When waffle is cooked as desired, remove the Waffle Ring using the Waffle Ring Handle. Slowly lift waffle up using wooden or nylon spatula. Place waffle on plate and serve with desired toppings.
11. Always unplug appliance and allow to cool once you have finished cooking.


DO NOT USE METAL UTENSILS TO REMOVE THE WAFFLE, AS THEY MAY SCRATCH AND DAMAGE THE COOKING SURFACES.

IF COOKING MORE THAN 1 WAFFLE IN A SESSION, BE SURE TO CLOSE THE LID IN BETWEEN WAFFLES TO MAINTAIN PROPER COOKING TEMPERATURE.

WARNING: SURFACES ARE HOT. TO AVOID HARM, NEVER TOUCH THE COOKING SURFACE DIRECTLY, OR THE EXTERIOR PARTS OF THE WAFFLE MAKER WHILE COOKING, EXCEPT FOR THE HANDLES.


How to use Waffle Ring

INSERT WAFFLE RING

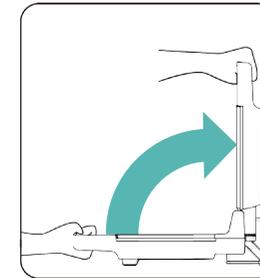


STEP 1

Ensure that Waffle Maker is unplugged and completely cool.

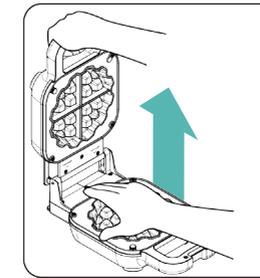

STEP 2

Open Lid, then, while hand is placed on Lower Plate, pull Handle upwards to lift Lid until you hear a click.

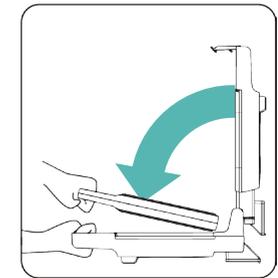


STEP 3

Place Waffle Ring on top of Lower Plate. You are now ready to make stuffed waffles.


REMOVE WAFFLE RING

BEFORE REMOVING WAFFLE RING, ENSURE WAFFLE MAKER HAS COMPLETELY COOLED DOWN.

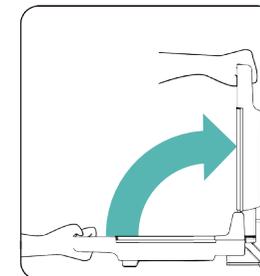


STEP 1

Open Waffle Maker, then take out Waffle Ring using Waffle Ring Handle.

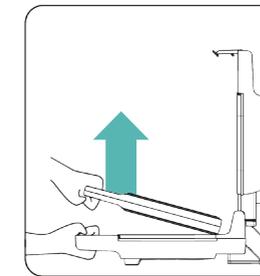

STEP 2

Remove Waffle Ring Handle.

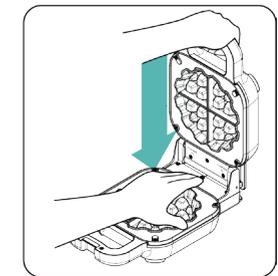

STEP 3

While holding Handle, press down until Lid moves down and you hear a click. Close Waffle Maker.