

deni

Microwave Potato Baker

models #60, 61 and 62

Before Using and Cleaning:

Place all parts in top rack dishwasher or clean with warm soapy water. Rinse and dry thoroughly.

Instructions:

1. Place the lid on the protective cover.
2. Place washed potatoes or food to be cooked on the base plate. (A)
3. Place the assembled protective cover on the base plate. (B)
4. Lock both sides by pressing down on the lock handles.



5. Bake in microwave for 5-10 minutes or according to your recipe.
6. Using potholders, take out and place on counter. Pull Lock Handles upward to **UNLOCK** Protective Cover from Base Plate. Use the hole on the lid to lift the cover off.



Guideline for Cooking

1 potato	5 min
2 potatoes	8 min
4 potatoes	10 min

IMPORTANT:
Use potholders
when removing
from microwave or
handling potatoes.

Customer Service:
1.888.321.5023
MADE IN CHINA

UNLOCK HELPFUL TIP

- You can open one Lock Handle to remove the cover. So no need to open both sides.
- Pull the Lock Handle out (see picture to the right). Try to open holding the top with one hand and use the other hand on the lock handle, using your thumb on top and fingers underneath (see picture).
- The more you unlock the lid, the easier it gets to remove.



NOTE: How long it takes to cook a baked potato in the microwave depends on how many you're cooking and the size of your potato. The cook time also varies depending upon the wattage of your microwave ovens.

The best way to microwave potatoes evenly is to cook for just a few minutes per side, instead of cooking for, say, 10 minutes at once.