

# MARC'S ON THE GRILL

## FOLDING CHARCOAL GRILL

#marcsonthegrill



Come be a part of the Marc's On The Grill community!

Find us on :    

@marcsonthegrill  
#marcsonthegrill

## IMPORTANT USER NOTES

- Keep this user manual for future reference.
- Outdoor use only.
- Do not move the product while in use.
- Please read this manual carefully and confirm that the grill has been properly installed. Failure to use this manual may result in serious personal injury and/or property damage.
- When installing the grill handle with care.
- Use only on hard, horizontal, non-flammable, stable surfaces (concrete, ground, etc.) that can support weight. Do not use on wood or other surfaces that may burn.
- A proper distance of 10 feet shall be maintained between the grill in use and flammable materials such as shrubs, trees, wood decks, fences, buildings, etc.
- Do not use gasoline, kerosene, or alcohol to light the charcoal. The use of these or similar products may cause an explosion which may cause serious bodily injury.
- Keep children and pets away from the grill.
- After each use, clean the grill thoroughly after it cools down.
- It is recommended to use 3.3-4.4lbs(1.5-2kgs) of charcoal at the beginning of each use.

## LIMITED 2 YEAR WARRANTY

This is the only express warranty for this product. The Sneaky Chef, Inc, warrants this product to be free from defects in material and workmanship for single-family household use for two years from the date of original purchase. Use of product for anything other than its intended purpose is also not warrantied. We exclude liability for all consequential damages. Your exclusive remedy is repair or replacement of the nonconforming product, at our option. All liability is limited to purchase price.

All other warranties, including any statutory warranty or condition of merchantability or fitness for a particular purpose, are disclaimed. You may have legal rights that vary depending on where you live. For repair or replacement, please contact our team with information on your product's proof of purchase and description of the problem. Customer Service Number: 844-689-0932


## HOW TO USE

### Step1:



Place the grill on a horizontal surface


### Step2 :

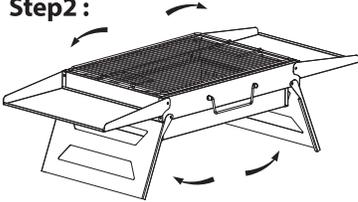

Follow the arrows by first fully opening the grill legs, then opening the grill top.


### Step3 :

Lift the cooking grid as shown by the arrow.

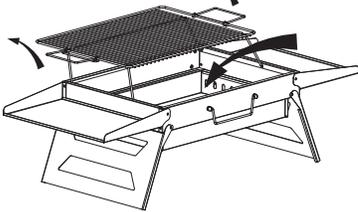

Insert charcoal or wood into the charcoal tray & proceed to ignite per material instructions recommended amount 3.3-4.4lbs(1.5-2kgs)


### Step4 :

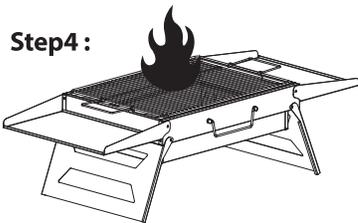

Once fire is ready to grill, lower the cooking grid back into place to begin grilling


## HOW TO CLEAN & STORE

### Step1:

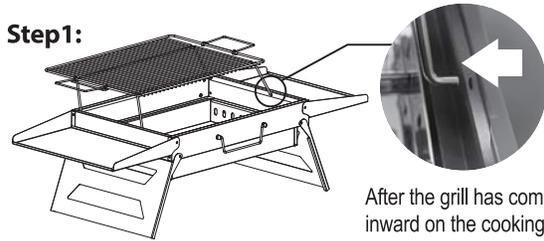


After the grill has completely cooled, push inward on the cooking grid legs to remove. Can be washed independently.

### Step2:

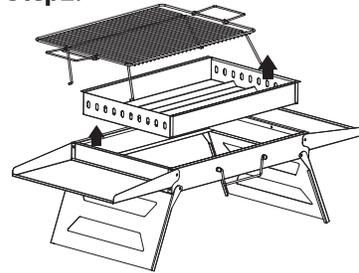

Lift the charcoal tray straight up & out to clean.

### Step3:

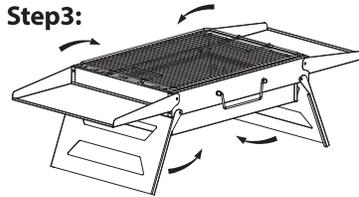

When clean, reinsert the charcoal tray & cooking grid. Close the unit accordingly to keep clean for next use.