



COMPACT MULTI-FUNCTION
ELECTRIC COOKER
USER GUIDE

IMPORTANT SAFEGUARDS

Basic safety precautions should always be followed when using electrical appliances, including the following:

1. **IMPORTANT:** Read all instructions carefully before first use.
2. Do not touch hot surfaces.
3. Use only on a level, dry and heat-resistant surface.
4. To protect against fire, electric shock and injury to persons, do not immerse cord, plug or the appliance in water or any other liquid.
5. Close supervision is necessary when the appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow unit to cool before putting on or taking off parts and before cleaning the appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
8. The use of accessory attachments not recommended by appliance manufacturer may result in fire, electrical shock or injury.
9. Do not use outdoors.
10. Do not let cord touch hot surfaces or hang over the edge of a counter or table.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. Do not use the appliance for other than its intended use.
13. Extreme caution must be used when moving the appliance containing rice, hot oil or other liquids.
14. Do not touch, cover or obstruct the steam vent on the top of the rice cooker as it is extremely hot and may cause scalding.
15. Use only with a 120V AC power outlet.
16. Always unplug from the base of the wall outlet. Never pull on the cord.
17. The rice cooker should be operated on a separate electrical circuit from other operating appliances. If the electrical circuit is overloaded with other appliances, the appliance may not operate properly.
18. Always make sure the outside of the Ceramic Nonstick Coated Bowl is dry prior to use. If the Ceramic Nonstick Coated Bowl is returned to the cooker when wet, it may damage or cause the product to malfunction.
19. Use extreme caution when opening the lid during or after cooking. Hot steam will escape and may cause scalding.
20. Rice should be left in the Ceramic Nonstick Coated Bowl with the Keep Warm mode on for no more than 3 hours.
21. To prevent damage or deformation, do not use the Ceramic Nonstick Coated Bowl on a stovetop or burner.
22. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to OFF, then remove plug from wall outlet.
23. To reduce the risk of electrical shock, cook only in the removable Ceramic Nonstick Coated Bowl provided.
24. Do not wrap or tie cord around appliance.
25. Intended for countertop use only.
26. **WARNING:** Spilled food can cause serious burns. Keep appliance and cord away from children. Never drape cord over edge of counter and never use outlet below counter.
27. Do not use for deep frying.

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord. Longer extension cords may be used if care is exercised. If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or animals or tripped over. If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.

GROUNDING INSTRUCTIONS

This appliance must be grounded while in use to protect the operator from electrical shock. The appliance is equipped with a 3-conductor cord and a 3-prong grounding type plug to fit the proper grounding-type receptacle.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

HEALTHY COOKING STARTS WITH GREENPAN

Since inventing healthy ceramic nonstick in 2007, we've dedicated ourselves to unique advances that make cooking better for everyone. From healthy ceramic nonstick cookware to revolutionary home appliances, our groundbreaking designs deliver remarkable performance so you can focus on the flavor. Enjoy!

CONTENTS

- 04 Before First Use**
- 04 Parts**
- 04 Control Panel**
- 05 Operation**
- 07 Quick Tips**
- 08 Cleaning/Maintenance**
- 08 Troubleshooting**
- 09 Warranty**

BEFORE FIRST USE

1. Read all instructions and important safeguards.
2. Remove all packaging materials and check that all items have been received in good condition.
3. Tear up all plastic bags and dispose of properly as they can pose a suffocation or choking risk to children.
4. Wash all accessories in warm, soapy water. Rinse and dry thoroughly.
5. Remove the inner Ceramic Nonstick Coated Bowl and clean with warm, soapy water. Rinse and dry thoroughly before returning to cooker.
6. Wipe unit clean with a damp cloth.

NOTE: Do not use harsh abrasive cleaners, scouring pads or products that are not considered safe to use on nonstick coatings. If washing in the dishwasher, a slight discoloration to the inner Ceramic Nonstick Coated Bowl and accessories may occur. This is cosmetic only and will not affect performance.

NOTE: Cooking times will vary depending on the type of rice, room temperature, water temperature, water amount, etc.

- Keep warm should be used for a maximum of 3 hours to prevent rice from burning.

CONTROL PANEL

Time Display

This Display will show the amount of time that remains on the mode you have chosen. For some modes, Time will not be displayed but the Display will indicate that the product is on and mode has started.

Mode Selection Dial

Use the Dial to change modes. If selected mode allows for Time and Temp to be adjusted, the dial can be turned clockwise or counterclockwise to modify their default settings.


Buttons:

Temp

Use this Button to modify temperature on certain modes. Press Temp when mode is selected and use mode selection dial to modify temperature.

For Rice and Slow Cook modes press Temp to cycle between different cooking options. The functions selection dial is not needed to go between different cooking options.

PARTS

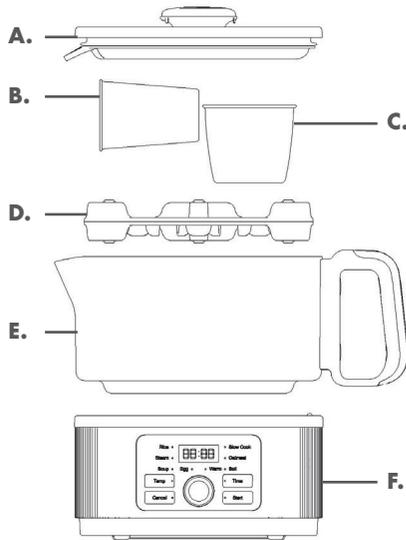

- A.** Lid
- B.** Egg Measuring Cup
- C.** Rice Measuring Cup
- D.** Steamer Insert
- E.** Ceramic Nonstick Coated Bowl
- F.** Body



Cancel

Press Cancel Button to stop mode.

Time

Use this button to modify Time. Press Time when mode is selected and use mode selection dial to modify time. Timer intervals will vary depending on mode selected.

NOTE: Not all modes have time selection.

Start

Press Start to Begin Mode.

OPERATIONS

PLEASE NOTE: A message of “no pot” will appear on screen if there is not enough weight in the Ceramic Nonstick Coated Bowl. Please add more ingredients or rotate handle to the right side of unit. Reference Below:



1. Add ingredients into the bowl.
2. Rotate mode selection dial to desired mode.
3. Press “START” to begin mode.
 - a. After selecting the mode, press “START” button. The display window displays the cooking status or time.
4. If you want to stop cooking at any time, press the CANCEL button. Afterwards, you can exit the mode and enter standby mode.
5. You can press Time or Temp (on applicable functions) during cooking modes if you want to adjust. After Time or Temp is selected (on applicable functions) turn the dial to adjust. Wait for 6 seconds. The Compact Multi-Function Electric Cooker will accept new change to Time or Temp.
6. Cooking ends.
 - a. The Compact Multi-Function Electric Cooker will beep three times and enter Keep Warm function, excluding Steam, Egg, and Boil functions for up to 8 hours.

After this time has been completed, the Compact Multi-Function Electric Cooker will beep three times then “End” will be displayed, and then will return to the initial state of “00:00” after 1 min.
7. Turn off product.
 - a. Press CANCEL and unit will go into standby mode and then cord can be unplugged.

STEAM

1. Rotate mode selection dial to choose STEAM.
2. Press TIME to adjust cooking time. Rotate dial clockwise to increase by 1 minute and counterclockwise to reduce time. The cooking time ranges from 5-25 minutes.
3. Place the steamer in the Ceramic Nonstick Coated Bowl.
 - a. Add water to the Ceramic Nonstick Coated Bowl- Do not exceed the steamer insert with water. Suggest filling to Rice Line 1.
4. Press START to steam.
5. The STEAM mode will begin Pre-Heating. PrE will display on Time Display Screen. Once Pre-Heating is complete, the Compact Multi-Function Electric Cooker will beep 1 time and begin cooking. The timer will begin to countdown.
6. Once Cooking Cycle has completed and timer has expired the Compact Multi-Function Electric Cooker will beep 3 times and the time display will show end.

BOIL

1. Rotate mode selection dial to choose BOIL.
2. Press TIME to adjust cooking time. Rotate dial clockwise to increase by 1 minute and counterclockwise to reduce time. The cooking time ranges from 5-40 minutes.
3. Press START to boil.
4. The Boil Mode will begin Pre-Heating. PrE will display on Time Display Screen. Once Pre-Heating is complete the Compact Multi-Function Electric Cooker will beep 1 time and begin cooking. The timer will begin to countdown.
5. Once Cooking Cycle has completed and timer has expired, the Compact Multi-Function Electric Cooker will beep 3 Times and the time display will show End.

NOTE: There is no automatic keep warm on boil mode.

SLOW COOK

1. Rotate mode selection dial to choose SLOW COOK mode.
2. Press TIME to adjust cooking time. The cooking time ranges from 1 to 8 hours.


3. Press Temp button to change from Hi (Slow cook High) to lo (Slow Cook Low). Slow Cook Mode will default to Hi.
4. Press START to begin SLOW COOK mode.
5. Once 0:00 is reached the Cooker will beep 3 times and cooking mode will end. The Multi Cooker will go into Keep Warm for up to 8 Hours.

RICE MODE

1. Rotate mode selection dial to choose Rice.
2. Press Temp button to change from Wht (White Rice) and brn (Brown rice). Rice Mode will default to Wht.
3. Add desired amount of rice with the rice measuring cup provided to the bowl and fill the bowl with the with water to the corresponding bowl markings on the bowl. For example, for 2 cups of uncooked white rice, fill with water to water-level marking "2". **Caution:** Be careful not to add too much water as it may cause the Multi Cooker to boil over. **Note:** Taste/ hardness will vary depending on the quality / type of rice and water filled. For softer, fluffier rice, add a little more water. For firmer rice, use less water.
4. Time will not need to be adjusted as it automatically calculates when completed.
5. Press START to begin Rice mode.
When nearing completion the Multi Cooker will countdown from 5 minutes. Once 0:00 is reached the Cooker will beep 3 times and cooking mode will end. The Multi Cooker will go into Keep Warm for up to 8 Hours.

EGG MODE


1. Rotate mode selection dial to choose EGG.
2. Place the steamer in the Ceramic Nonstick Coated Bowl (egg side up, reference below).

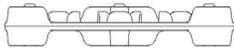


3. Poke a small hole in the bottom of the egg with the pin on the end of the measuring cup. Then, place the puncture hole of the egg facing upwards on the steaming rack.

Egg Water Volume


4. Fill the measuring cup to the desired doneness of your eggs as well as number of eggs being cooked (1,3,5 or 7). The Egg Cooker Measuring Cup shows three sets of markings: Soft Boiled Eggs, Medium Boiled Eggs, Hard Boiled Eggs.

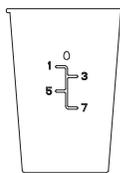

Hard Boiled Eggs

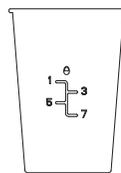

Medium Boiled Eggs

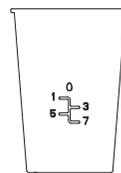

Soft Boiled Eggs

A. **Soft Boil:** For soft boiled eggs reference the egg icon and numbers on the lowest part of the egg cooker cup provided. Fill the water to the number of eggs being cooked.

B. **Medium Boil:** For medium boiled eggs reference the egg icon and numbers in the middle of the egg cooker cup provided (between soft and hard boiled icon). Fill the water to the number of eggs being cooked.

C. **Hard Boil:** For hard boiled eggs reference the egg icon and numbers at the top of the egg cooker cup provided. Fill the water to the number of eggs being cooked.

5. Pour in the water from the egg measuring cup and close the lid
6. To begin cooking press START.
7. Once Cooking Cycle has completed the Compact Multi-Function Electric Cooker will beep 3 times and the time display will show End. (The water level of the egg cooker cup will determine the amount of time it takes to finish cooking mode.)

SOUP

1. Rotate mode selection dial to choose SOUP.
2. Press TIME to adjust cooking time. Rotate dial clockwise to increase by 30 minutes and counterclockwise to reduce time. The cooking time ranges from 1:00-4:00 minutes.
3. Press Temp to adjust cooking temperature. Rotate dial clockwise to choose between 3 temperature levels. 170°F, 195°F, 212°F. The Compact Multi-Function Electric Cooker will default to 195°F.
4. After Time and Temp are selected press START to begin SOUP mode.
5. Once Cooking Cycle has completed and timer has expired, the Compact Multi-Function Electric Cooker will beep 3 times and will go into Warm mode for up to 8 Hours.

OATMEAL

Please Note: Cooking Steel Cut Oats is recommended.

1. Rotate mode selection dial to choose Oatmeal.
2. Press TIME to adjust cooking time. Rotate dial clockwise to increase by 1 minute and counterclockwise to reduce time. The cooking time ranges from 0:10-0:40 minutes.
3. Add your ingredients:
For Oatmeal Mode the Water to Oat ratio is 2.5 (water) to 1 (Dry ingredients). Use the Rice cooker Cup provided to measure.

Oatmeal Amount	Water Amount
1/2 Cup	1 1/4 Cup
1 Cup	2 1/2 Cup
1 1/2 Cup	3 3/4 cup
2 Cup	5 Cup

4. Press START to begin OATMEAL mode.
5. Once Cooking Cycle has completed and timer has expired, the Compact Multi-Function Electric Cooker will beep 3 times and will go into Warm Mode for up to 8 Hours.

WARM

1. Rotate mode selection dial to choose Warm.
2. Press START to begin Warm mode.
3. KEEP WARM mode will count up to 8 Hours. Once Warming Cycle has completed and timer has expired the Compact Multi-Function Electric Cooker will beep 3 times and the time display will show End.

TIPS

- 1 Rice Measuring Cup is about 2/3 U.S. Cup (Note measuring cup is included with this product)
- As there are many kinds of rice available, rice/water measurements may vary. If too firm, add more water, if too soft use less water.
- Rinse rice prior to cooking to remove excess bran and starch. This will improve taste and result in cleaner rice.
- The Compact Multi-Function Electric Cooker can be used as a Kettle. Use Boil mode and add your favorite teas, coffee and more!
- Add Lid to the bowl while preheating BOIL mode. This will get to boiling temperature faster. Remove the Lid while Boil Mode is on to avoid overflow.

MODES

Mode	Temp Selection	Default Temp	Time Range	Default Time	Automatic Keep Warm
Rice	2 selections "Wht" for white rice "brn" for brown rice	N/A	Automatically adjust based on water and rice amount. Timer will Countdown fro 5 minutes when almost done.	N/A	Yes
Steam	N/A	N/A	5 to 25 min	00:10	No
Soup	170°F, 195°F 212°F	195°F	1 to 4 Hrs	01:30	Yes
Egg	N/A	N/A	N/A	N/A	No
Warm	N/A Approx 165°F	N/A	Counts Up to 8 Hours	N/A	No
Boil	N/A	N/A	5 to 40 min	00:12	No
Oatmeal	No	N/A	Selectable from 10 to 40 min	00:15	Yes
Slow Cook	Hi and Lo	Hi	Selectable from 1 to 8 Hrs	04:00	Yes

CLEANING & MAINTENANCE

⚠ Be sure to unplug the power plug from the wall and wait for the main body of the Compact Multi-Function Electric Cooker to cool before cleaning. Otherwise, it may cause electric shock, fire, burns, and injuries.

Do not use cleaning powder, brushes, cleaning agents etc. After finishing cleaning store product with Lid on.

Housing

- Wipe with damp cloth.

Ceramic Nonstick Coated Bowl, Lid, Steamer Insert, Rice Measuring Cup & Egg Measuring Cup

- Please use soft items such as sponges to clean.

Sensor, Heating Plate

- When there is dirt or debris, gently wipe sensor and heating plate with a damp cloth.

Part	Dishwasher Safe	Wipe with Damp Cloth
Lid	✓	✓
Ceramic Nonstick Coated Bowl	✓	✓
Egg Measuring Cup	✓	✓
Rice Measuring Cup	✓	✓
Steamer Insert	✓	✓
Body	✗	✓
Sensor and Heating Plate	✗	✓

TROUBLESHOOTING

Issue	Cause	Solution
Rice not cooking properly	Incorrect Water Volume Uneven Bowl Interference in heating plate	Check if the water level used and rice volume are correct. Make sure bowl is placed flat to the heating plate. Make sure to clean the heating plate of debris when product is OFF.
"no Pot" message on screen	Not enough weight in the bowl to sense the item or handle is not on correct side of the sensor. Or Dirt and debris is blocking the sensor.	A way to solve for this is adding additional ingredients or placing the handle on the right side of the product so sensor can register the pot. If this does not solve for the issue check if there is any dirt or debris located on the sensor on the top right hand side of the Compact Multi- Function Cooker Body. If issue persist contact customer service.
Compact Cooker does not turn on	Power plug	Check whether the power plug is connected to a functional, grounded electrical outlet
Small scratch mark or dent appear on cooking surface or base of the bowl	Normal use	Chipping is a natural occurrence with Ceramic Nonstick due to the fact that is very hard. If the chip is more than 5mm, please contact customer service.
Large scratch mark or dent mark appear on cooking surface	N/A	Contact Customer Service

LIMITED WARRANTY

GreenPan Electric are covered by a limited warranty against defects in materials and workmanship, beginning on the date of purchase and lasting for two years. If your GreenPan Electric product has a defect during the warranty period, The Cookware Company (USA), LLC will either repair or replace the product. Further information on the warranty claim process, exclusions from warranty coverage, and other terms can be found in the complete limited warranty for this product, available online at greenpan.us/warranty.

TERMS OF SALE; ARBITRATION

The terms on which The Cookware Company (USA), LLC sells GreenPan Electric are available online at greenpan.us/pages/terms-of-sale (the "Terms"). The Terms contain very important information regarding your rights and obligations, as well as conditions, limitations, and exclusions that may apply to you. Please read them carefully.

In particular, the Terms provide that, by your purchase of this product, you and The Cookware Company (USA), LLC are agreeing to give up any rights to litigate in a court or before a jury, or to participate in a class action or representative action with respect to a claim. Other rights that you would have if you went to court may also be unavailable or limited in arbitration. Any claim, dispute, or controversy between you and The Cookware Company (USA), LLC arising from or relating in any way to your purchase of products or services will be resolved exclusively and finally by binding arbitration.

The arbitration will be administered by the American Arbitration Association ("AAA") in accordance with the Consumer Arbitration Rules (the "AAA Rules") then in effect, except as modified hereby. (The AAA Rules are available at adr.org or by calling the AAA at 1-800-778-7879.) The Federal Arbitration Act will govern the interpretation and enforcement of this arbitration and waiver provision.

The Cookware Company (USA), LLC will be responsible for the AAA filing fee of any such proceeding. Other than your right to pursue a claim in small claims court, as described in the Terms, the arbitrator will have exclusive authority to resolve any dispute relating to arbitrability and/or enforceability of this arbitration provision, including any unconscionability challenge or any other challenge that the arbitration provision or these Terms are void, voidable or otherwise invalid. The arbitrator will be empowered to grant whatever relief would be available in court under law or in equity. Any award of the arbitrator(s) will be final and binding on each of the parties and may be entered as a judgment in any court of competent jurisdiction. Attorney fee shifting in this case is governed by the Terms. You agree to an arbitration on an individual basis. In any dispute, NEITHER YOU NOR THE COOKWARE COMPANY (USA), LLC WILL BE ENTITLED TO JOIN OR CONSOLIDATE CLAIMS BY OR AGAINST OTHER CUSTOMERS IN COURT OR IN ARBITRATION OR OTHERWISE PARTICIPATE IN ANY CLAIM AS A CLASS REPRESENTATIVE, CLASS MEMBER OR IN A PRIVATE ATTORNEY GENERAL CAPACITY. The arbitral tribunal may not consolidate more than one person's claims and may not otherwise preside over any form of a representative or class proceeding. The arbitral tribunal has no power to consider the enforceability of this class arbitration waiver and any challenge to the class arbitration waiver may only be raised in a court of competent jurisdiction.

If any provision of the arbitration agreement described herein and in the Terms is found unenforceable, the unenforceable provision will be severed and the remaining arbitration terms will be enforced.

