



RECHARGEABLE AUTOMATIC WINE OPENER




To my fellow home chefs,

I am incredibly excited to bring new kitchen innovations to your home. With the Zakarian by Dash Collection, we have created high quality products that will help you cook like a pro. Have fun!

Cheers,

A handwritten signature in black ink, appearing to read 'Jerry Zakarian'.

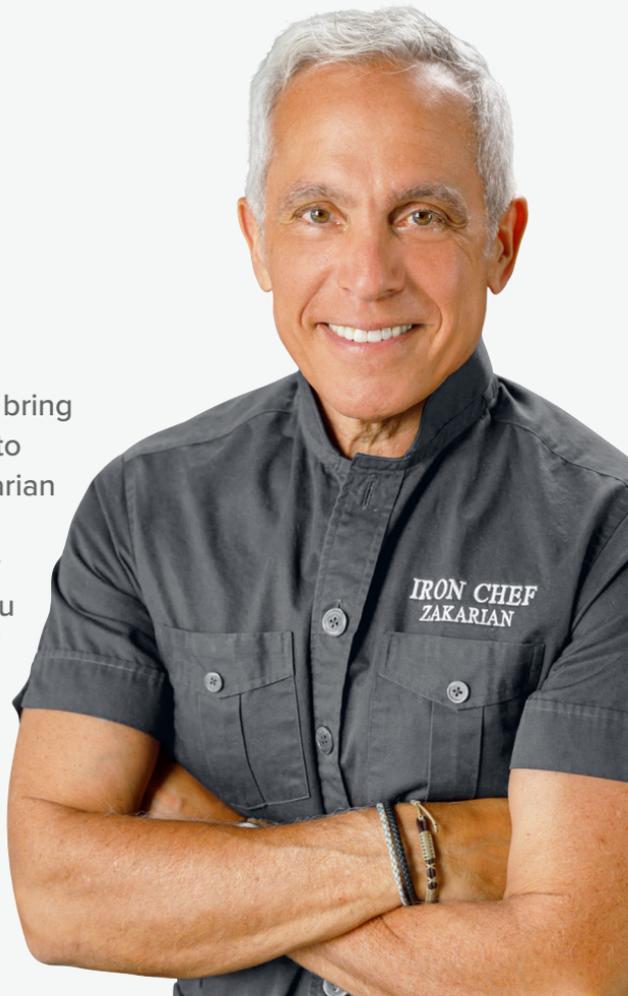

CONTENTS

Important Safeguards.....	4-5
Parts & Features.....	6
Using the Wine Opener.....	7
Cleaning & Maintenance.....	9
About the Wine Opener Batteries.....	11-13
Customer Support & Warranty.....	14-15

IMPORTANT SAFEGUARDS

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION MANUAL.

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- This Wine Opener is intended for household use only.
- Close supervision is necessary when any appliance is used by or near children.
- This Wine Opener is intended to extract the corks from standard wine bottles.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Using a charger other than the one provided may result in damage to the appliance unless it meets the correct specifications.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 Monday-Friday or by email at support@storebound.com.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- Do not let the cord touch hot surfaces, or hang over the edges of tables or counters.
- This appliance can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience or knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- StoreBound shall not accept liability

for damages caused by improper use of the appliance.

- Improper use of the appliance can result in property damage or even in personal injury.
- Do not immerse the appliance in water or any other liquid.
- For indoor use only. Do not expose the Wine Opener to rain or other extreme conditions.
- Never force the Wine Opener onto a bottle or attempt to touch the mechanism or corkscrew spiral. Only hold the Wine Opener by its plastic housing.
- This appliance contains a rechargeable battery. Do not dispose of the product on a fire as this may cause an explosion.
- To avoid electric shock do not open the casing. There are no user serviceable parts inside.
- CAUTION: The corkscrew is sharp. Keep body parts (e.g. fingers) and utensils away from the operating end of the Wine Opener.
- This Wine Set contains rechargeable

batteries. Before you dispose of your Wine Opener, you should remove the batteries and dispose of them responsibly. To take out the battery pack remove the screws from the rear cover. Dispose of the rechargeable batteries and product responsibly.

- The WEEE directive (Waste Electrical and Electronic Equipment; 2002/96/EC) has been put in place to ensure that products are recycled using best available treatment, recovery and recycling techniques to ensure human health and high level environment protection. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- Do not mix products bearing the crossed out bin symbol with your general household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION MANUAL.



Foil Cutter



Charging Cord

1. To open a bottle of wine, place the bottle on a stable surface and hold it tightly. Some bottles may require removing foil prior to opening. Use the Foil Cutter by securing the metal blades of the Cutter around the bottle's foil wrapper and rotating the Cutter 90° to remove the foil.
2. Once free of foil, with the bottle placed on a stable surface, secure the Corkscrew of the Wine Opener onto the cork of the bottle. Press and hold the Lower Button on the Main Body of the Wine Opener and allow the Corkscrew to remove the cork. There is no need to apply any additional pressure as the Wine Opener will automatically remove the cork. A blue Indicator Light will illuminate to indicate that Wine Opener is working. When the cork is completely inside the Main Body of the appliance, stop pressing the Lower Button on the Main Body.
3. Set the wine bottle aside. To free the removed cork from the Wine Opener, press and hold the Upper Button on the Main Body. The Corkscrew will begin reversing while a red Indicator Light will illuminate to indicate it is working. Once the cork is outside the main body of the Wine Opener, stop pressing the Upper Button and remove the cork from the Corkscrew by hand.

NOTE: To begin using, charge the Wine Opener for eight hours. After first charge, the Wine Opener should fully charge in two and a half hours.

CLEANING & MAINTENANCE



Clean the Main Body of the Wine Opener with a damp cloth and dry thoroughly.

The Wine Opener is NOT dishwasher safe.

Store the Wine Opener in a dry place away from moist or corrosive materials.

Do not submerge the Wine Opener in water or other liquids.

Do not expose the Wine Opener to high-heat environments or extreme temperatures as this may damage it or decrease its battery life.





ABOUT THE WINE OPENER BATTERIES

Charging the Batteries

To begin using, charge the Wine Opener for eight hours. After first charge, the Wine Opener should fully charge in two and a half hours.

The Wine Opener comes with a USB-C Charging Cord. This can be plugged into an adapter and then into a wall outlet or other charging port.

When charging, the clear base of the Wine Opener will illuminate blue. While charging, flashing lights will be visible at the top of the Wine Opener that indicate the power level of battery.

A full charge of two and a half hours charge can open approximately 40 bottles of wine. To open a single bottle, charge for 90 seconds.

Recharge the Wine Opener approximately every two months to ensure longevity of the battery.



ABOUT THE WINE OPENER BATTERIES

Disposal Method

Rechargeable batteries built into a machine, tool, toy or other product (i.e., rechargeable flashlight) must be handled as hazardous waste when the item no longer holds a charge.

Replacement Method

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

DREAM TEAM IN YOUR KITCHEN

Chef Geoffrey Zakarian has teamed up with Dash, a leading manufacturer of cookware and kitchen tools, to bring you high-quality professional grade products specifically designed for home use. This collection provides a combination of innovation, craftsmanship, and culinary expertise that will elevate your cooking endeavors. With groundbreaking products, Zakarian by Dash makes cooking like a pro at home a reality.



DOUBLE YOUR WARRANTY



bydash.com/feelgood

CUSTOMER SUPPORT



bydash.com/help

Contact Customer Support regarding repairs to the product. We welcome and value all concerns and questions from our customers. Please do not hesitate to contact us for product support, warranty, and maintenance related questions directly at: **1-800-898-6970** from Monday-Friday, or by email at **zakarian@bydash.com**.

REPAIRS

Do not attempt to repair the product yourself under any circumstances. Contact Customer Support regarding repairs to the product.

GZ_Rechargable Wine Opener_ K98192_V2
Made in China



This product has passed food safety testing in accordance with FDA guidelines.

1 YEAR LIMITED WARRANTY

Your Zakarian product by Dash is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, Dash will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. Dash will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs will be prepaid by the purchaser.

Send all inquiries to zakarian@bydash.com. There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. DASH SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Power Rating: 25W
Input 5V, 2000mA
Battery Capacity: 500mAh (1.85Wh)

**PLEASE NOTE:
THE WINE OPENER
IS NOT DISHWASHER SAFE**



For product tips and cooking tricks, visit
[@geoffreyzakarian](#) | [@zakariankitchen](#) | [@bydash](#)

For customer service inquiries, contact 1-800-898-6970 | zakarian@bydash.com