

55MV314X
32MV304X

STOP!

*Thank you for choosing
Magnavox.*

Need help fast?

*Read your Owner's Manual first for quick tips that make using your Magnavox product more enjoyable. If you have read your instructions and still need assistance, you may access our online help at www.magnavox.com/support or call **1 866 341 3738** while with your product (and Model / Serial number)*

ALTO!

Gracias por escoger Magnavox.

Necesita ayuda inmediata?

*Lea primero el Manual del Propietario, en donde encontrará consejos que le ayudarán a disfrutar plenamente de su producto Magnavox. Si después de leerlo aún necesita ayuda, consulte nuestro servicio de asistencia en línea en www.magnavox.com/support o llame al teléfono **1 866 341 3738** y tenga a mano el producto (y número de model / serial)*

ARRÊT!

*Magnavox vous remercie de
votre confiance.*

Besoin d'une aide rapide?

*Manuel du Propriétaire regorgent d'astuces destinées à simplifier l'utilisation de votre produit Magnavox. Toutefois, si vous ne parvenez pas à résoudre votre problème, vous pouvez accéder à notre aide en ligne à l'adresse www.magnavox.com/support ou formez le **1 866 341 3738** Veillez à avoir votre produit à portée de main (et model / serial nombre)*

English

Español

Français

Register Online at www.magnavox.com/support today to get the very most from your purchase.

Registering your model with MAGNAVOX makes you eligible for all of the valuable benefits listed below, so don't miss out.
Register Online at www.magnavox.com/support to ensure:

*Product Safety Notification

By Registering your Product, you'll receive notification - directly from the manufacturer - in the rare case of a Product Recall or Safety Defect.

*Additional Benefits

Registering your Product guarantees that you'll receive all of the Privileges to which you're Entitled, including special money-saving offers.

Know these **safety** symbols



The caution marking is located on the rear or bottom of the cabinet.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the apparatus's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the apparatus.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

MAGNAVOX

Visit our World Wide Web Site at www.magnavox.com/support

CHILD SAFETY:

PROPER TELEVISION PLACEMENT MATTERS

THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions – new and old- must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

TUNE IN TO SAFETY

- **ALWAYS** follow the manufacturer's recommendations for the safe installation of your television.
- **ALWAYS** read and follow all instructions for proper use of your television.
- **NEVER** allow children to climb on or play on the television or the furniture on which the television is placed.
- **NEVER** place the television on furniture that can easily be used as steps, such as a chest of drawers.
- **ALWAYS** install the television where it cannot be pushed, pulled over or knocked down.
- **ALWAYS** route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

WALL OR CEILING MOUNT YOUR TELEVISION

- **ALWAYS** contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- **ALWAYS** use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- **ALWAYS** follow all instructions supplied by the television and mount manufacturers.
- **ALWAYS** make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- **ALWAYS** place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- **NEVER** place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- **ALWAYS** make sure your older CRT television does not hang over the edge of your furniture.

CE.org/safety



Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments / accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer; or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.




13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Note to the CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Example of Antenna Grounding as per NEC - National Electric Code

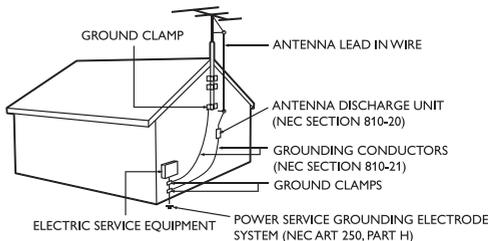

Wall Mount Bracket Kit

	Brand	Model #	Screw dimension
55MV314X	SANUS	PLA50B	M6 x 0.472" (12mm)
32MV304X		SAN18B	M4 x 0.472" (12mm)

- The recommended Wall Mount Bracket Kit (sold separately) allows the mounting of the TV on the wall.
- For detailed information on installing the wall mount, refer to the Wall Mount Instruction Book.
- Funai is not responsible for any damage to the product or injury to yourself or others if you elect to install the TV Wall Mount Bracket or mount the TV onto the Bracket on your own.
- The Wall Mount Bracket must be installed by experts.

Funai is not liable for these types of accidents or injury noted below.

- Install the Wall Mount Bracket on a sturdy vertical wall.
- If installed onto a ceiling or slanted wall, the TV and Wall Mount Bracket may fall which could result in a severe injury.
- Do not use screws that are longer or shorter than their specified length. If screws too long are used this may cause mechanical or electrical damage inside the TV set. If screws too short are used this may cause the TV set to fall.
- Do not fasten the screws by excessive force. This may damage the product or cause the product to fall, leading to an injury.
- For safety reasons use 2 people to mount the TV onto a Wall Mounting Bracket.
- Do not mount the TV onto the Wall Mounting Bracket while your TV is plugged in or Turned On. It may result in an electrical shock injury.

When installing the unit on the wall, allow this much space.

Top:	11.8 inches (30cm)
Left and right side:	5.9 inches (15cm)
Bottom:	3.9 inches (10cm)

1 Notice

MAGNAVOX is a registered trademark of Philips North America Corporation and is used by Funai Electric Co., Ltd. and Funai Corporation, Inc. under license from Philips North America.

Funai reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The material in this Owner's Manual is believed adequate for the intended use of the system. If the product or its individual modules or procedures are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. Funai warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied.

Funai cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Funai will be adapted and published on the Funai support website as soon as possible.

Pixel characteristics

This LCD product has a high number of color pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

Warranty

No components are user serviceable. Do not open or remove covers to the inside of the product. Repairs may only be done by Service Centers and official repair shops. Failure to do so shall void any warranty, stated or implied.

Any operation expressly prohibited in this manual, any adjustments or assembly procedures not recommended or authorized in this manual shall void the warranty.

Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B Digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Declaration of Conformity

Trade Name : MAGNAVOX
Responsible Party : FUNAI CORPORATION, Inc.
Model : 55MV314X, 32MV304X
Address : 19900 Van Ness Avenue, Torrance, CA
90501 U.S.A.
Telephone Number : 1 866 341 3738

Modifications

This apparatus may generate or use radio frequency energy. Changes or modifications to this apparatus may cause harmful interference unless the modifications are expressly approved in the Owner's Manual.

The user could lose the authority to operate this apparatus if an unauthorized change or modification is made.

Cables

Connections to this device must be made with shielded cables with metallic RFI / EMI connector hoods to maintain compliance with FCC Rules and Regulations.

Canadian notice

CAN ICES-3 (B)/NMB-3 (B)
Standard Television Receiving Apparatus, Canada BETS-7 / NTMR-7.

The following FCC/IC RSS-Gen is description of Wireless LAN adapter.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Country Code Statement

For product available in the USA market, only channel 1~11 can be operated. Selection of other channels is not possible.

To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that do not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements and should be avoided.

FCC Radiation Exposure Statement

This equipment is compliance with SAR for general population/ uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C. This equipment should be installed and operated with minimum distance 2.5cm between the radiator & your body.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Copyright

All other registered and unregistered trademarks are the property of their respective owners.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see <http://patents.dts.com>.
Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS TruSurround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.



ENERGY STAR® is a joint program of the U.S. Environmental Protection Agency and the U.S. Department of Energy helping us all save money and protect the environment through energy efficient products and practices.

Consumer Notice:

This TV has been set to maximize energy efficiency while delivering the best possible picture using the factory installed home mode settings.

Changing or enabling other features in this TV (e.g. brightened backlighting) will possibly increase energy consumption beyond the original ENERGY STAR® qualified limits.



VUDU™ is a trademark of VUDU, Inc.



Netflix is available in certain countries. Streaming membership required. More information at www.netflix.com.



YouTube and the YouTube logo are trademarks of Google Inc.



PANDORA, the PANDORA logo, and the Pandora trade dress are trademarks or registered trademarks of Pandora Media, Inc. Used with permission.


Portions of this software are copyright © The FreeType Project (www.freetype.org).

The American Academy of Pediatrics discourages television viewing for children younger than two years of age.

2 Important

Positioning the TV

- Large screen TVs are heavy, 2 people are required to carry and handle a large screen TV.
- Make sure to hold the upper and bottom frames of the Unit firmly as illustrated.
- Install the Unit in a horizontal and stable position.
- Do not install the Unit in direct sunlight or in a place subject to dust or strong vibration.
- Depending on the environment, the temperature of this Unit may increase slightly. This is not a malfunction.
- Avoid a place with drastic temperature changes.
- Do not place anything directly on top or bottom of the Unit.
- Depending on your external devices, noise or disturbance of the picture and / or sound may be generated if the Unit is placed too close to them. In this case, please ensure enough space between the external devices and the Unit.
- Do not insert the AC power cord into the power socket outlet before all the connections are made.
- Ensure that you always have easy access to the AC power cord or plug to disconnect the TV from the power.
- Before you move the TV, disconnect attached cables to prevent damage to connectors.
- Be sure to unplug the AC power cord from the AC outlet before moving or carrying the Unit.

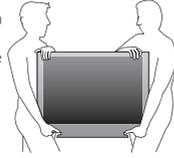

Regulatory Notices

Do not place the Unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing or climbing on it. A falling Unit can cause serious injury or even death.


This apparatus should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.

Make sure to leave a space of 4 inches (10cm) or more around this apparatus.

Press to turn the Unit on and go into standby mode.

To completely turn off the Unit, you must unplug the AC power cord.

Disconnect the AC plug to shut the Unit off when trouble is found or not in use. The AC plug shall remain readily available.

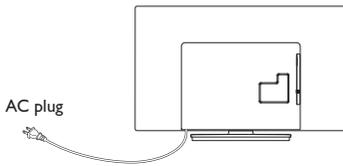

Never use a gas duster on this TV.

The gas trapped inside of this Unit may cause ignition and explosion.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING: Batteries (battery pack or battery installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

WARNING: To prevent injury, this apparatus must be securely attached to the furniture / wall in accordance with the instructions. Tipping, shaking or rocking the unit may cause injury / death.

Environmental Care



The packaging of this product is intended to be recycled.

Contact your local authorities for information about how to recycle the packaging.

For product recycling information, please visit - www.magnavox.com



End of Life Directives

Magnavox pays a lot of attention to produce environmental-friendly products in green focal areas. Your new TV contains materials which can be recycled and reused. At the end of its life, specialized companies can dismantle the discarded TV to concentrate the reusable materials and to minimize the amount of materials to be disposed of. Please ensure you dispose of your old TV according to local regulations.

Disposal of Used Batteries

The Batteries supplied do not contain the heavy metals mercury and cadmium. Nevertheless, in many areas Batteries may not be disposed of with your household waste. Please ensure you dispose of Batteries according to local Regulations.


Downloading an Electronic Copy

To obtain a more detailed electronic copy of this Owner's Manual :

- 1 Point your browser to : <http://www.magnavox.com/support/download>
- 2 Enter the model number in the "Type the Model Number.." field.
- 3 Click the desired Manual to be downloaded.

Preparing to Move/Ship the Unit

Please pack the Unit properly by following the Diagram on the Carton.

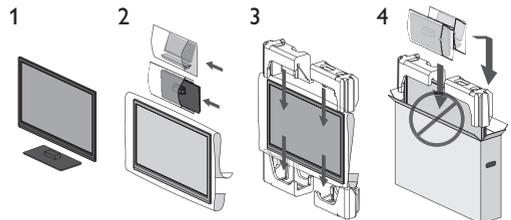

- Ⓢ To avoid damage to the Screen, do not pack the stand on the same side as the TV screen.

Contents

1	Notice	4
2	Important	6
	Positioning the TV	6
	Regulatory Notices	6
	Environmental Care	6
	Downloading an Electronic Copy	6
	Preparing to Move/Ship the Unit	6
3	Getting Started	7
	Connecting Antenna or Cable / Satellite / IPTV Box	7
4	Use your TV	8
	Watching Channels from an External Device	8
	Displaying Setup using Home Menu	8
	Internet TV	8
	Before Logging in to Internet TV	8
	Logging in to Internet TV	8
	Information on Network Services	8
	Network	9
	Changing Picture and Sound Settings	10
	Changing Picture Format	11
	Caption Settings	12
	Child and Ratings Lock	13
	Setting your Location to Home	13
	Viewing Photos, Playing Music and Watching Videos on a USB Memory Stick	14
5	Install Channels	14
	Autoprogram	14
6	Troubleshooting	15
7	Specifications	16
8	Warranty	17
	License	


3 Getting Started

Connecting Antenna or Cable / Satellite / IPTV Box

Be sure your Antenna or another Device is connected properly before plugging in the AC Power Cord.


If connecting to an Antenna through an RF cable

Any DTV Programs that are Broadcast in your area can be received for free through an Antenna Connection.

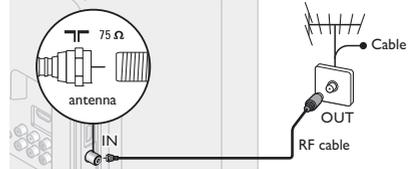


If connecting Cable / Satellite / IPTV Set-top box using an HDMI cable

If the TV is connected to a Cable / Satellite Set-top Box via an HDMI cable, make sure you select the correct Source by using **SOURCE** key on TV or Remote Control.

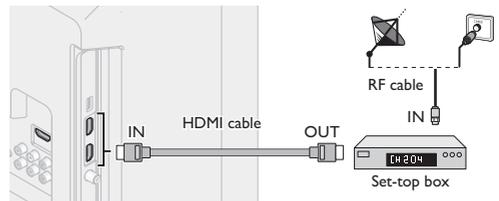

Connecting a Cable / Satellite / IPTV Box, Blu-ray Disc / DVD Recorder via Composite Connectors and Analog Audio

Do Not place your Recorder too close to the Screen because some Recorders can be susceptible to harmful interference from the TV.

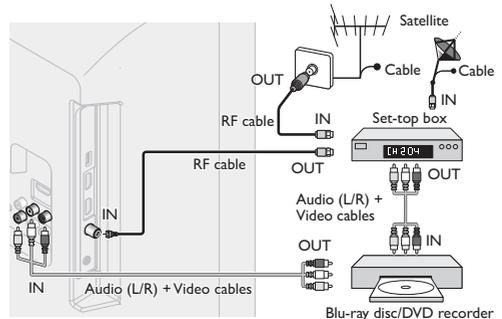

Note(s)

- If there is no Input Signal and no operation for 15 minutes, the Unit will go into Standby mode Automatically.

4 Use your TV

Watching Channels from an External Device

- 1 Turn On the Set-top Box or the Connected Device.
 - The picture from the Set-top Box or the Connected Device might appear Automatically on the TV screen.

If the picture does not appear



- ① Press **SOURCE** Repeatedly to select the Set-top Box or the Connected Device and wait a few seconds between each selection until the Picture appears.
- ② Use the Remote Control for the Set-top Box or the Connected Device to select Channels to view.


Displaying Setup using Home Menu



- 1 Press **Home** to display Home Menu.
- 2 Use **Up/Down/Left/Right** to select **Setup**, then press **OK**.

Guide to Home Menu screen

Home Menu start screen

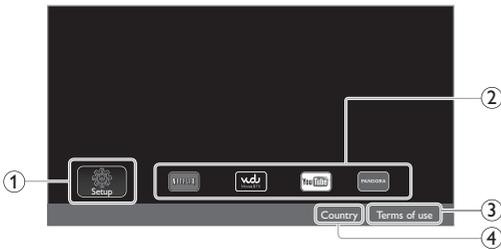

- ① **Setup** : Accesses menus that allow you to change picture, sound and other TV settings.
- ② **Network service** : Accesses Internet TV menus.
- ③ **Terms of use** : Access **Terms of Use** from Network service.
- ④ **Country** : Selects what **Country** you live in.

Note(s)

- Network service Icons may differ according to **Country** you set.
- VUDU is available only in the United States and Mexico.

Internet TV

Internet TV offers Internet services for your TV. Use the TV Remote Control to browse the Internet TV. You can play movies, listen to music and much more, all from your TV screen.

- Because Internet TV is an online system, it can be modified over time to better serve its purpose.
- You cannot download and save files or install plug-ins.

Before Logging in to Internet TV

Follow the procedure below before logging in to Internet TV.

- 1 Connect this Unit to the Internet.
- 2 Set up the necessary Network connection settings. (Refer to **Network** → p. 9)

Logging in to Internet TV

- 1 Press **Home** on the Remote Control.
 - Home Menu screen will appear, then use **Up/Down/Left/Right** to select service Icon.
 - For the first time only, **Terms of Use Internet Enabled product** screen will appear. After confirming the content, use **Left/Right** to select **Agree**, then press **OK**.

Information on Network Services

For detailed information on 3rd party Internet services, please visit the service providers website:

Netflix : <http://www.netflix.com>

VUDU : <http://www.vudu.com>

Pandora : <http://help.pandora.com>

Network

Set up Network connection settings in order to use Internet TV or Network Upgrade function.

- 1 Display **Setup** using Home Menu and use ▲▼ to select **Installation**, then press **OK**.
- 2 Use ▲▼ to select **Network**, then press **OK**.

Network Settings Assistant

Before you proceed to **Connection test** or other settings in **Network** section, run the Network settings assistant to connect the TV to your Network.

Wireless setting

Select to use a wireless LAN to connect to the internet by a wireless connection.

- 3 Use ▲▼ to select **Network settings assistant** then press **OK**.
- 4 Press **OK** to select **Start now**.
- 5 Use ▲▼ to select **Wireless**, then press **OK**.
- 6 Use ▲▼ to select the desired setting, then press **OK**, and follow the On-screen Instructions.

Setting items	Description
Simple Connect	Select this setting if your router has a Wi-Fi Protected Setup (WPS) button. Start scanning for Wireless Networks on the TV after pressing the WPS button on your router. If connection test fails, refer to the router's manual for more details.
Scan	Search for Wireless Networks automatically and select the Wireless Network name (SSID) from the list.
Manual entry	Set up the connection to the Wireless LAN Access Point (AP) (e.g. wireless router) manually by entering the Wireless Network name (SSID).

Wired setting

Select to use an Ethernet cable to connect to the internet by a wired connection. Please purchase shielded Ethernet cables at your local store and use it when you connect to Network equipment.

- 3 Use ▲▼ to select **Network settings assistant** then press **OK**.
- 4 Press **OK** to select **Start now**.
- 5 Use ▲▼ to select **Wired**, then press **OK**.
 - **Connection test** will start automatically. (Refer to **Connection Test** ➡ p. 9.)

Connection Test

Perform the following steps to test your internet connection after you have connected an Ethernet cable or entered Network settings such as IP address, DNS settings, etc. manually.

- 3 Use ▲▼ to select **Connection test**, then press **OK**.
- 4 Press **OK** to select **Start now**.
 - Connection test will start automatically and the test result for Home Network and Internet will appear right after the connection test finishes.
 - "Testing..." is displayed while the connection test is in progress.

Home Network	Internet	Description
Pass	Pass	Connection test is successfully completed.
Fail	-	Connection test for Home Network failed. Check the connection settings.
Pass	Fail	Connection test for Internet failed. Check the connection settings.

- If the connection test for Internet passes, speed test will start automatically.

- 5 Press **OK** to go to the Network status confirmation list screen.
- 6 Press **OK** to exit.

Note(s)

- If the connection test for both Home Network and Internet pass, you are ready to use Internet TV or Network Upgrade function using the internet without making any additional settings.
- If the connection test fails, check if the Ethernet cable is connected to this TV properly or if you have entered all the required details for the wireless LAN connection properly.

Changing Picture and Sound Settings

You must set **Home** in **Location**. ➡ p. 13

Otherwise, personalized Picture and Sound settings will not be memorized after the Unit goes into Standby Mode.

Changing Picture Settings

1 Display **Setup** using Home Menu and use ▲▼ to select **Picture**, then press **OK**.

Picture	Auto picture	Personal
Sound	Backlight	
Features	Contrast	
Installation	Brightness	
Software	Color	
USB	Tint	
	Sharpness	
	Advanced settings	Color alignment

2 Use ▲▼◀▶ to select the item you want to adjust, then press **OK**.

Auto picture	to select the desired Setting, then press OK (Personal, Standard, Vivid, Sports, Movie, Game, Energy saving and Internet video)	
	◀ Cursor	Cursor ▶
Backlight	to Reduce Power Consumption and Brightness	to Increase Power Consumption and Brightness
Contrast	to Decrease Contrast	to Increase Contrast
Brightness	to Decrease Brightness	to Increase Brightness
Color	to Decrease Color Intensity	to Increase Color Intensity
Tint	to Add Red	to Add Green
Sharpness	to Soften	to Sharpen
Advanced settings	to select the desired Setting, then press OK (Color alignment, Noise reduction, Light sensor*, Black stretch, Dynamic contrast, Gamma, BMR 120, MPEG artifact reduction, Color enhancement, Custom color management and Film mode)	
Picture format	Automatic	Changing Picture Format ➡ p. 11
	Super zoom	
	4:3	
	Movie expand 14:9	
	Movie expand 16:9	
	Wide screen	
	Unscaled	
Mode selection	PC	to Turn Off image enhancement features which makes the TV to act purely as a monitor
	HDTV	to enable image enhancement features to improve picture quality

Auto adjustment	to automatically adjust the horizontal / vertical position, clock and phase on the PC screen	
	◀ Cursor	Cursor ▶
Clock	to Decrease setting value	to Increase setting value
Phase		
Horizontal position	to move PC screen left	to move PC screen right
Vertical position	to move PC screen down	to move PC screen up

Note(s)

- Adjusts Backlight for the Best Picture Quality by Dynamically Adjusting the Backlight Intensity in accordance with the Room Lighting Condition when **Light sensor*** is Set to **On**. Please ensure the Room Lighting is Stable and the Light Sensor is Not Blocked.

* Only Model 55MV314X.

Changing Sound Settings

1 Display **Setup** using Home Menu and use ▲▼ to select **Sound**, then press **OK**.

Picture	Auto sound	Personal
Sound	Equalizer	Start now
Features	Balance	
Installation	DTS TruSurround	Off
Software	Auto volume leveling	Off
USB	TV speakers	On
	Headphone volume	
	Digital output format	PCM

2 Use ▲▼◀▶ to select the item you want to adjust, then press **OK**.

- The following sound settings can be configured. Depending on the sound source, some sound settings are not available.

Auto sound	to select the desired Setting, then press OK . (Personal, Standard, Vivid, Sports, Movie, Music and News)	
Equalizer	to select the specific frequency using ▲▼, and use ◀▶ to Adjust the Level, then press OK .	
Balance	Adjusts the balance of the right and left speakers to Best suit your listening preferences.	
Digital audio language	Available for Digital channels only when multiple languages are broadcast. Lists available audio languages.	
Alternate audio	Main	Available for Analog channels only when a Main and Second Audio Program (SAP) is broadcast. Select the Main Audio Program.
	SAP	Available for Analog channels only when a Main and Second Audio Program (SAP) is broadcast. Select the Second Audio Program.
Mono/Stereo	Mono	to Output Mono-audio.
	Stereo	to Output Stereo-audio.


DTS TruSurround		Off	to set DTS TruSurround™ to Off
		On	to set DTS TruSurround™ to On
Auto volume leveling		Off	to Remove the Auto volume leveling
		On	to Reduce Volume Differences between the TV Commercials and the Programs
TV speakers		Off	No Output Sound from the Unit's Speakers
		On	to Output Sound from the Unit's Speakers
		CEC Link	to control Audio Output from your connected HDMI Link devices
Headphone volume		Adjusts headphone volume.	
Digital output format		PCM	to Output PCM format.
		Multichannel	to Output Multichannel Signals (When the Audio of the Content is PCM, it will be Output in PCM even if Multichannel is selected.)
Delta volume	If a channel or input device is...	too loud	Navigate to that channel or input device and set a negative delta volume level as per your personal preferences.
		too soft	Navigate to that channel or input device and set a positive delta volume level as per your personal preferences.

Changing Picture Format

Display Modes can be Selected when your TV receives a 16:9 or 4:3 Video Signal.

Three types of Display Modes can be Selected for a PC Input Signal. Press **PICTURE SIZE**  Repeatedly to Switch the TV Aspect Ratio.

For 16:9 Video signal

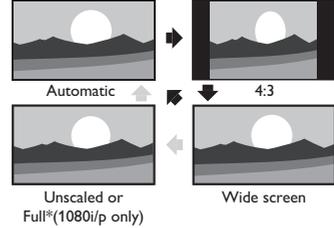


Automatic	Other than DTV and HDMI connected devices, enlarges the picture to Best fit the screen. DTV and HDMI connected devices display the picture at its original size. The subtitles may remain visible.
4:3	Displays a 16:9 picture at a 4:3 size; the picture is shortened horizontally. Sidebars appear on both edges of the screen.
Wide screen	Displays a 16:9 picture that is stretched horizontally and vertically.
Unscaled or Full* (1080i/p only)	Displays a 16:9 picture at its original size.

* This part differs depending on the product you have.


- **Unscaled** is for 55MV314X.
- **Full** is for 32MV304X.

For 4:3 Video signal

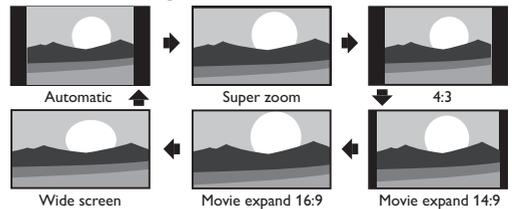

Automatic	Other than DTV and HDMI connected devices, enlarges the picture to Best fit the screen. DTV and HDMI connected devices display the picture at its original size. The subtitles may remain visible.
Super zoom	Displays a 4:3 picture at a 16:9 size; the picture is stretched horizontally and vertically and its left and right edges are enlarged. This crops out the top and bottom of the picture.
4:3	Displays a 4:3 picture at its original size. Sidebars appear on both edges of the screen.
Movie expand 14:9	Displays a 4:3 picture at a 14:9 size; the picture is stretched horizontally and vertically. This crops out the top and bottom of the picture. Sidebars appear on both edges of the screen.
Movie expand 16:9	Displays a 4:3 picture at a 16:9 size; the picture is stretched horizontally and vertically. This crops out the top and bottom of the picture.
Wide screen	Displays a picture that is stretched out of proportion to fill the screen.

 For PC Input signal



- This unit can also be connected to your PC that has a DVI Terminal. Use an HDMI-DVI Conversion Cable for this Video Connection and it requires Stereo Mini 3.5mm Plug Audio Cable for Analog Audio signal as well.
- Refer to 16:9 Video Signal on this page if the PC has HDMI Output.

4:3	Displays a proportionately stretched picture. Sidebars appear on both edges of the screen.
Wide screen	Displays a picture that is stretched out of proportion to fill the screen.
Unscaled	Displays a picture in its original size.

Caption Settings

Closed Captions displays the Audio portion of the Program as Superimposed Text over the Video.

- 1 Display **Setup** using Home Menu and use ▲▼ to Select **Features**, then press **OK**.
- 2 Use ▲▼ to Select **Caption settings**, then press **OK**.

Closed captions

You can choose the closed caption display.

- 3 Use ▲▼ to Select **Closed captions**, then press **OK**.
- 4 Use ▲▼ to Select **On, Off or CC w/ mute**, then press **OK**.

Digital TV Operation

Digital caption service

- 3 Use ▲▼ to select **Digital caption service**, then press **OK**.
- 4 Use ▲▼ to select the desired **Digital caption service**, then press **OK**.

CS-1 to CS-6	Select one of these before changing any other item in Caption settings menu. Choose CS-1 under normal conditions.
--------------	---

Cable / NTSC (Analog) TV Operation

Caption service

- 3 Use ▲▼ to Select **Caption service**, then press **OK**.
- 4 Use ▲▼ to Select the desired **Caption service**, then press **OK**.

CC-1 and T-1	The primary Closed Captions and Text Services. The Closed Captions or Text is Displayed in the same Language as the Program's Dialog (up to 4 lines of script on the TV Screen).	
CC-3 and T-3	Serve as the preferred Data Channels. The Closed Captions or Text is often a Secondary Language.	
CC-2, CC-4, T-2 and T-4	Rarely available and Broadcasters use them only in Special conditions, such as when CC-1 and CC-3 or T-1 and T-3 are Not available. <ul style="list-style-type: none"> • There are 3 Display modes according to Programs: 	
	Paint-on	Displays Characters on the TV screen immediately.
	Pop-on	Once Characters are Stored in Memory, they are Displayed All at Once.
	Roll-up	Displays the Characters Continuously by Scrolling (max. 4 lines).

Digital caption options

You can choose the size, font, color, background and other characteristics for the captioned text.

- 3 Use ▲▼ to Select **Digital caption options**, then press **OK**.
- 4 Use ▲▼ to Select an item and press **OK**, then use ▲▼ to Select the desired setting and press **OK**.

Note(s)

- Closed Captions Service may not be controlled by this Unit's Menu options if you are watching television through an External Cable or Satellite Set-top Box. In which case you will need to use the Menu options on the External Set-top Box to control Closed Captions.
- The Captions do not always use correct Spelling and Grammar. Not all TV Programs and product Commercials include Closed Captions information. Refer to your area TV Program Listings for the TV Channels and times of Closed Captions shows. The Closed Captions Programs are usually noted in the TV Listings with a Service Mark such as **CC**.
- Not all Closed Captions Services are used by a TV Broadcaster during the Transmission of a Closed Caption Program.
- The EUT setting that satisfies § 79.102 (e) is as follows:
 - Font: Mono-font
 - Character Size: Large

Child and Ratings Lock

You can prevent your children from watching certain Programs or certain Channels by locking the TV Controls and by using Ratings.

- 1 Display **Setup** using Home Menu and use ▲▼ to Select **Features**, then press **OK**.
- 2 Use ▲▼ to Select **Child lock**, then press **OK**.
- 3 Use the **NUMBER buttons** to enter the 4-digit numbers for your PIN code.
 - When you have not set up your PIN code, enter **0, 0, 0, 0**.
 - When the PIN code is correct, **Child lock** menu is displayed.

Channel lock

Particular Channels or External Input modes can be invisible in this function.

- 4 Use ▲▼ to Select **Channel lock**, then press **OK**.
- 5 Use ▲▼ to Select the Particular Channels or External Input, then press **OK** Repeatedly to Switch between Block and View.
 - indicates that the Channel or Input Source is Locked (Block).
 - indicates that the Channel or Input Source is Not Locked (View).

Setting TV and movie ratings

TV Ratings Lock has Controlled Access to Individual Programs based on their Age and Content rating. Movie Ratings Lock is the Rating System created by MPAA.

- 4 Use ▲▼ to Select **TV ratings lock** or **Movie ratings lock**, then press **OK**.
- 5 Use ▲▼ to Select the Desired Rating, then press **OK** Repeatedly to Switch between Block and View.
 - For US TV Ratings, you can further set the Sub Ratings to Block Specific Elements within Programs.
 - or indicates that the Rating is Locked.
 - indicates that the Rating is Not Locked (View).

Movie ratings	TV ratings	Description
All		All Ratings Locked including No Rating
NR	None	No Rating
-	TV-Y	Appropriate for All Children
-	TV-Y7	Appropriate for All Children 7 and Older
G	TV-G	General Audience
PG	TV-PG	Parental Guidance Suggested
PG-13	-	Unsuitable for children under 13
-	TV-14	Unsuitable for children under 14
R	-	Restricted under 17 Requires Accompanying Parent or Adult Guardian
NC-17	-	No One under 17 Admitted
X	TV-MA	Mature Audience Only

Canadian English or Canadian French Ratings

You can select the Rating for Canadian English or Canadian French broadcasting.

- 4 Use ▲▼ to Select **Canadian English rating** or **Canadian French rating**, then press **OK**.
- 5 Use ▲▼ to Select the Desired Rating, then press **OK** Repeatedly to Switch between Block and View.

Canadian English rating	Canadian French rating	Description
All		Locked All Ratings
E		Exempt Program
C	-	For All Children
C8+	-	For All Children 8 and Older
G		General Audience
-	8 ans+	Unsuitable for Ages under 8
PG	-	Parental Guidance Suggested
-	13 ans+	Unsuitable for Ages under 13
14+	-	Unsuitable for Ages under 14
-	16 ans+	Unsuitable for Ages under 16
18+	18 ans+	Adult Audience Only

Note(s)

- The V-Chip can Block Non Rated Programs as per "CEA-608-E sec. L3". If the Option to Block **NR, None** or **E** Programs are used in **Movie ratings lock, TV ratings lock, Canadian English rating** or **Canadian French rating** accordingly "unusual results may occur and the Unit may not Receive Emergency Bulletins or other Types of Programming"; / Emergency Bulletins (Such as EAS messages, Weather Warnings and Others) / Locally originated Programming / News / Political / Public Service Announcements / Religious / Sports / Weather.

Setting your Location to Home

You can set the **Location** on your TV to **Home** or **Retail**. Choosing **Home** gives you full flexibility to change predefined settings for Picture and Sound.

- 1 Display **Setup** using Home Menu and use ▲▼ to Select **Installation**, then press **OK**.

Picture	Language	English
Sound	Channels	Autoprogram
Features	Preferences	Location
Installation	Network	Network settings assistant
Software	Restore default settings	Reset AV settings
USB		

- 2 Use ▲▼ to Select **Preferences**, then press **OK**.
- 3 Use ▲▼ to Select **Location**, then press **OK**.
- 4 Use ▲▼ to Select **Home**, then press **OK**.

Note(s)

- You must set **Home** in the Menu. Otherwise, personalized Picture and Sound Settings will Not Be Memorized after the Unit goes into Standby Mode.

Viewing Photos, Playing Music and Watching Videos on a USB Memory Stick

Your TV is fitted with a USB connection that enables you to view photos, listen to music or watch video files stored on a USB Memory Stick.

- 1 Display **Setup** using Home Menu and use ▲▼ to Select **USB**, then press **OK**.
- 2 Use ▲▼ to select **Start now**, then press **OK**.
- 3 Use ▲▼ to select the **Picture**, **Music** or **Video**, then press **OK**.



- These Recorded Files must meet Specifications shown below:

Picture (JPEG)				
Upper limit	16Mpixel			
Music (MP3)				
Sampling frequency	32 kHz, 44.1 kHz or 48 kHz			
Constant bit rate	32 kbps - 320 kbps			
Video (MPEG / VOB / AVI / MP4)				
Maximum Video	1920 × 1080			
Extension	.mpg, .mpeg	.vob	.avi	.mp4
Video codec	MPEG1, MPEG2	MPEG2	MPEG4 SP, MPEG4 ASP	H.264, MPEG4
Audio codec	MPEG1, MPEG2	MPEG2	MPEG4 SP, MPEG4 ASP	H.264, MPEG4
Dolby Digital	YES	YES	YES	NO
MPEG1 audio layer3 (MP3)	YES	NO	YES	NO
MPEG1 audio layer2	YES	NO	YES	NO
LPCM	YES	NO	NO	NO
AAC-LC	NO	NO	NO	YES

Note(s)

- This unit accepts USB Memory Stick only. Other storage devices such as external HDD by USB Bus Power will not work.
- Do not use an extension cord and USB Hub to connect devices to this Unit. Always insert the USB flash memory in to this Unit directly.
- We cannot be held responsible if your USB Memory Stick is Not Supported, nor will we accept any liability for damage or loss of stored data.
- The USB Memory Stick is Not Supplied with this TV.
- A maximum of 1,023 folders or files can be recognized.
- A file name exceeding 256 characters or contains a dot character is Not Supported on this TV.
- Progressive JPEG files are Not Supported.


5 Install Channels

Autoprogram

Be sure the RF cable is correctly connected to this Unit and you are registered with your Cable TV provider when you Install Cable channels.

- 1 Display **Setup** using Home Menu and use ▲▼ to Select **Installation**, then press **OK**.
- 2 Use ▲▼ to Select **Channels**, then press **OK**.
- 3 Use ▲▼ to Select **Autoprogram**, then press **OK**.
- 4 Press **OK** to Select **Start now**.

- **Autoprogram** will start automatically.

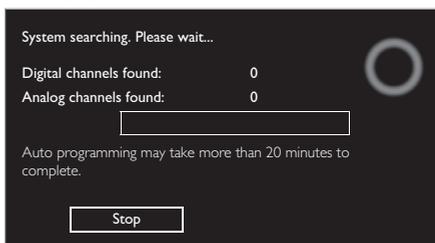

- If you run **Autoprogram** when you have Locked Channels, a Message appears asking to enter your PIN. Enter your PIN in order to Complete the Installation. You need to set the Channel Lock again after the Installation.
- When the Scanning and Memorizing of Available Channels is Completed, the Lowest Memorized Channel will be Displayed.

- 5 Follow the On-screen Instructions to Complete the Installation.

7 Specifications

Model #		55MV314X	32MV304X
Picture			
Type	FHD (1920 x 1080 pixels 60Hz)		WXGA (1366 x 768 pixels 60Hz)
Aspect Ratio	16:9		
Viewing Angles	178° (V) by 178° (H)		
Built-in Digital / Analog Tuner	ATSC (Digital) / NTSC (Analog)		
Sound			
Mono / Stereo	Mono, Stereo, DTS TruSurround™		
Power Output (RMS watts)	10W x 2	8W x 2	
Equalizer	5 band		
Ease of use			
Picture Format	SD (4:3 Source)	: Automatic / Super zoom / 4:3 / Movie expand 14:9 / Movie expand 16:9 / Wide screen	
	HD (16:9 Source)	: Automatic / 4:3 / Wide screen / Unscaled	: Automatic / 4:3 / Wide screen / Full
	HDMI AV (4:3 Source)	: Automatic / Super zoom / 4:3 / Movie expand 14:9 / Movie expand 16:9 / Wide screen	
	HDMI AV (16:9 Source)	: Automatic / 4:3 / Wide screen / Unscaled	: Automatic / 4:3 / Wide screen / Full
	PC Source	: 4:3 / Wide screen / Unscaled (Refer to HDMI AV (16:9 Source) above if PC has HDMI Output.)	
Photo Slide Show	JPEG Files only		
MP3 Playback	MP3 Files only		
Video playback	MPEG1 (.mpg / .mpeg), MPEG2 (.mpg / .mpeg / .vob), H.264 (.mp4), MPEG4 SP/ASP (.avi), MPEG4 (.mp4)		
Channel			
Channel Coverage	Terrestrial DTV (ATSC)	VHF: 2~13 UHF: 14~69 (each channel has e.g. 2.1~2.9, 3.1~3.9, etc)	
	Terrestrial Analog (NTSC)	VHF: 2~13 UHF: 14~69	
CATV (Analog NTSC)	2~13, A~W W+1~W+94 (analog W+1~W+84), A-5~A-1, 5A		
Tuning System	Channel Frequency Synthesized Tuning System		
Channel Access	Direct Access Number Keyboard, Programmable Scan, Channel +(up) / -(down) and PREV. CH (Previous Channel)		
Connectivity			
Component Video Input (Y/Pb/Pr)	1 Supporting Video Signals : 480i/p, 720p, 1080i/p @60Hz		
Composite Video Input (Shared Y Green Terminal with Component Video)	1		
HDMI Input	3 Supporting Video Signals : 480i/p, 720p, 1080i/p, @24Hz-60Hz HDMI ARC (HDMI 1 only)		
	PC-Input Signal up to FHD (1920 x 1080)	PC-Input signal up to WXGA (1360 x 768)	
Audio L/R Input	1		
PC Input	via VGA, HDMI and HDMI-DVI + Analog Audio L/R		
USB	1		
Wireless LAN	Supporting wireless standards : IEEE 802.11 b/g/n (2.4GHz)		
Ethernet port	1		
Digital Audio Output	1 Supporting Dolby Digital		
Headphone Output	1 1/8 inch (3.5mm)		
Power			
Power Requirements	120V~ +/- 10%, 60Hz +/- 0.5%		
Temperature			
Operating Temperature	41 °F (5 °C) to 104 °F (40 °C)		

- Specifications are Subject to Change without Prior Notice.

8 Warranty

LIMITED WARRANTY ONE (1) YEAR PARTS AND LABOR

WARRANTY COVERAGE:

This warranty obligation is limited to the terms as set forth below.

WHO IS COVERED:

This product warranty is issued to the original purchaser or the person receiving the product as a gift against defects in materials and workmanship as based on the date of original purchase ("Warranty Period") from an Authorized Dealer. The original sales receipt showing the product name and the purchase date from an authorized retailer is considered such proof.

WHAT IS COVERED:

This warranty covers new products if a defect in material or workmanship occurs and a valid claim is received within the Warranty Period. At its option, the company will either (1) repair the product at no charge, using new or refurbished replacement parts, or (2) exchange the product with a new or refurbished product at company's option.

Replacement products or parts provided under this warranty are covered against defects in materials and workmanship from the date of the replacement or repair for ninety (90) days or for the remaining portion of the original product's warranty, whichever provides longer coverage for you. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes company property. When a refund is given, your product becomes company property.

Note: Any product sold and identified as refurbished or renewed carries a ninety (90) day limited warranty.

Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay.

WHAT IS NOT COVERED - EXCLUSIONS AND LIMITATIONS:

This Limited Warranty applies only to new company manufactured products that can be identified by the trademark, trade name, or logo affixed to it. This Limited Warranty does not apply to any hardware product or any software, even if packaged or sold with the product, as manufacturers, suppliers, or publishers may provide a separate warranty for their own products packaged with the bundled product.

The company is not liable for any damage to or loss of any programs, data, or other information stored on any media contained within the product, or other additional product or part not covered by this warranty. Recovery or reinstallation of programs, data or other information is not covered under this Limited Warranty.

This warranty does not apply (a) to damage caused by accident, abuse, misuse, neglect, misapplication, or non-supplied product, (b) to damage caused by service performed by anyone other than company approved Authorized Service Location, (c) to a product or a part that has been modified without written company permission, or (d) if any serial number has been removed or defaced, or (e) product, accessories or consumables sold "AS IS" without warranty of any kind by including refurbished product sold "AS IS" by some retailers.

This Limited Warranty does not cover:

- Shipping costs for returning defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna/signal source systems outside of the product.
- Product repair and/or part replacement because of improper installation or maintenance, connections to improper voltage supply, power line surge, lightning damage, retained images or screen markings resulting from viewing fixed stationary content for extended periods, product cosmetic appearance items due to normal wear and tear, unauthorized repair or other cause not within the control of the company.
- Damage or claims for products not being available for use, or for lost data or lost software.
- Damage from mishandled shipments or transit accidents when returning product.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Product lost in shipment and no signature verification receipt can be provided.
- Failure to operate per Owner's Manual.

TO OBTAIN ASSISTANCE...

Contact the Customer Care Center at:
1 866 341 3738

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER, WITH THE ISSUING COMPANY NOT LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

FUNAI CORPORATION, Inc. 19900 Van Ness Avenue, Torrance, CA 90501

License

FUNAI CORPORATION, Inc. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source code packages, on an "AS IS" basis, used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after the product purchase to anyone in receipt of this information. To obtain source code, please contact FUNAI SERVICE CORPORATION.

You should write to

FUNAI SERVICE CORPORATION
2425 Spiegel Drive, Groveport, OH 43125
funaios@funaiservice.com.

FUNAI CORPORATION, Inc. disclaims any and all warranties and representations with respect to such software and related source code including quality, reliability, usability, and accuracy, and further disclaim all express, implied, statutory or otherwise, including without limitation, any implied warranties of title, non-infringement, merchantability, or fitness for a particular purpose. FUNAI CORPORATION, Inc. shall not be liable to make any corrections to the open source software or source code or to provide any support or assistance with respect to it. FUNAI CORPORATION, Inc. disclaims any and all liability arising out of or in connection with the use of this software and/or source code.

MAGNAVOX

FUNAI CORPORATION, Inc.
19900 Van Ness Avenue, Torrance, CA 90501

Printed in Thailand
A4DF1UT
2EMN00245 ★★★★★

