

blink



User Guide

Simple Setup

1. Download the app.

Visit the App Store, Google Play Store


2. Launch the App.

Open the app on your iOS or Android device


3. Follow in-app instructions.

The Blink app will walk you through creating an account and setting up your new Blink system.

Detailed setup instructions can be found on page 5.

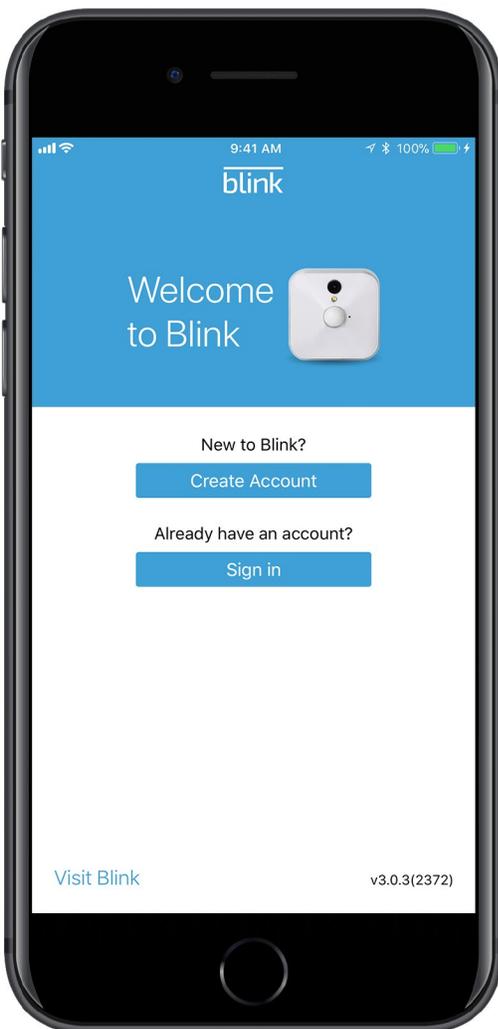

System Requirements

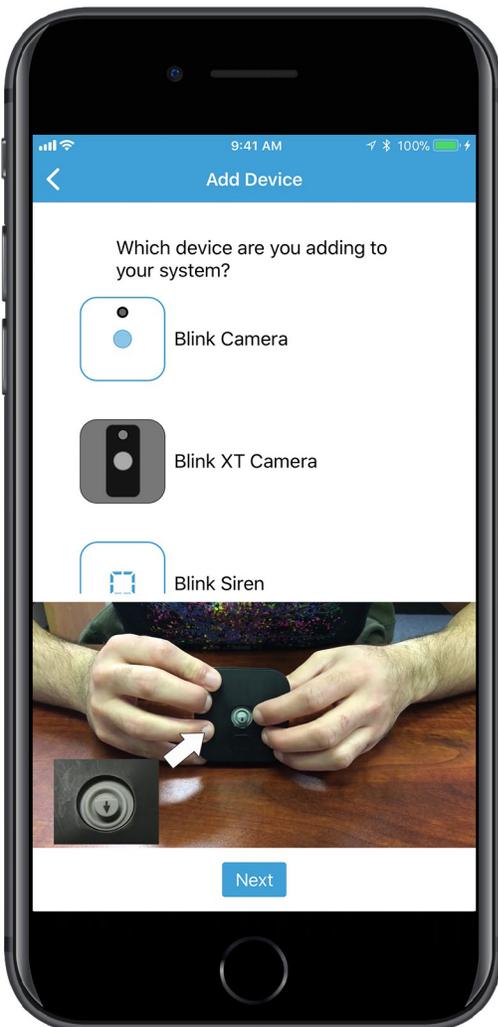

Blink connects to the Internet via a wireless connection.

Wi-Fi Network Requirements

In order for Blink to connect to your home Wi-Fi network, it must meet the following requirements.

- Your Wi-Fi network broadcasts at 2.4GHz (802.11 b/g/n)
- Your network does not block port 443.
- Your network upload speed is at least 2 Mbps.

iOS Requirements

To set up Blink using an iOS device, it must be running iOS 9.3 or later. The following devices support that:

- iPhone (4S or newer)
- iPad (2nd gen or newer)
- iPad Mini (1st gen or newer)
- iPod Touch (5th gen or newer)

Android Requirements

To set up Blink on an Android device, it must be running Android 4.4 (KitKat) or later.

Package Contents

Sync Module

The Sync Module is the central hub of your Blink system. This connects to your WiFi network and to your Blink cameras.

Package Includes:

Micro USB Cable and USB Wall Adapter



Blink XT

Blink XT operates on 2 AA Lithium batteries and with standard use, can last up to two years before needing to be replaced.

(Alkaline or rechargeable are not recommended) and standard use is defined as 40,000 seconds of Live View and motion clips over a 2 year period


Package includes:

Blink XT Camera
2x AA Lithium Batteries
Mounting Bracket & Screw




Setup


This is an overview of the setup process. Once you've downloaded the Blink app, create your account and follow these instructions.

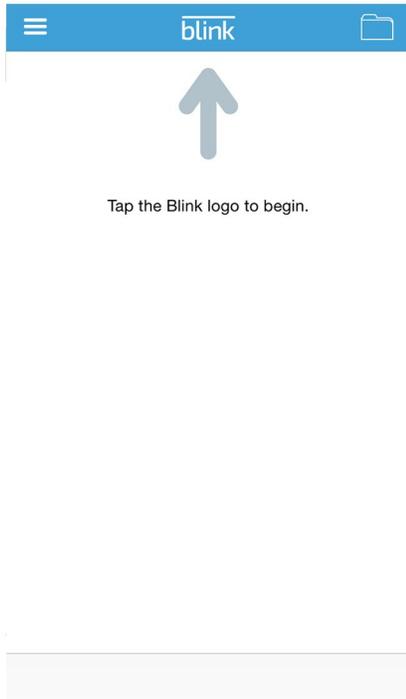

1. Tap the Blink logo to begin.

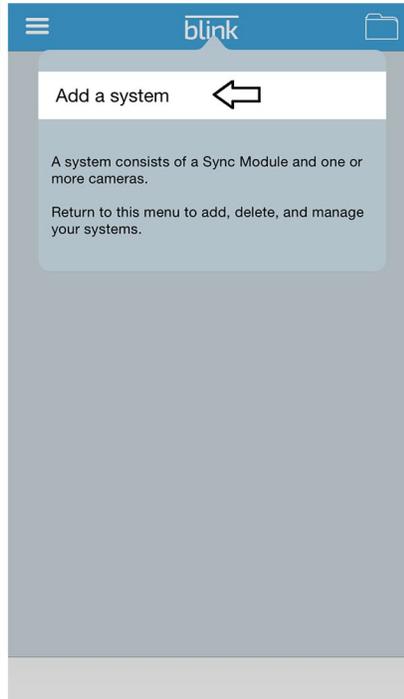

2. Tap the Add a system button.

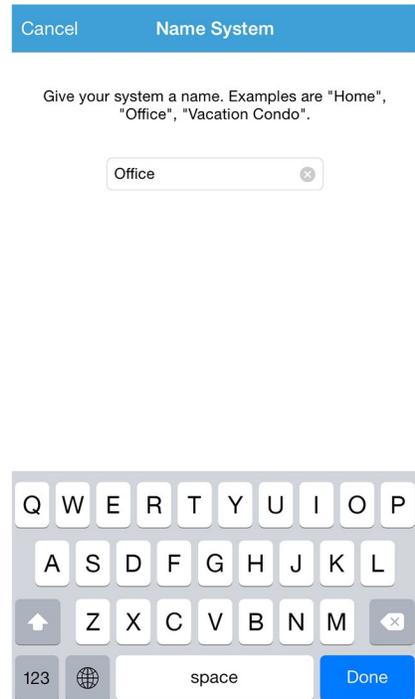

3. Set a name for the system like "Home" or "Office".



Before you begin you will need:

- Your Sync Module serial number located on the bottom of the unit.
- The name and password of the Wi-Fi that Blink will use. Verify that your phone is connected to that Wi-Fi before continuing.
- Good Wi-Fi signal strength. Place your Sync Module close to your router to ensure a stable connection.

Ready



Enter the serial number using the keypad, or scan the QR code.



4. Tap add a Sync Module.


5. Read guide then tap "Ready" when you have the necessary information.



6. Enter your Sync Module's serial number located on the bottom of the unit.




Setup Cont'd.

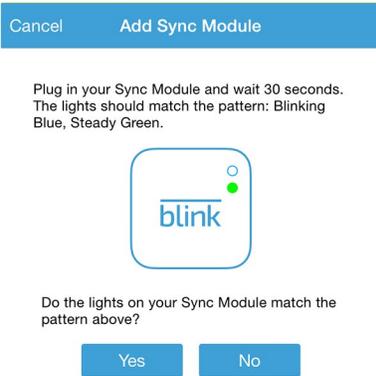


7. Plug your Sync Module into power and wait 30 seconds until you see a solid green and flashing blue light.




8. Leave the Blink app and go to Settings>WiFi. Connect to the Blink-#### network. It's normal to see "Security Recommendation" or "Connected, no Internet".

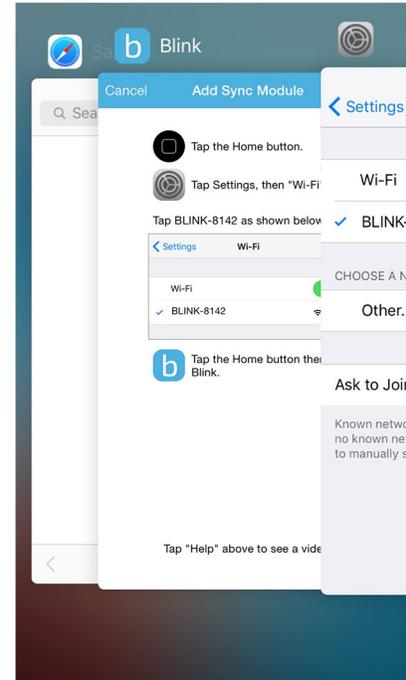


9. After a successful connection, navigate back to the Blink App.

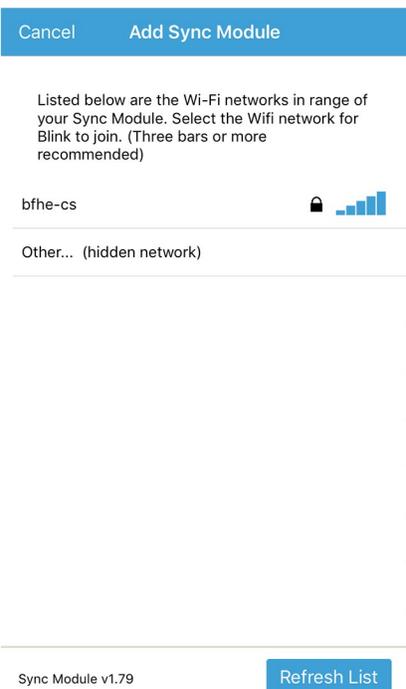

9. Locate your Home WiFi network then tap it to continue.

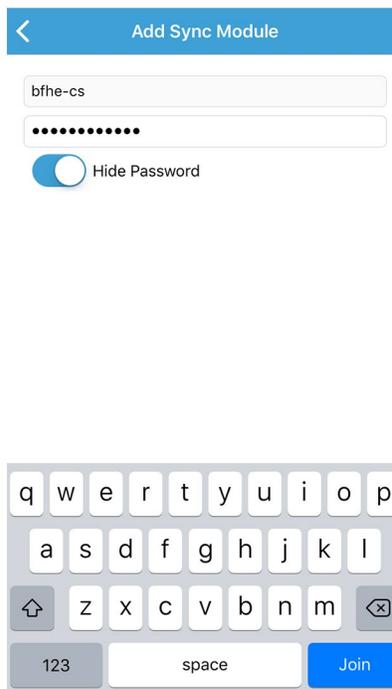



10. Enter the password for your home WiFi network to connect.

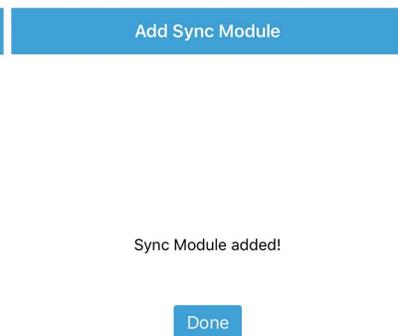

11. After about 30 seconds, you'll see the message "Sync Module added!". Tap "Done".

Adding your Cameras

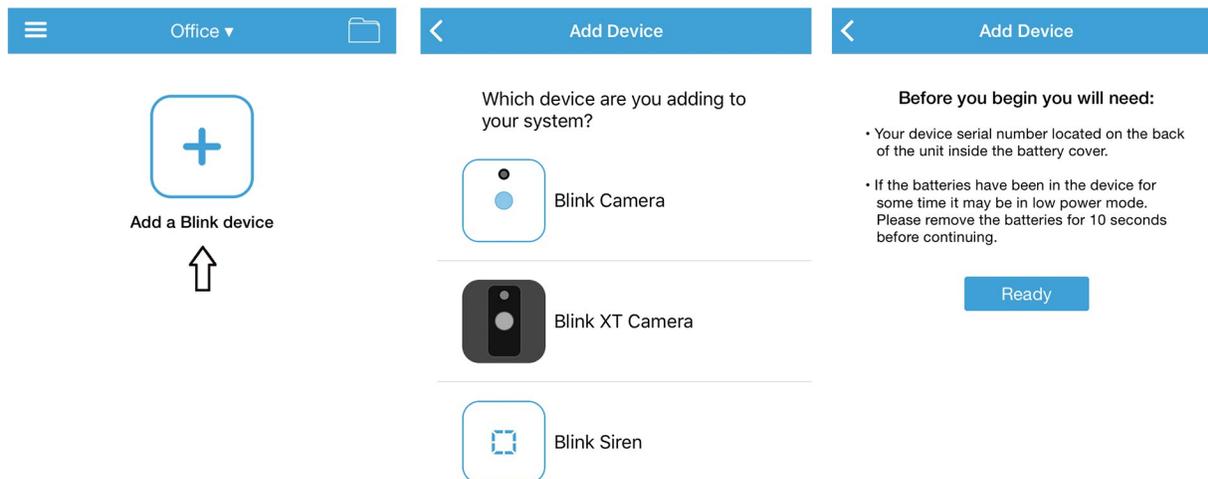

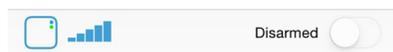

1. Tap to Add a Blink camera.

2. Select which camera to add.




3. Read guide then tap Ready.



4. Enter camera's serial number and hit the continue button.

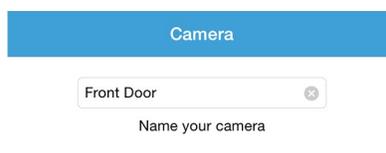


5. Name and position your camera then tap the snapshot.

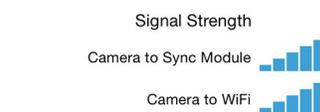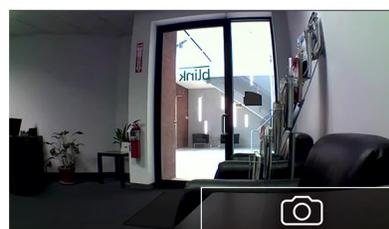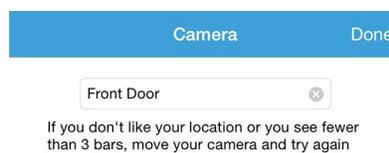

6. Once generated, gauge the signal strengths and tap "Done". Repeat the above steps for any additional cameras.

Home Screen

The Home Screen shows you the cameras that you have on your account. From here, you can update their thumbnails, access them using Live View, and more.

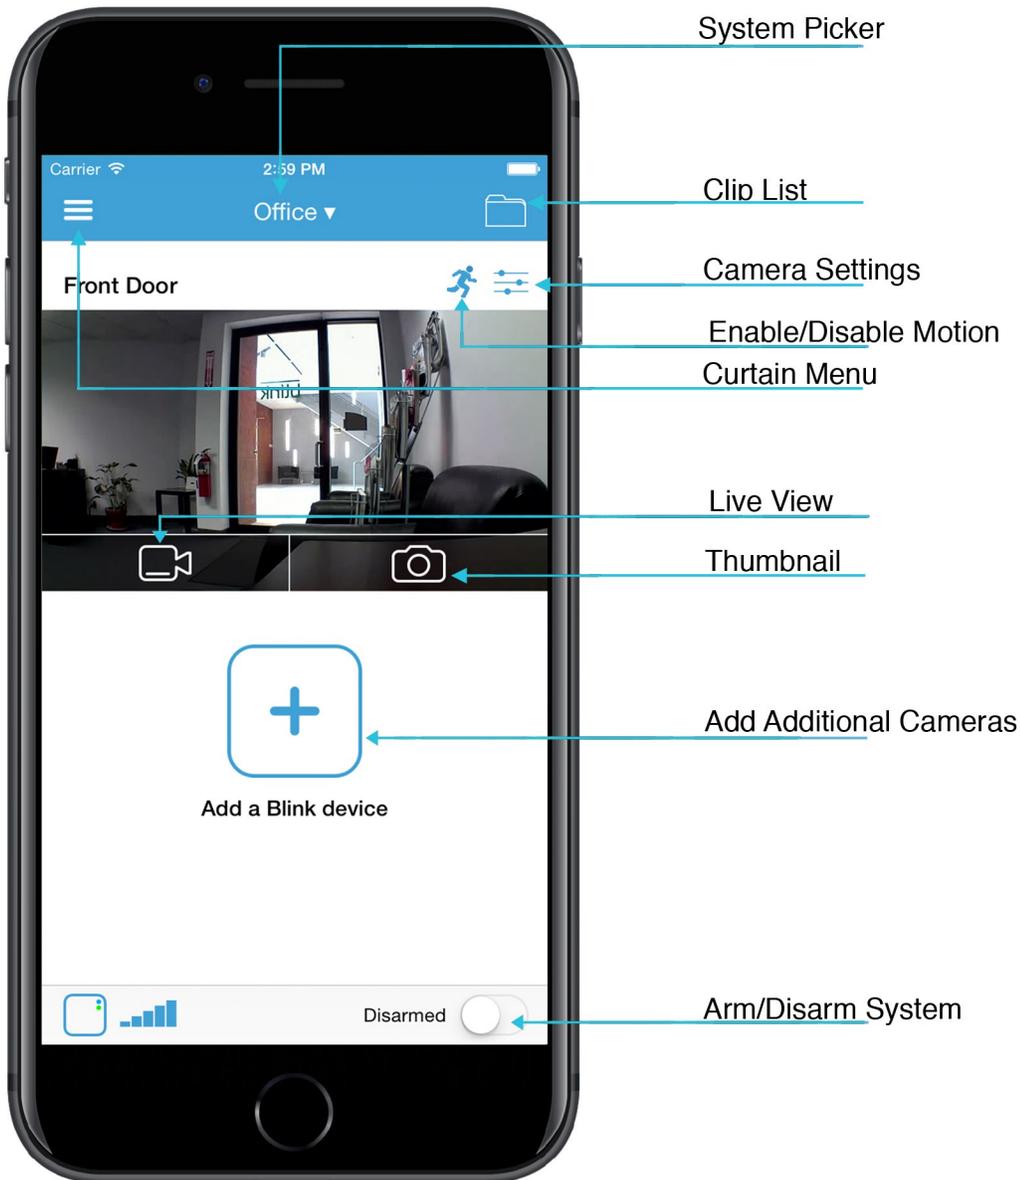


Camera Settings

The screenshot shows the 'Camera Settings' app interface. At the top is a blue header with a back arrow and the text 'Camera Settings'. Below this are several sections: 'GENERAL' with a 'Name' field set to 'Outside Front Door' (callout 1); 'MONITORING' with a 'Battery' indicator showing 'OK' (callout 2) and a 'Temperature' field set to '73°F' (callout 3); 'MOTION DETECTION' with an 'Enable' toggle (callout 4), 'Retrigger time' slider set to 30 (callout 5), 'Sensitivity' slider set to 5 (callout 6), 'Clip Length' slider set to 5 (callout 7), and an 'End clip early if motion stops' toggle (callout 8); 'IR ILLUMINATOR' with a 'Control' dropdown set to 'Auto' (callout 9) and an 'Intensity' dropdown set to 'High' (callout 10); 'AUDIO' with an 'Enable' toggle (callout 11); 'VIDEO' with a 'Quality' dropdown set to 'Best' (callout 12); 'STATUS' with a 'Last Updated' field showing '10/23/17, 3:54 PM' and an 'Update' button (callout 13), and two signal strength bar graphs for 'Camera to WiFi' (callout 14) and 'Camera to Sync Module' (callout 15). At the bottom is a red 'Delete Camera' button (callout 16).

Camera Settings

- 1. Name:** Camera's individual name
- 2. Battery:** Battery indicator
- 3. Temperature:** Current temperature
- 4. Motion Detection:** Enable/disable for individual camera
- 5. Retrigger Time:** Time between motion clips
- 6. Sensitivity:** Sensitivity of motion detection
- 7. Clip Length:** Duration that camera is set to record
- 8. End Early:** Ends clip if motion stops
- 9. Control:** Controls activation of IR Illuminator
- 10. Intensity:** Brightness of IR Illuminator
- 11. Audio:** Enable or disable camera's microphone
- 12. Quality:** Adjusts the quality of video
- 13. Update:** Refreshes camera's readings
- 14. Camera to WiFi:** Signal strength to WiFi
- 15. Camera to Sync Module:** Signal strength to Sync Module
- 16. Delete Camera:** Removes camera from your account

System Picker

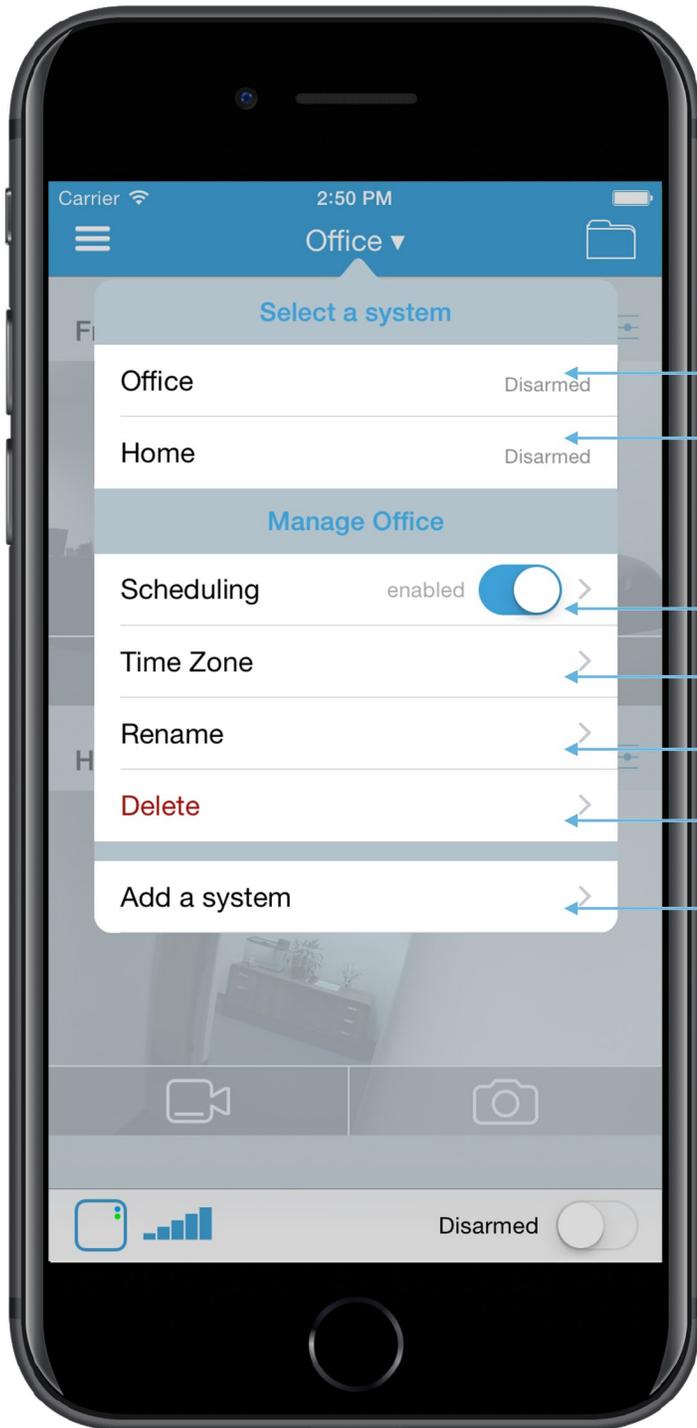

Switch between multiple systems

Set up a motion detection schedule

Set your Time Zone

Rename your system

Delete your Blink system

Add another Blink system

Help

At Blink, our dedicated support team is ready to assist you using your preferred method if you run into any issues.

Web: support.blinkforhome.com

Phone: (781) 332-5465

10am-11pm Eastern 7 days/week

Thank you for choosing Blink!

