



What's in the box

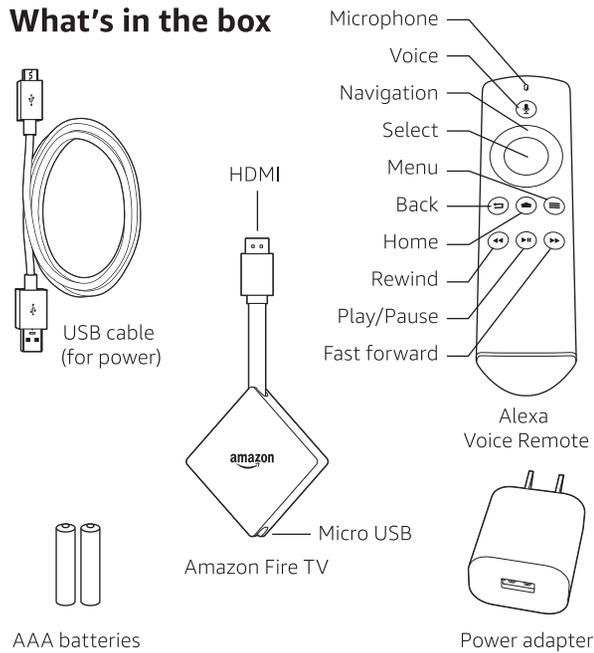


1. Connect your Fire TV

Connect one end of the USB cable into your Fire TV and the other end into the power adapter. Plug your Fire TV into the HDMI port on your TV, then plug the power adapter into a nearby outlet. Turn on your TV, then select the appropriate HDMI input.

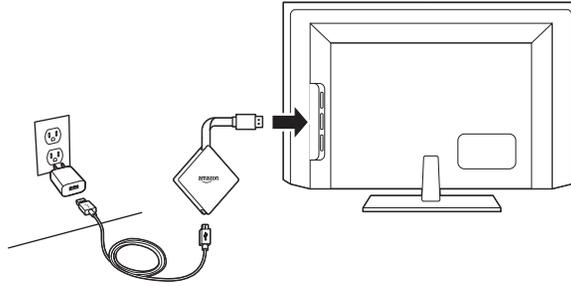

2. Power up your Alexa Voice Remote

Open the back of the remote, as shown, and insert the included batteries.

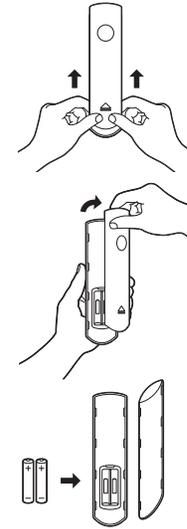

3. Complete the on-screen setup

Using your Alexa Voice Remote, follow the on-screen instructions.

- Choose a language from the list.
- Select your Wi-Fi network from the networks displayed on the screen.

Note: If your Wi-Fi network is password protected, have your Wi-Fi network password handy to connect your Fire TV to the Internet. If your network is hidden, select the "Join Other Network" tile from the list. If required, enter your network password using the on-screen keyboard.

Registering your Fire TV

If you purchased your Fire TV online from Amazon.com using your Amazon account, it is already registered to you.

If you received your Fire TV as a gift or it is not yet registered, please follow the on-screen instructions to register your device.

Get the most out of your Fire TV

About your Alexa Voice Remote

Simply press the Voice button and speak. You can search for movies, TV shows, actors, and genres. Just say, "Watch American Gods" or "Find me comedies." To learn more, see the Things to Try in Settings.

Tips and troubleshooting

Wi-Fi

- Use the 5GHz band on your wireless router if available for best Wi-Fi performance.
- If you see a lock icon, your Wi-Fi network requires your password, so make sure you have it available. The password is not your Amazon account password.
- If you need help finding your Wi-Fi password, go to www.amazon.com/wifi.
- Ensure your Internet is working properly. Restarting your router and modem will solve most Wi-Fi network issues.
- Do not place your wireless router in a cabinet, as it may impact Wi-Fi signal strength.

Remote pairing

Having trouble with your remote? First, remove and reinsert the batteries in your remote. The remote should automatically pair with your device. If your remote isn't discovered, press the Home button for at least 10 seconds.

For more troubleshooting and information, go to www.amazon.com/devicesupport