



BASS MODULE 500

Please read and keep all safety and use instructions.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer’s instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNINGS/CAUTIONS



This symbol on the product means there is uninsulated, dangerous voltage within the product enclosure that may present a risk of electrical shock.



This symbol on the product means there are important operating and maintenance instructions in this guide.



Contains small parts which may be a choking hazard. Not suitable for children under age 3.



This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.

- To reduce the risk of fire or electrical shock, do NOT expose this product to rain, liquids or moisture.
- Do NOT expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the product.
- Keep the product away from fire and heat sources. Do NOT place naked flame sources, such as lighted candles, on or near the product.
- Do NOT make unauthorized alterations to this product.
- Do NOT use in vehicles or boats.
- The speaker wire and interconnect cables included with this system are not approved for in-wall installation. Please check your local building codes for the correct type of wire and cable required for in-wall installation.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Due to ventilation requirements, Bose does not recommend placing the product in a confined space such as in a wall cavity or in an enclosed cabinet.
- The product label is located on the bottom of the product.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Bose Corporation could void the user's authority to operate this equipment.

This device complies with FCC and Industry Canada radiation exposure limits set forth for general population. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC Rules and with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment should be installed and operated with a minimum distance of 20 cm between radiator and your body.

This device for operation in the band 5150 – 5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Receiver Category = 2

CE Bose Corporation hereby declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU and all other applicable EU directive requirements. The complete declaration of conformity can be found at: www.Bose.com/compliance

The product, in accordance with the Ecodesign Requirements for Energy Related Products Directive 2009/125/EC, is in compliance with the following norm(s) or document(s): Regulation (EC) No. 1275/2008, as amended by Regulation (EU) No. 801/2013.

Required Power State Information	Power Modes	
	Standby	Networked Standby
Power consumption in specified power mode, at 230V/50Hz input	< 0.5 W	Bose wireless < 2.0 W
Time after which equipment is automatically switched into mode	< 2.5 hours	≤ 20 minutes
Power consumption in networked standby if all wired network ports are connected and all wireless network ports are activated, at 230V/50Hz input	N/A	< 2.0 W
Network port deactivation/activation procedures. Deactivating all networks will enable standby mode.	Per Annex II 3(a) of Regulation 801/2013 ("Lot 26" amendment of 1275/2008), the requirement to deactivate a wireless port "does not apply to products which rely on a single wireless network connection for intended use and have no wired network connection."	

For Europe:


Frequency band of operation 2400 to 2483.5 MHz:

- *Bluetooth/Wi-Fi*: Maximum transmit power less than 20 dBm EIRP.

Frequency bands of operation 5150 to 5350 MHz and 5470 to 5725 MHz:

- *Wi-Fi*: Maximum transmit power less than 20dBm EIRP.

This device is restricted to indoor use when operating in the 5150 to 5350 MHz frequency range in all EU Member States listed in the table.

									
BE	DK	IE	UK	FR	CY	SK	HU	AT	SE
BG	DE	PT	EL	HR	LV	LT	MT	PL	
CZ	EE	FI	ES	IT	RO	LU	NL	SI	



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment. For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

Management Regulation for Low-power Radio-frequency Devices

Article XII


According to “Management Regulation for Low-power Radio-frequency Devices” without permission granted by the NCC, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to an approved low power radio-frequency devices.

Article XIV

The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications means radio communications operated in compliance with the Telecommunications Act.

The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

China Restriction of Hazardous Substances Table

Names and Contents of Toxic or Hazardous Substances or Elements						
Toxic or Hazardous Substances and Elements						
Part Name	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent (CR(VI))	Polybrominated Biphenyl (PBB)	Polybrominated diphenylether (PBDE)
PCBs	X	0	0	0	0	0
Metal Parts	X	0	0	0	0	0
Plastic Parts	0	0	0	0	0	0
Speakers	X	0	0	0	0	0
Cables	X	0	0	0	0	0
This table is prepared in accordance with the provisions of SJ/T 11364. O: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement of GB/T 26572. X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement of GB/T 26572.						

Taiwan Restriction of Hazardous Substances Table

Equipment name: Wireless Bass Module, Type designation: 425843						
Restricted substances and its chemical symbols						
Unit	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr+6)	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
PCBs	-	○	○	○	○	○
Metal Parts	-	○	○	○	○	○
Plastic Parts	○	○	○	○	○	○
Speakers	-	○	○	○	○	○
Cables	-	○	○	○	○	○

Note 1: "○" indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.

Note 2: The "-" indicates that the restricted substance corresponds to the exemption.

Please complete and retain for your records

The serial and model numbers are located on the bottom of the bass module.

Serial number: _____

Model number: _____

Please keep your receipt with your owner's guide. Now is a good time to register your Bose product. You can easily do this by going to <http://global.Bose.com/register>

Date of Manufacture: The eighth digit in the serial number indicates the year of manufacture; "8" is 2008 or 2018.

China Importer: Bose Electronics (Shanghai) Company Limited, Part C, Plan 9, No. 353 North Riyang Road, China (Shanghai) Pilot Free Trade Zone

EU Importer: Bose Products B.V., Gorslaan 60, 1441 RG Purmerend, The Netherlands

Taiwan Importer: Bose Taiwan Branch, 9F-A1, No.10, Section 3, Minsheng East Road, Taipei City 104, Taiwan
Phone Number: +886-2-2514 7676

Mexico Importer: Bose de México, S. de R.L. de C.V. , Paseo de las Palmas 405-204, Lomas de Chapultepec, 11000 México, D.F. Phone Number: +5255 (5202) 3545

Input Rating: 100-240V ~ 50/60Hz, 55W

Android, Google Play and the Google Play logo are trademarks of Google LLC.

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Bose Corporation is under license.

 The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

ADAPTiQ, Bose, Bose Bass Module, Bose Music, the Bose Music logo, Bose Soundbar, SoundTouch, the wireless note design, and Virtually Invisible are trademarks of Bose Corporation.

Wi-Fi is a registered trademark of Wi-Fi Alliance[®].

Bose Corporation Headquarters: 1-877-230-5639

©2018 Bose Corporation. No part of this work may be reproduced, modified, distributed or otherwise used without prior written permission.

WHAT'S IN THE CARTON

Contents 9

BASS MODULE PLACEMENT

Recommendations..... 10

POWER

Connect the bass module to power 11

CONNECT TO A SOUNDBAR

Choose your connection method..... 12

Connect using the Bose Music app 13

New to the Bose Music app?..... 13

Connect using the SoundTouch 300 remote..... 14

Check for sound..... 14

ADAPTIQ AUDIO CALIBRATION

Choose your audio calibration method..... 15

Run ADAPTIQ audio calibration using the Bose Music app..... 16

Initial setup..... 16

Use the Settings menu 16

Run ADAPTIQ audio calibration using the SoundTouch 300 remote..... 17

BASS SETTING

Choose your bass adjustment method 19

Adjust the bass using the Bose Music app 20

Adjust the bass using the SoundTouch 300 remote 20

Reset the bass..... 21

BASS MODULE STATUS

Status light 22

CARE AND MAINTENANCE

Clean the bass module 23

Replacement parts and accessories..... 23

Limited warranty 23

TROUBLESHOOTING

Try these solutions first 24

Other solutions 24

Unable to complete ADAPTiQ audio calibration with your
SoundTouch 300 soundbar 26

 
Reset the connection to the soundbar..... 27

Reset the bass module 28

Connect using an audio cable 29

CONTENTS

Confirm that the following parts are included:

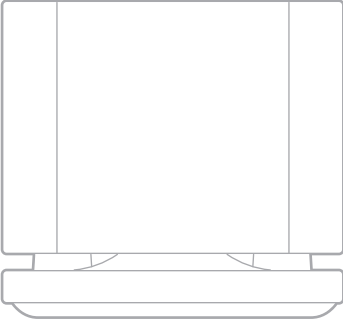

Bose Bass Module 500



Power cord*

*May ship with multiple power cords. Use the power cord for your region.

NOTE: If any part of the product is damaged, do NOT use it. Contact your authorized Bose dealer or Bose customer service.

Visit: worldwide.Bose.com/Support/BASS500

RECOMMENDATIONS

For best performance, follow these recommendations when placing the bass module:

Do NOT place any objects on top of the bass module.

To avoid wireless interference, keep other wireless equipment 1 – 3 ft. (0.3 – 0.9 m) away from the bass module. Place the bass module outside and away from metal cabinets, other audio/video components and direct heat sources.

 
Place the bass module on a stable and level surface. Vibration can cause the bass module to move, particularly on smooth surfaces like marble, glass or highly polished wood.

Place the bass module along the same wall as your TV, or along any other wall in the front third of the room.


Keep the back side of the bass module (the side opposite the Bose logo) at least 3 in. (7.6 cm) from any other surface. Blocking the port on the bottom of this side may affect acoustic performance.

For more bass, place the bass module closer to walls and corners. For less bass, place the bass module further from walls and corners.

Make sure there is an AC (mains) outlet nearby.

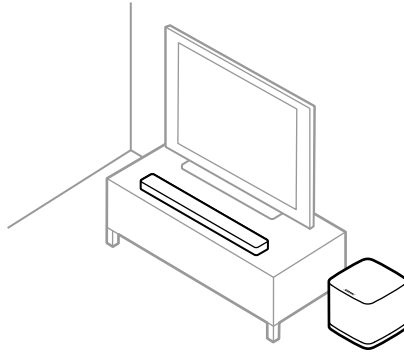


 CAUTION: Do NOT place the bass module on its top or sides when in use.

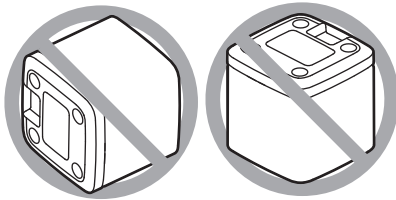

CONNECT THE BASS MODULE TO POWER

 1. Connect the power cord to the $\tilde{\text{POWER}}$ connector on the bass module.

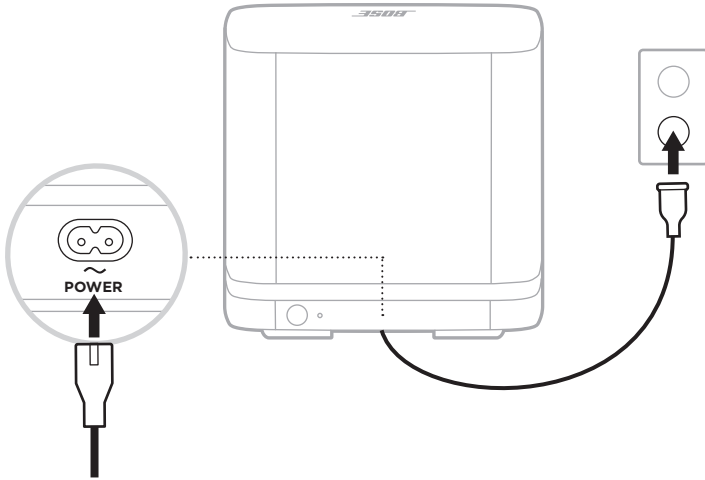

2. Plug the other end of the power cord into an AC (mains) power outlet.

CHOOSE YOUR CONNECTION METHOD

The way you connect the bass module depends on your soundbar. Choose your connection method from the table below.


SOUNDBAR	CONNECTION METHOD
Bose Soundbar 500 or Bose Soundbar 700	Connect using the Bose Music app (see page 13). NOTE: If you can't access or have trouble connecting using the Bose Music app, see "Troubleshooting" on page 24.
SoundTouch 300 soundbar	Connect using your soundbar's remote (see page 14).

CONNECT USING THE BOSE MUSIC APP

1. In the Bose Music app, from the **My Bose** screen, select your soundbar.
2. Tap the soundbar image in the bottom-right corner of the screen.
3. Tap **Settings > Accessory Speakers > Add Bose Accessory Speakers**.
Follow the app instructions.

 New to the Bose Music app?


 
1. On your mobile device, download the Bose Music app.

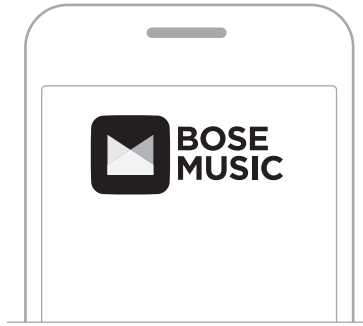



2. Follow the app instructions.

NOTE: For support information related to the Bose Music app, visit: global.Bose.com/Support

CONNECT USING THE SOUNDTOUCH 300 REMOTE

  1. On your soundbar's remote, press the SoundTouch button .
2. Press and hold 7 until the connectivity light  on the soundbar blinks white.

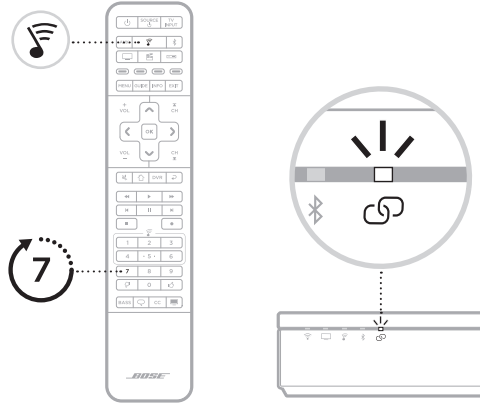

Once connected, you hear a tone. The light on the back of the bass module and  on the soundbar glow white.

NOTES: Connecting may take several minutes.

If the bass module doesn't connect to the soundbar, see "Troubleshooting" on page 24.

Check for sound

NOTE: To avoid hearing distorted audio, turn off your TV speakers. Refer to your TV owner's guide for more information.

1. Power on your TV.
2. If you are using a cable/satellite box or other secondary source:
 - a. Power on this source.
 - b. If this source is connected to your TV, select the appropriate TV input.
3. Power on the soundbar.

You hear sound coming from the bass module.

NOTE: If you don't hear sound from the bass module, see "Troubleshooting" on page 25.

After setting up the bass module and connecting with the soundbar, run ADAPTIQ audio calibration for best acoustic performance. ADAPTIQ audio calibration customizes the sound of the system to the acoustics of your listening area by taking five audio measurements. To run an audio calibration, you need 10 minutes when the room is quiet.

During ADAPTIQ audio calibration, a microphone on the top of the ADAPTIQ headset (provided with the soundbar) measures the sound characteristics of your room to determine optimal sound quality.

If you no longer have the ADAPTIQ headset, contact Bose customer service for a replacement.

CHOOSE YOUR AUDIO CALIBRATION METHOD

The way you run ADAPTIQ audio calibration depends on your soundbar. Choose your audio calibration method from the table below.

SOUNDBAR	AUDIO CALIBRATION METHOD
Bose Soundbar 500 or Bose Soundbar 700	Run ADAPTIQ audio calibration using the Bose Music app (see page 16).
SoundTouch 300 soundbar	Run ADAPTIQ audio calibration using the soundbar's remote (see page 17).

RUN ADAPTIQ AUDIO CALIBRATION USING THE BOSE MUSIC APP

Initial setup

After you connect the bass module to your soundbar, the Bose Music app prompts you to run ADAPTIQ audio calibration. Follow the app instructions.

 
Use the Settings menu

If you later connect the optional Virtually Invisible 300 surround speakers or Bose Surround Speakers, move the bass module or move any furniture, run ADAPTIQ audio calibration to ensure optimal sound quality.




1. In the Bose Music app, from the **My Bose** screen, tap your soundbar.
2. Tap the soundbar image on the bottom-right corner of the screen.
3. Tap **Settings > ADAPTIQ > Run ADAPTIQ**.
4. Follow the app instructions.

RUN ADAPTIQ AUDIO CALIBRATION USING THE SOUNDTOUCH 300 REMOTE

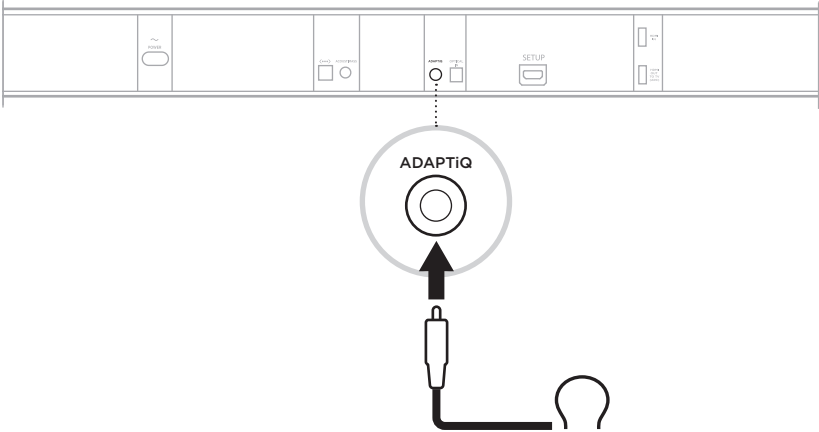 
1. Insert the ADAPTIQ headset cable into the ADAPTIQ connector on the back of the SoundTouch 300 soundbar.


 


2. Put on the ADAPTIQ headset.

3. On your remote, press the SoundTouch button .
4. Press and hold 8 until the TV light  and the *Bluetooth* light  on the soundbar glow green.

ADAPTIQ audio calibration begins.

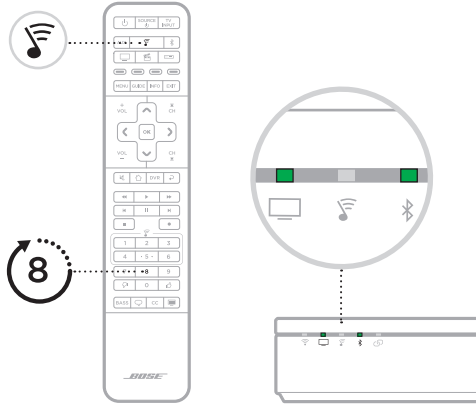

NOTE: If you don't hear your language, press  and  on the navigation pad to cycle through languages. To reset the language, press and hold 8 for 10 seconds.

5. Follow the voice prompts until the ADAPTIQ process is complete.

If you hear an error message and are unable to complete ADAPTIQ audio calibration, see page 26.

6. Unplug the ADAPTIQ headset from the soundbar and store it in a safe place.

TIP: If you later connect the optional Virtually Invisible 300 surround speakers or Bose Surround Speakers, move the bass module or move any furniture, run ADAPTIQ audio calibration again to ensure optimal sound quality.

CHOOSE YOUR BASS ADJUSTMENT METHOD

The way you adjust the bass depends on your soundbar. Choose your bass adjustment method from the table below.

SOUNDBAR	BASS ADJUSTMENT METHOD
Bose Soundbar 500 or Bose Soundbar 700	Adjust the bass using the Bose Music app (see page 20).
SoundTouch 300 soundbar	Adjust the bass using your soundbar's remote (see page 20). NOTE: For optimal sound quality for dialogue-only programs, such as news and talk shows, enable dialogue mode. For more information, refer to the SoundTouch 300 owner's guide. Visit: global.Bose.com/Support/ST300

ADJUST THE BASS USING THE BOSE MUSIC APP

NOTE: You can only adjust the bass using the app if your bass module is connected to the Bose Soundbar 500 or Bose Soundbar 700.









 
1. In the Bose Music app, from the **My Bose** screen, select your soundbar.
2. Tap the soundbar image in the bottom-right corner of the screen.
3. Tap **Adjustments** to adjust the bass.

ADJUST THE BASS USING THE SOUNDTOUCH 300 REMOTE

1. On the SoundTouch 300 remote, press **BASS**.



The lights on the soundbar glow according to the current bass setting.

BASS SETTING	LIGHT ACTIVITY
+4	
+3	
+2	
+1	
0 (default)	
-1	
-2	
-3	
-4	

- Adjust the bass by doing one of the following:

Press Volume up button $\sqrt{\text{VOL}}$ to increase the bass.

Press Volume down button $\bar{\sqrt{\text{VOL}}}$ to decrease the bass.

- Press **BASS**.

The soundbar saves the current bass setting.

 
Reset the bass

On your remote, press and hold **BASS** until the SoundTouch light ST on the soundbar blinks twice.

The bass setting resets to original factory settings.

STATUS LIGHT

The light on the back of the module shows system status.

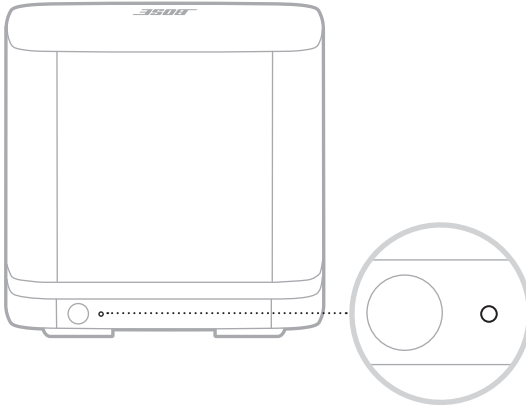

LIGHT ACTIVITY	SYSTEM STATE
Solid white	Connected to the soundbar
Blinking white	Downloading a software update
Solid amber (dim)	Disconnected from the soundbar
Blinking amber	Ready to connect to the soundbar
Off	Power-saving mode
Blinking red	Error - contact Bose customer service

CLEAN THE BASS MODULE

Clean the exterior of the bass module with a soft, dry cloth.

CAUTIONS:

Do NOT allow liquids to spill onto the bass module or into any openings.

Do NOT use any sprays near the bass module.

Do NOT use any solvents, chemicals or cleaning solutions containing alcohol, ammonia or abrasives.

Do NOT allow objects to drop into any openings.

REPLACEMENT PARTS AND ACCESSORIES

Replacement parts and accessories can be ordered through Bose customer service.

Visit: worldwide.Bose.com/Support/BASS500

LIMITED WARRANTY

Your bass module is covered by a limited warranty. Visit our website at global.Bose.com/warranty for details of the limited warranty.

To register your product, visit global.Bose.com/register for instructions. Failure to register will not affect your limited warranty rights.

TRY THESE SOLUTIONS FIRST

If you experience problems with the bass module:

Unplug the power cords for the bass module and soundbar, wait 30 seconds and plug them firmly into a live AC (mains) outlet.

Secure all cables.

Check the bass module status (see page 22).

Move the bass module and soundbar away from possible interference (wireless routers, cordless phones, televisions, microwaves, etc.).

Place the bass module according to the placement guidelines (see page 10).

OTHER SOLUTIONS

If you could not resolve your issue, see the table below to identify symptoms and solutions to common problems. If you are unable to resolve your issue, contact Bose customer service.

Visit: worldwide.Bose.com/Support/BASS500

SYMPTOM	SOLUTION
Bose Music app doesn't work on mobile device	<p>Make sure the Bose Music app is compatible with your device.</p> <p>Visit: worldwide.Bose.com/Support/BASS500</p>
Bass module doesn't connect to the soundbar	<p>Confirm that the status light is blinking amber, indicating that the bass module is ready to connect (see page 22).</p> <p>Repeat the connection process (see page 12).</p> <p>If the bass module was previously connected to the soundbar, reset the bass module's connection (see page 27).</p> <p>Unplug the power cords for the bass module and soundbar, wait 30 seconds and plug them firmly into a live AC (mains) outlet.</p> <p>Connect the bass module to the soundbar using a 3.5 mm audio cable (see page 29).</p> <p>NOTE: If you don't have a 3.5 mm audio cable (commonly used for headphones and mobile devices), contact Bose customer service for this part. You can also purchase this part at your local electronics store.</p>

SYMPTOM	SOLUTION
Intermittent or no audio	<p>Unmute the system.</p> <p>Increase the volume.</p> <p>Confirm that the soundbar is playing audio. If not, refer to your soundbar owner's guide for troubleshooting. Visit:</p> <p style="padding-left: 20px;">Bose Soundbar 500: worldwide.Bose.com/Support/SB500</p> <p style="padding-left: 20px;">Bose Soundbar 700: worldwide.Bose.com/Support/SB700</p> <p style="padding-left: 20px;">SoundTouch 300 soundbar: global.Bose.com/Support/ST300</p> <p>Confirm that the status light is glowing solid white, indicating that the bass module is connected to the soundbar (see page 22).</p> <p>Test different sources (if available).</p> <p>Make sure that you're playing audio that has bass frequencies, such as music or movies.</p> <p>Repeat the connection process (see page 12).</p> <p>If the bass module was previously connected to the soundbar, reset the bass module's connection (see page 27).</p> <p>Place the bass module according to the placement guidelines (see page 10).</p>
Poor or distorted sound from the bass module	<p>Test different sources (if available).</p> <p>Place the bass module according to the placement guidelines (see page 10).</p> <p>Remove all protective films from the bass module.</p> <p>Run ADAPTiQ audio calibration (see page 15).</p> <p>NOTE: If you no longer have the ADAPTiQ headset (provided with your soundbar), contact Bose customer service for a replacement.</p>
Bass is too heavy or low	<p>Adjust the bass (see page 19).</p> <p>Run ADAPTiQ audio calibration (see page 15).</p> <p>NOTE: If you no longer have the ADAPTiQ headset (provided with your soundbar), contact Bose customer service for a replacement.</p> <p>Move the bass module away from nearby walls and corners.</p>

UNABLE TO COMPLETE ADAPTiQ AUDIO CALIBRATION WITH YOUR SOUNDTOUCH 300 SOUNDBAR

If you can't complete ADAPTiQ audio calibration with your SoundTouch 300 soundbar, listen to the voice prompts for the following error messages:

ERROR MESSAGE	PROBLEM	WHAT TO DO
1	The microphone on the ADAPTiQ headset can't detect sound.	<p>Secure all cables.</p> <p>Disconnect the ADAPTiQ headset cable and reconnect it firmly into the soundbar's ADAPTiQ connector.</p> <p>Ensure the microphone opening on the top of the ADAPTiQ headset is not blocked.</p> <p>Your ADAPTiQ headset may be damaged. Call Bose customer service for replacement parts.</p>
2	The room is too loud.	Re-run ADAPTiQ audio calibration when the room is quiet.
3	The ADAPTiQ headset is too close to the speakers.	Move the ADAPTiQ headset farther away from the speakers.
4	The listening locations are too similar.	Move 1 – 2 ft. (0.3 – 0.6 m) away from your previous listening location.
5	The ADAPTiQ headset cannot take measurements due to movement.	Hold your head still.

 
After correcting your problem, you must run ADAPTiQ audio calibration again (see page 15).

If you hear a different error message, contact Bose customer service for further instructions.

RESET THE CONNECTION TO THE SOUNDBAR

If the bass module no longer connects to the soundbar, reset the bass module's wireless connection. Resetting the wireless connection causes the soundbar to try to reconnect to the bass module, which may resolve connection issues.

To reset the wireless connection, press the button on the back of the bass module.

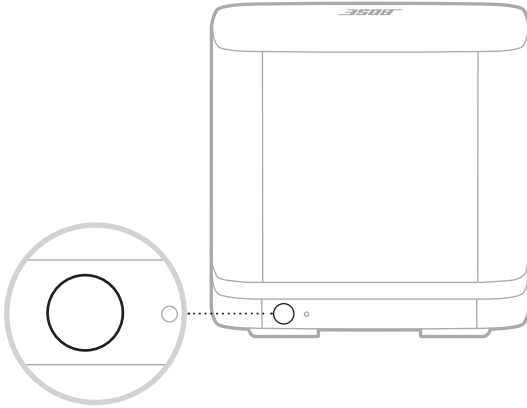


When the bass module reconnects to the soundbar, you hear a tone and the light on the back of the bass module glows white.

RESET THE BASS MODULE

Resetting the bass module clears all connection information and returns the bass module to original factory settings.

 1. Press and hold the button on the back of the bass module until the system status light blinks white.

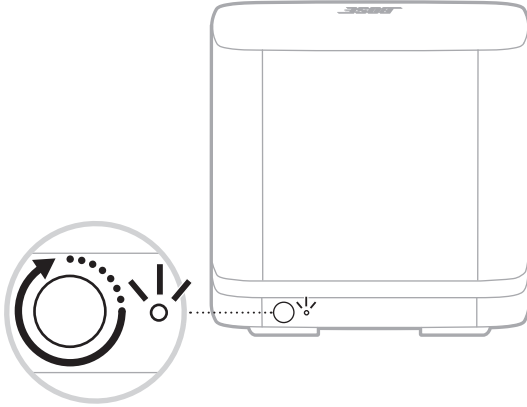

When the reset is complete, the light blinks amber.

 
2. Connect the bass module to the soundbar (see page 12).

CONNECT USING AN AUDIO CABLE

You can also connect the module to the soundbar using a 3.5 mm audio cable (not provided).

If you don't have a 3.5 mm audio cable (commonly used for headphones and mobile devices), contact Bose customer service for this part. You can also purchase this part at your local electronics store.

1. Connect one end of a 3.5 mm audio cable to the **BASS IN** connector on the bass module.

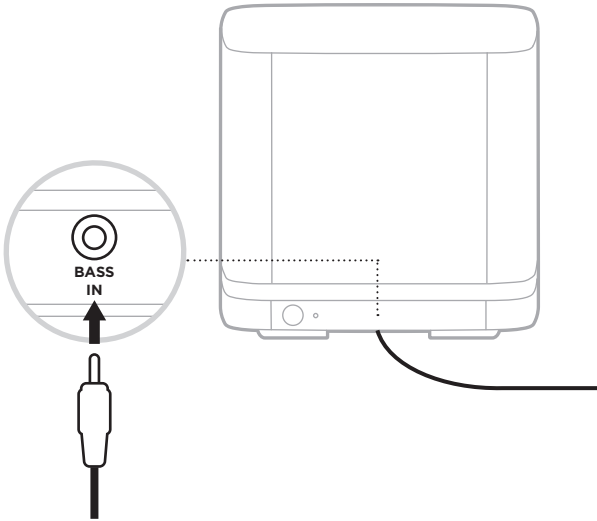


2. Connect the other end of the cable to the applicable connector on the back of the soundbar (see page 30).


SOUNDBAR

BASS MODULE CONNECTOR LOCATION

 Bose Soundbar 500

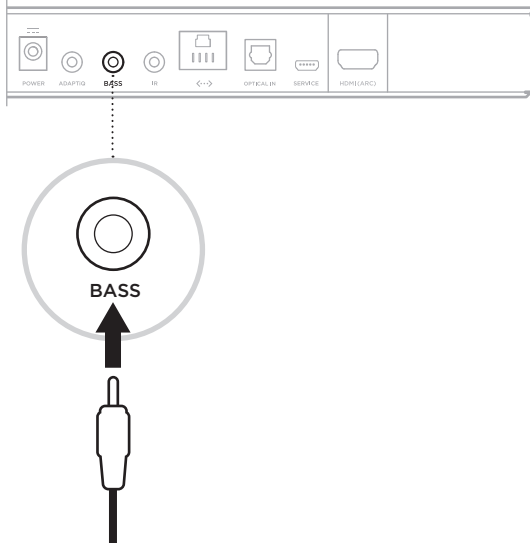


Bose Soundbar 700

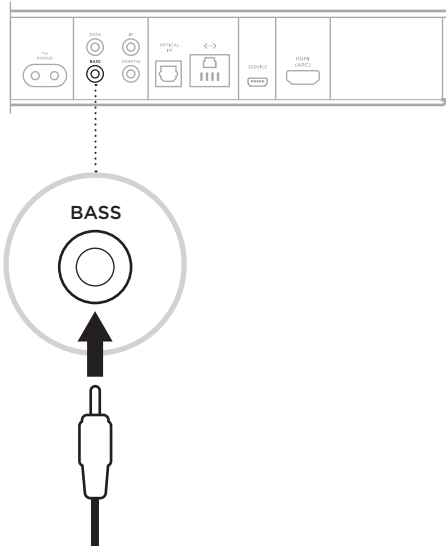 

SOUNDBAR

BASS MODULE CONNECTOR LOCATION

 **SoundTouch 300
soundbar**

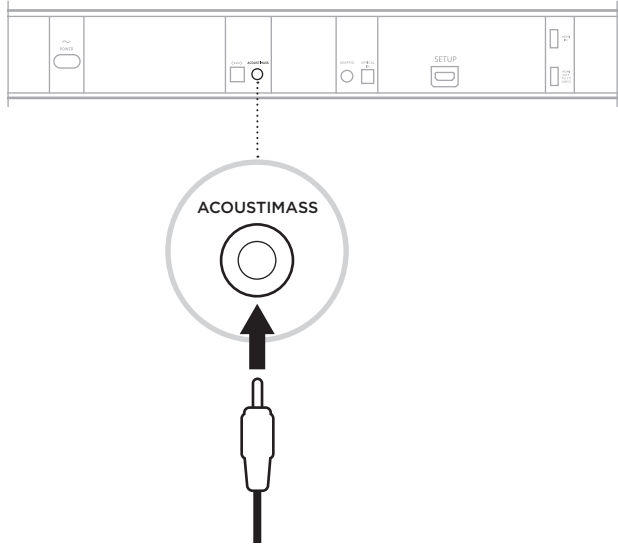



810673-0010