

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS OR CHANGE TO THIS EQUIPMENT. SUCH MODIFICATIONS OR CHANGE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.




©2019 ZAGG Inc All Rights Reserved | NASDAQ: ZAGG | MADE IN CHINA

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by ZAGG Inc is under license.

USB-C is a trademark of USB Implementers Forum.
Other trademarks are property of ZAGG IP Holding Co., Inc.

314-00475-B | 10/16/19

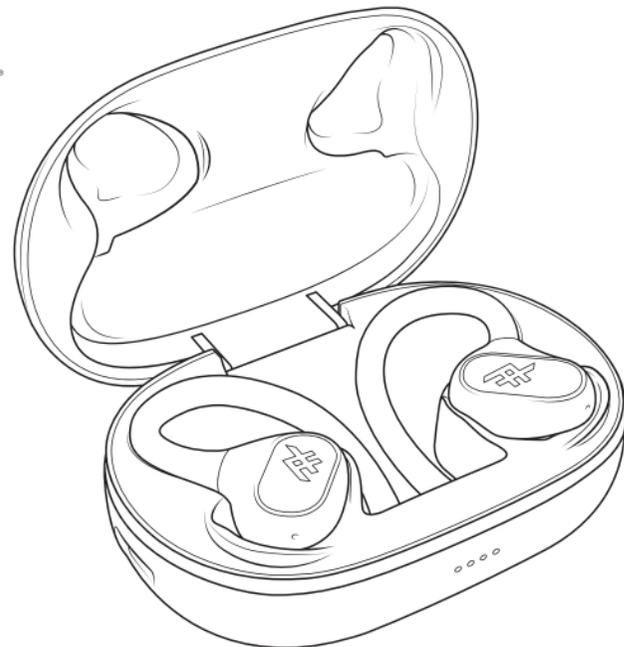

AIRTIME™ SPORT

Quick Start Guide

Airtime™ Sport Instructions

Introduction

Welcome to truly wireless audio with 25 hours total of battery life and quick charging case.

Pairing the Wireless Earbuds with Your Device

1. Simply open the case and remove the earbuds. A pairing signal will be sent to your Bluetooth® device. The earbuds will flash white, indicating pairing mode.
2. On your device, go to Bluetooth® under Settings and select IFROGZ Airtime Sport.
3. Complete any additional steps your device may require. The lights on the earbuds will flash white and then turn off, indicating that pairing was successful.

Turning Earbuds On/Off

To turn the earbuds on, simply remove the buds from the case.

If you would like to use only one bud, simply remove the right earbud from the case. The right earbud is the primary bud and can be used without the other. Please note, the left earbud will not work alone unless the right earbud is also removed from the case.

To turn the earbuds off, simply return them to the case. You can also tap then hold the IFROGZ icon on the earbud for 10 seconds to turn it off; it will flash red, indicating the power is off.

The earbuds will go into hibernation mode if not used for 20 minutes.

Using the Earbuds

AIRTIME SPORT True Wireless earbuds have built-in touch navigational controls. Just tap on the end of the earbud (on the IFROGZ logo) to navigate.

Music Controls

Left Bud	Actions	Right Bud
▶▶ Play / Pause	● Quick Tap	▶▶ Play / Pause
◀◀ Previous Track	●● 2x Taps	▶▶ Next Track
◀ Decrease Volume	■ Tap & Hold	▶ Increase Volume

Call Controls

📞 Answer Call / End Call	● Quick Tap	📞 Answer Call / End Call
📞 Cancel Call	■ Tap & Hold	📞 Cancel Call
🗣️ Siri / Voice Command	●●● 3x Taps	🗣️ Siri / Voice Command

Charging the Wireless Earbuds

The case carries enough power to charge the earbuds up to 4 times.

1. Place the earbuds in the charging case. You'll feel them magnetically click into place.
2. A red light on the earbuds will indicate charging. When the red light turns off, they are fully charged.

Charging the Case

Your case comes charged and ready to go. You can re-charge the case wirelessly using a wireless charging pad, or charge the case manually using the included USB-C cable.

Wireless Charging

1. Simply drop the charging case on a compatible wireless charging pad.
2. The Battery Indicator light will flash according to its current battery level. This indicates your case is charging. When all 4 lights are illuminated, your case is fully charged.

Manual Charging

1. Connect the included USB-C charging cable to the port on the side of your case.
2. Connect the USB-A end of the cable to your preferred 5V USB outlet.
3. The Battery Indicator light will flash according to its current battery level. This indicates your case is charging. When all lights are fully illuminated, your case is fully charged. They will stay fully illuminated until the case is disconnected from the power source.
4. Disconnect the charging cable.

Quick Charge Feature

Get one more hour of playtime by nesting the earbuds in the charging case for ten minutes.

Checking the Battery Level

Your case carries enough power to charge your wireless earbuds 4 times for a total of 25 hours. To check how much power your case still has, place the earbuds in the case. The LED on the front of the case will illuminate, indicating how much battery remains in the case:

- If it lights up completely, 75% or more remains
- If it lights up $\frac{3}{4}$ of the way, between 50-74% remains
- If it lights up $\frac{1}{2}$ of the way, between 25-49% remains
- If it lights up $\frac{1}{4}$ of the way, less than 24% remains.

Factory Reset

If you have functionality issues, a factory reset can help. Here's how to perform one.

1. Place both buds in the case.
2. Reset the right bud.
 - a. Remove the right bud from the case.
 - b. Tap and hold for 10 seconds until light flashes red and turns off.
 - c. Tap and hold for five seconds until light turns on and flashes red and white.
 - d. Quickly tap the bud six times, the light will turn off.
 - e. Return the bud to the case.
3. Reset the left bud.
 - a. Remove left bud from the case.
 - b. Quickly tap the bud six times, the light will turn off.
 - c. Return the bud to the case.
4. Connect left and right.
 - a. Remove both buds from the case and allow them to connect to each other for about five seconds.
5. Connect as normal.
 - a. The buds are now reset to factory settings. Remove them from the case and pair as normal.