





Dogness Smart CAM Treater Instruction

1

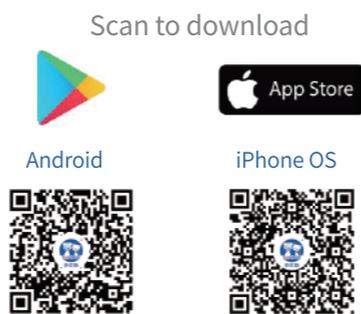

Download App and set up account

2

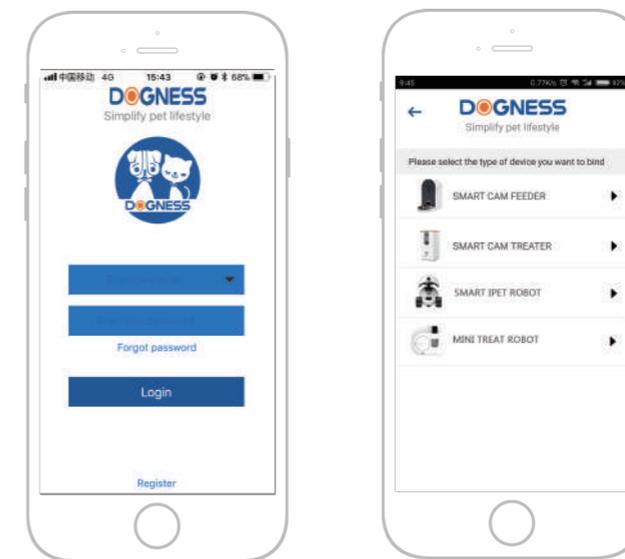

Login your account and add smart product

3



Connect with WiFi

4



Use the device camera to scan the QR code in the App to pair the device

5




Complete pairing the device via the network connection

6




Note: Position the device within 10 meters from the WiFi source for best experience

7

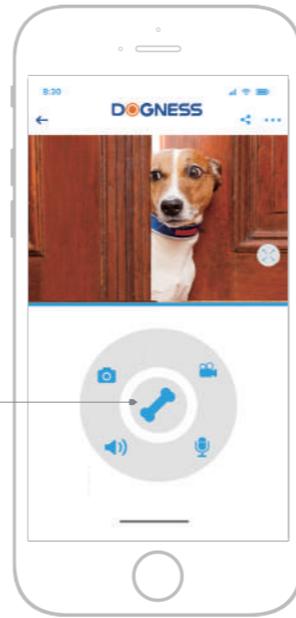

Main control

8

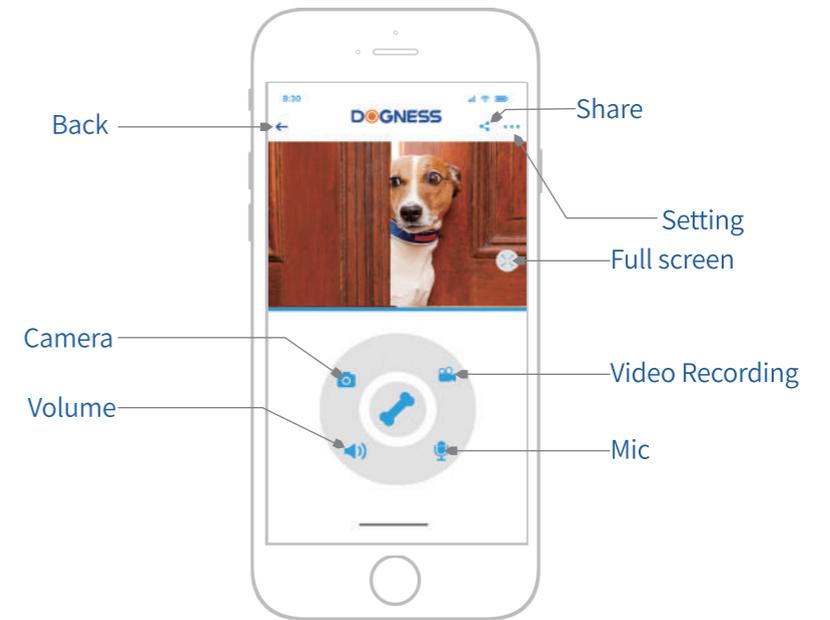

Other controls

9

## Specifications:

Description: Dogness Smart CAM Treater

Product Size: L12.5\*W12.5\*H25 cm

Net Weight: 1.08 kg

Capacity: 4.5 lbs (around 220 g)

Product Material: ABS (except natural bamboo lid)

Camera: 165° wide angle HD with night vision

WiFi Frequency: 2.4 G

App Installation min requirement: Android 5.0 or IOS 7.0

Power Adapter:

Input : 110-240 V, 50/60 HZ, 0.4 A

Output : 5.0 V, 1000 mA

10



SET button: Short press to treat manually, hold for 5S to restore factory setting.  
 Wifi Indicator light: Flashing green means connecting. Solid green means connection successful.

11



12

## CAUTION:

1. Do not pull the power cord directly when plugging in or unplugging the adapter.
2. Do not put any foreign object in the device.
3. Do not disassemble this product by yourself.
4. Keep out of reach of children.
5. Do not use the adapter if the power cord is damaged or not working properly.
6. Indoor use only.
7. Dry food only for the snack container. Suggested snack size is between 5-15mm.
8. This product contains electronic components. It is not water proof. Do not place the device in wet areas.
9. Stop using the device and contact the customer service if there is a sign of malfunction such as abnormal odor, smoke, or heat.

13

## FAQs:

1. Why there is no treat coming out when pressing the treat button from the App?

Answer:

- A. Probably the treat container is out of treats. Please fill in the treats.
- B. If the treat container is not empty but the App indicates no treat, please check if the food outlet is blocked or damaged. Clean the food outlet if necessary.
- C. Probably the network connection is delayed or interrupted. Please check your network connection and press the treat button again.

2. The video is not played smoothly? What should I do?

Answer: Please check your network connection and play the video again.

3. Unable to login the existing account, what should I do?

Answer: First, check if your network is connected appropriately.

Second, check if there is other user using your account.

If necessary, unload the App and re-download the App, and try again.

If you are using Android system, please try the following steps:

Mobile-> Setting-> Apps & notifications-> Dogness App-> Storage -> Clear data, then login again.

4. If there is any other question, please visit following website :

<http://www.dognessnetwork.com/help/index.html>

14