


Hidden Book Safe

User Guide

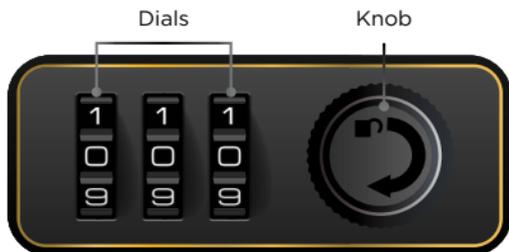

The combination is factory set to code 0-0-0.

How to Open the Safe

Set the combination with the proper code aligned to the center of each dial. Turn the knob counter-clockwise to unlatch the door and open the safe.




Locked

*If the correct code is not set on the dials you will not be able to turn the knob.

How to Lock the Safe

With the door of the safe closed, turn the knob clockwise to latch the door. Set the dials to a random combination. The safe is now locked.

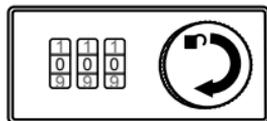

Unlocked

Instructions on how to set a new combination code are located on the back of this sheet.

WARNING: You must enter the current combination to reset the code.

To ensure you do not forget the combination, write your new code below and keep this insert in a safe place.

Write your new
combination here:


HOW TO SET THE COMBINATION

1

Step 1 (Figure 1 & 2)

Use the proper combination to open the safe and locate the back of the lock. Use code 0-0-0 if this is your first time setting the code.

Figure 1

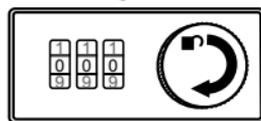

Unlocked

2

Step 2 (Figure 3)

Move the change lever from the "A" position to the "B" position to enable the code setting function.

Figure 2

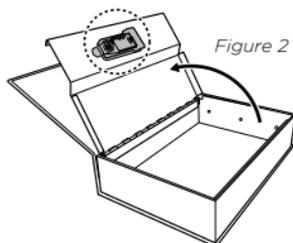


Figure 3



3

Step 3 (Figure 4)

Set the combination with your desired code aligned to the center of each dial.

Figure 4



**Sample code shown above.
Choose any combination.*

4

Step 4 (Figure 5)

Move the change lever from the "B" position to the "A" position to save your new code.

Figure 5



Your new combination is now set.

To reset the code again, simply repeat these steps.

WARNING: You must enter the current combination to reset the code. To ensure you do not forget the combination, write your new code on the front of this insert and keep it in a safe place.