

Breezie FAQ's

Q. How do you recharge the fan?

A. Plug the 36in Type-C to USB Charging Cable into the Type-C Port and a USB power source (not included). The LED Indicator Lights will blink while charging and will go solid once fully charged.

Q. How do you charge a device?

A. Plug a USB charging cable into the USB Charging Port then into a USB-chargeable device. The device will begin to charge.

Q. How do you use the Aromatherapy Pads?

A. Remove the Front Cover of the Breezie™ by rotating it counter-clockwise and pulling away from the body of the fan.

- Add a few drops of a desired essential oil (not included) to a Foam Aromatherapy Pad.
- Locate and remove the Aromatherapy Cover by rotating counter-clockwise and pulling away from the Front Cover.
- Place the Foam Aromatherapy Pad within the Aromatherapy Insert on the inside Front Cover. Align the Aromatherapy Cover with the grooves and rotate clockwise to lock it in place.
- Reconnect the Front Cover of the fan by aligning the tabs within the track and rotating clockwise to lock it in place.
- Turn on the fan and enjoy the scent.

Q. How long is the recharging time?

A. ±8 Hours (from 0%).

Q. Can this fan be used outside?

A. Yes, It can be outdoors. It's perfect for traveling, clipping it on a stroller, for camping, and more.

Q. Can the fan battery be replaced?

A. No, there is no way to change the battery safely.

Q. What are the dimensions of the fan?

A. 8.62 in x 6.87 in x 3.40 in.

Q. Is the fan portable?

A. Yes. The fan weighs 1.21lbs (19oz) and can be installed by using the clamp, hook, magnets, or keyhole slots.

- Q.** Is the fan able to run while it's plugged in?
A. Yes.
- Q.** Can you still use the fan if you lost the remote?
A. Yes, there are buttons on the back of the fan. Please be aware that if the remote is lost, you will **not** be able to set the fan timer.
- Q.** Are there different oscillation modes?
A. Yes: 120° | 360° | Off
- Q.** Are the blades of the fan easy to clean?
A. Yes, it is possible to clean the blades and fan's body. Remove the front cover of the Breezie by rotating it counter-clockwise and pulling away from the body of the fan.
- Q.** How many light modes are there?
A. 2 Light modes: Low and High
- Q.** Is the LED light a warm or cooler tone?
A. The LED lights have a bright and cool tone/hue.
- Q.** How many wind speeds are there?
A. 3 Adjustable speeds: Low, Medium, and High
- Q.** Can it be packed in a suitcase for air travel?
A. The Breezie meets FAA regulations and is approved to carry on an airplane! Please note, this portable fan and power bank must be carried with you and not stored in your checked baggage during travel.
- Q.** What devices is this compatible with?
A. Type-C Port (Input): Compatible with newer devices by Samsung, Microsoft, Google, LG, Huawei, select Apple iPads (2018 and newer), select Tracfonos, and More

USB Port (Output): Use any charging cable compatible with your device. Plug one end into the device and the other end into the Fan's USB port.
- Q.** I want to take this fan camping with me. Is it suitable for hanging on/in a tent?
A. Yes, the fan is equipped with a retractable hook. It even has a sturdy magnetic base if needed to prop it up.
- Q.** Is a USB adapter/power source included?
A. No.

Q. Is there a place to store the remote when it's not being used?
A. Yes, the fan has a separate storage compartment for the remote located on the clamp.

Q. I know the fan can be turned 360° to any direction but, does it have a switch / option to oscillate on its own?

A. The fan has one button for oscillation

- 1. With the fan on, press the Oscillation Button to turn on the 120° oscillation.
- 2. Continue to press the Oscillation Button to cycle to the 360° oscillation mode.
- 3. Press the Oscillation Button a third time to turn off the oscillation.
- The remote has three buttons for oscillation: 120°, 360°, OFF
 - 1. With the fan on, press the 120° Oscillation Button or 360° Oscillation Button to begin oscillating the fan.
 - 2. Press the Stop Oscillation Button to turn off the oscillation.

Q. I know the fan can be turned 360° to any direction but, does it have switch/option to oscillate on its own?

A. The fan itself has one button for oscillation

1. With the fan on, press the Oscillation Button to turn on the 120° oscillation.
2. Continue to press the Oscillation Button to cycle to the 360° oscillation mode.
3. Press the Oscillation Button a third time to turn off the oscillation.

- The remote has three buttons for oscillation: 120°, 360°, OFF
 - 1. With the fan on, press the 120° Oscillation Button or 360° Oscillation Button to begin oscillating the fan.
 - 2. Press the Stop Oscillation Button to turn off the oscillation.

Q. How long will the fan operate for on a single charge?

A. Low: ± 22 Hours
Mid: ± 10 Hours
High: ± 6 Hours

Q. How long does it take to recharge the fan?

A. It takes about 8 hours to fully recharge the battery from 0 to 100%.

Q. Are there lights to indicate the fan is charging?

A. Yes, there are 4 Red LED Indicator Lights.

- No lights: 0%
- One light: 1-25%
- Two Lights: 26-50%
- Three Lights: 51-75%
- Four Lights: 76-100%

Q. Do I Have to Charge before I Use it?

A. It is recommended to charge the internal battery to 100% before charging connected devices.

Q. Is there a Warranty?

A. Yes, Limitless Innovations offers a 1-Year Limited Warranty.

Q. Who do I contact if I have a question or issue?

A. For any inquiries, please contact our support team at LimitlessInnovations.com/Support, email us at Support@LimitlessInnovations.com, or call us at (855) 843-4828.