



**How to
charge your
Ultrahuman Ring Air**

Connect the USB cable to your charging dock and plug the other end into a power source, such as a USB wall plug or laptop.

The Ring charger's LED light will turn purple once the charger is powered on.

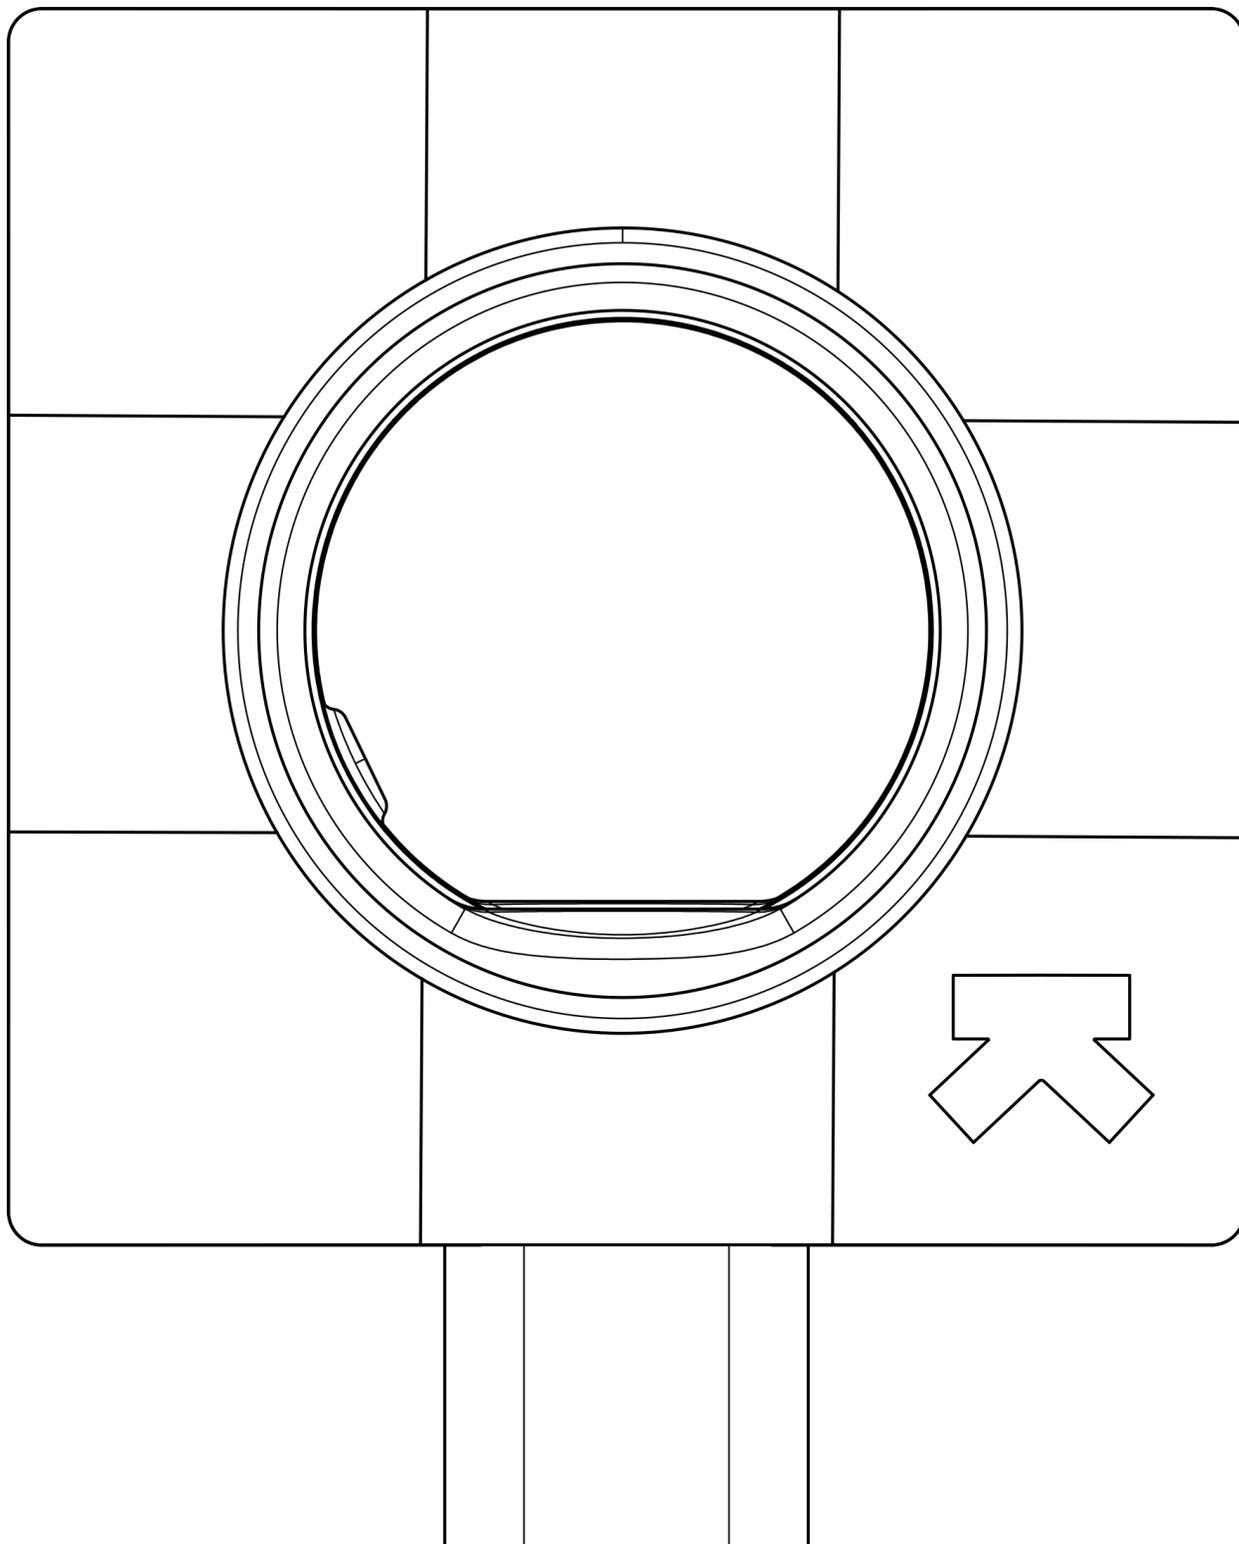

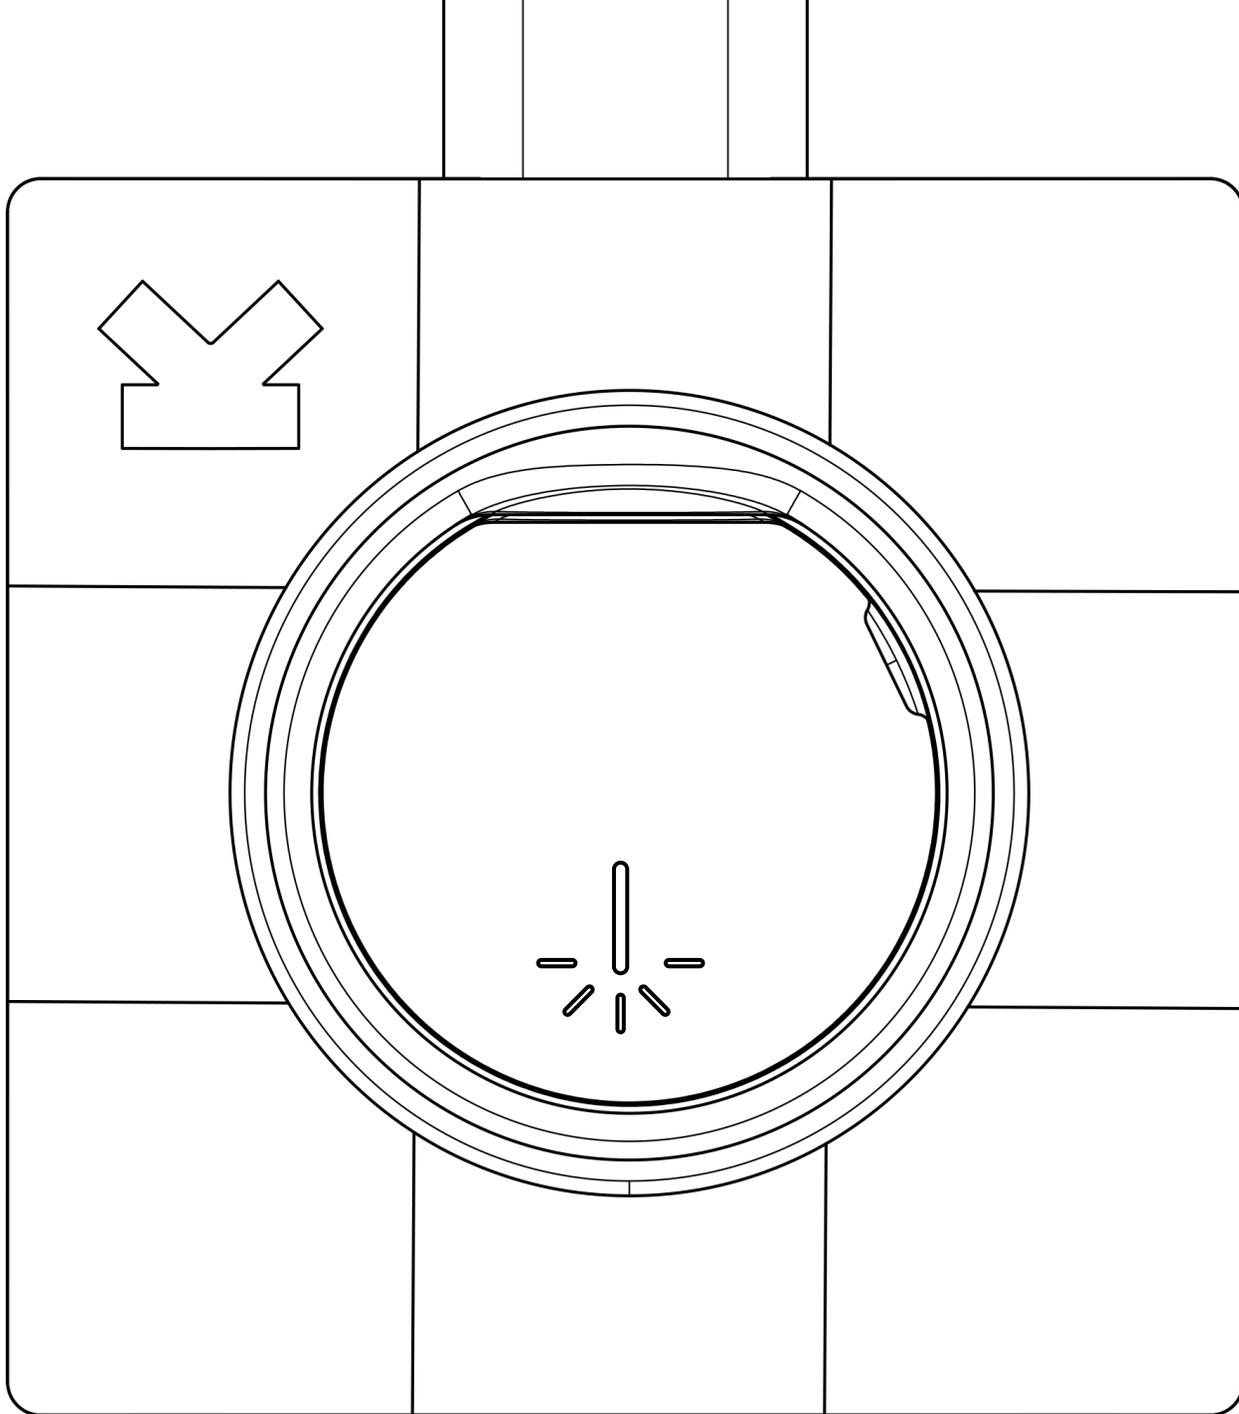

Align your Ring in the correct orientation and place it on the dock.

The LED light starts blinking white to indicate your Ring is charging.

Tip: To place the Ring correctly on the charging dock, align the Ring in the correct orientation with the LED light while placing it on the charging dock.

Ensure that the embossed pattern aligns with the LED light while the Ultrahuman text and logo face upwards.