

LIMITLESS™

# Portable Speaker & 10,000mAh Power Bank

Quick Start Guide



## TECH SPECS

**Model:** LIM-BTSPB-XXX  
**Battery Capacity:** 10,000mAh | 37Wh

**Lightning Input:** 5V/2A | 10W

**Type-C Input:** PD 18W Max  
5V/2.5A | 9V/2A | 12V/1.5A

**Type-C Output:** PD 20W Max  
5V/3A | 9V/2.22A | 12V/1.67A

**USB-A Output:** QC 18W Max  
5V/3A | 9V/2A | 12V/1.5A

**Frequency Response:** 250Hz - 20KHz  
**S/N:** -80dB

**Transmission Distance:** 10M

**Pairing Name:** Limitless-BTSPB

**Speaker:** 4Ω | 1.5W

**Bluetooth Version:** 5.0

**Dimensions:** 5.00 in x 2.95 in x 1.38 in

**Weight:** 12.6 oz

## WHAT'S INCLUDED

- (1) 10,000mAh Power Bank & Portable Speaker
- (1) 36" Type-C to USB Charging Cable
- (1) User Manual



To view the complete user manual online, please scan:



## SAFETY INFORMATION

By using the Limitless 10,000mAh Power Bank & Portable Speaker, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the Limitless 10,000mAh Power Bank & Portable Speaker. By using the Limitless 10,000mAh Power Bank & Portable Speaker, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the Limitless 10,000mAh Power Bank & Portable Speaker, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the Limitless 10,000mAh Power Bank & Portable Speaker.

## WARNING

- Limitless 10,000mAh Power Bank & Portable Speaker is **NOT** a toy and should be kept away from children.
- Do **NOT** use the Limitless 10,000mAh Power Bank & Portable Speaker near a magnetic or electric field.
- Do **NOT** use the Limitless 10,000mAh Power Bank & Portable Speaker in direct sunlight or extreme heat for extended periods of time.
- Do **NOT** use the Limitless 10,000mAh Power Bank & Portable Speaker if it has been damaged and/or modified.
- Do **NOT** subject the Limitless 10,000mAh Power Bank & Portable Speaker to harsh chemicals.
- Do **NOT** submerge the Limitless 10,000mAh Power Bank & Portable Speaker or its accessories in water.
- **CAUTION:** Risk of fire and burns. Do **NOT** open, crush, heat above 140° F (60° C) or incinerate. Follow manufacturer's instructions.
- Do **NOT** insert any foreign objects into the openings or port of the Limitless 10,000mAh Power Bank & Portable Speaker.
- Do **NOT** charge the Limitless 10,000mAh Power Bank & Portable Speaker in high humidity conditions.
- Do **NOT** attempt to replace the battery as it is a non-serviceable part.
- Do **NOT** attempt to disassemble, repair, or open the Limitless 10,000mAh Power Bank & Portable Speaker or its accessories in any way.
- Do **NOT** paint or apply coatings to the Limitless 10,000mAh Power Bank & Portable Speaker as you might affect moving parts or damage internal components.
- Do **NOT** use third party power supplies or non-approved adapters with the Limitless 10,000mAh Power Bank & Portable Speaker.
- Batteries should be recycled or disposed of, as per state and local guidelines.

LIMITLESS™

All rights reserved. Limitless™ is a trademarks of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown. Accessories sold separately.

**LimitlessInnovations.com**  
Support@LimitlessInnovations.com  
(855) 843-4828

Limitless Innovations, Inc.  
4800 Metalmaster Way  
McHenry, IL 60050

© Limitless Innovations, Inc.  
Designed in USA. Made in China.



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



/LimitlessInnov



Limitless Innovations

## COMPONENTS

1. Speaker
2. Carrying Strap
3. Power Button
4. Volume Up / Next Song Button
5. Play / Pause Button
6. Volume Down / Last Song Button
7. 4x LED Battery Level Indicators Lights
8. Lightning Charging Port (Input)
9. Type-C Charging Port (Input/Output)
10. USB Charging Port (Output)
11. Phone Stand



## CONTROL PANEL

### Power Button

Press and Hold: Turn Speaker On/Off  
Double-Click: Lock/Unlock Touch Buttons

**NOTE:** The touch buttons will automatically lock after being idle for 30 seconds. Double-Click the Power Button again to unlock.

### *Touch Buttons*

### Plus

Single Press: Next Song  
Press and Hold: Volume Up

### Play/Pause

Single Press: Play/Pause the Song

### Minus

Single Press: Last Song  
Press and Hold: Volume Down

**NOTE:** The volume and song can be adjusted on the device.

## HOW TO USE

### Getting Started

The 10,000mAh Power Bank & Portable Speaker will arrive with a partial charge. It is recommended to charge the battery to 100% before use.

### Checking the Battery Level

1. Plug a device into one of the Charging Ports to see the battery level or press and hold the Power Button. This will turn on the speaker.
2. The current percentage level will display on the 4x LED Battery Level Indicator Lights.

LED INDICATOR LIGHT	CHARGE REMAINING
	1-25%
	26-50%
	51-75%
	76-100%

### How to Recharge the Power Bank

Plug the included 36" Type-C Charging Cable into the Type-C Charging Port (Input/Output) and into a USB charger (not included). The 4x LED Battery Level Indicator Lights will blink while charging until it reaches 100%.

\*Apple users can also charge the Power Bank using their Lightning charging cable and the Lightning Charging Port (Input).

### Using the Power Bank

Connect a compatible charging cable to the Type-C or USB Charging Port and into the charging port on a device. The device will automatically begin to charge.

**NOTE:** The Power Bank and Bluetooth® Speaker can be used simultaneously.

### Using the Portable Speaker

1. Press and hold the Power Button to turn on the Speaker.

- You will hear the voice prompt "Power On."
- The light around the Power Button light will alternate red and green while in pairing mode.



2. Check that the Bluetooth® feature on your device's settings is turned on.
3. Select "Limitless-BTSPB" from the list of devices.

- Once you hear the voice prompt "Connected", you're ready to begin streaming.



**NOTE:** When successfully paired the green light around the power button will stay a solid green light. The green light around the power button will continuously flash when music is being played, or solid when music is paused or stopped.



## TROUBLESHOOTING

### Connecting To Bluetooth

If the Speaker does not show up in your Bluetooth menu, try:

- Turning the device's Bluetooth off, wait 15 seconds, then turn it back on.
- Turning the Speaker off, wait 15 seconds, then turn it back on.
- "Forget" the Speaker from all other nearby mobile devices.

### Sound Quality

If the audio is skipping or has poor sound quality, try:

- Moving the Speaker closer to the connected device.
- Checking for interferences between the device and the Speaker (walls, metal structures, etc).