

LIMITLESS™

10,000mAh Magnetic Wireless Power Bank

With 2x Built-In Cables, Type-C Port, USB-A Port, & Cable Strap

Quick Start Guide



WHAT'S INCLUDED

- (1) 10,000mAh Magnetic Wireless Power Bank
- (1) Magnetic Ring
- (1) 36" Type-C to USB Charging Cable
- (1) Detachable Type-C to Micro Cable Strap
- (1) Microfiber Pouch with Drawstring



COMPONENTS

1. Power Button
2. USB-A Charging Port
3. Type-C Charging Port
4. Detachable Type-C to Micro Cable Strap
5. Large Digital Display
6. Built-In Lightning® Cable
7. Built-In Type-C Cable
8. Magnetic Wireless Charger



CHARGING & RECHARGING

Recharging the Power Bank: Plug the included 36" Type-C to USB Charging Cable into the Type-C Port. Plug the opposite end of the Charging Cable into a USB power source (not included).

OR

Plug the Built-In Type-C Cable into a Type-C power source (not included).

The Digital Battery Level Indicator will blink while charging until it reaches 100%. **NOTE:** Only the second digit blinks while charging the Power Bank.

Checking the Battery Level: Press the Power Button to show the current battery capacity on the Digital LCD Display or, you can check the Battery Level by connecting a device.

Charging a Device via Built-In Cables: Locate the appropriate cable by removing it from the built-in cable storage. Plug the cable connector into the charging port of the device. The device will begin to charge. **Note:** You may need to remove your phone case to charge your mobile device.

Charging a Device via Type-C to Micro Cable Strap: Gently pull the head of the Type-C to Micro Cable Strap out from the side of the Power Bank. Plug the Type-C end into the Type-C Port on the Power Bank, and the other Micro end into a compatible device you want to charge (older Android devices, Bluetooth headphones, cameras, etc.). After use, insert both ends into the integrated strap holder on the side of the power bank.

NOTE: The Built-In Cables are designed only for use with this Power Bank. While it can be removed, they should **NOT** be used with other USB chargers. Doing so may damage the USB charger or connected device.

Charging a Device via USB/Type-C Port: Plug a compatible USB or Type-C cable into the port, and plug the opposite end into a device. The device will begin to charge.

Charging via Wireless Charger: Rotate and flip the Power Bank so that the back (marked with a Lightning Bolt Symbol) is facing the back of your compatible phone. If your phone or phone case is MagSafe®-compatible (iPhone 12 or newer), the Power Bank will automatically align and magnetically attach for a secure connection.

If your phone or phone case is not MagSafe®-compatible, please refer to the "USING THE MAGNETIC RING" page section in this user manual to utilize the Magnetic Wireless Charging feature.

Align your device with the wireless logo on the back of the Power Bank. If it's compatible with MagSafe®, the Power Bank will secure to the device via magnetic connection. The device will begin to charge.



No MagSafe®? The Power Bank is compatible with phones that are enabled with wireless charging. Align your device with the wireless logo on the back of the Power Bank. The device will begin to charge.



NOTE: If the device does not begin to charge, adjust the positioning of the Wireless Charger until there is a successful connection.

Fast-Charging Icon: You'll see a green icon when a device capable of fast-charging is connected to the Power Bank using the USB Port, Built-In Cables or the Wireless Charger. Keep in mind that some devices might not display this green icon, but they will still receive the fastest charging speed the Power Bank can deliver and the device can accept.

USING THE MAGNETIC RING

NOTE: The Magnetic Ring is to be used with phones that are Wireless Charging, but not MagSafe® compatible.

If a case is not MagSafe® compatible, the phone will not have a strong connection with the Power Bank. It's recommended to remove the case or use the Magnetic ring.

Placing the Ring: Place the Magnetic Ring on the Magnetic Wireless Charger by aligning to the printed outline on the Power Bank. The adhesive liner should be facing outward.

Place the Power Bank over the back of the phone and adjust until the phone begins to wirelessly charge. **NOTE:** Do not remove the liner from the Ring in this step.

Once you have a good feel for where the Power Bank needs to be located to wirelessly charge your phone, remove the unit and peel off the liner from the Ring.



Place the Power Bank back over the phone, but keep slightly above and move back into position. Once you hear the phone start charging wirelessly, press down so the Ring can adhere to the back of the phone or phone case.




CHARGING & RECHARGING

Installing the Cable Strap:

1. Locate the Type-C to Micro Cable Strap included with the Power Bank.
2. Identify the strap anchor slots on the upper left-handed corner of the Power Bank. Insert the looped end of the strap through the designated slots on the Power Bank.
3. Pull the strap through the loop to secure it in place. Make sure the Micro Cable Strap is securely connected before carrying the Power Bank using this strap.

Removing the Type-C to Micro Cable Strap from Its Housing:

1. Gently grip either the Type-C or Micro connector end.
2. Carefully pull the cable away from the housing. **Tip:** To avoid stress on the cable or housing, always pull the cable out in a straight line—never yank or bend at sharp angles.
3. Once removed, the cable can be used to charge Micro-compatible devices via the built-in Type-C port on the power bank.
4. When finished, gently insert the cable back into the housing until it secures itself.

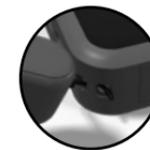

TECH SPECS

Model: LIM-10KMSPB-XXXX

Battery Capacity: 10,000mAh (3.85V) | 38.5Wh

Recharging Time (From 0%):

Built-In Type-C Cable with 20W PD Wall Charger:

4 Hours

Using included USB-A to Type-C Cable with Type-C

Port: 5-6 Hours

USB Output Port: 5V=3A | 9V=2A | 12V=1.5A | QC 22.5W

Type-C Input/Output: 5V=3A | 9V=2.2A | 12V=1.67A |

PD 20W

Built-In Type-C Cable Input/Output: 5V=3A | 9V=2.2A |

12V=1.67A | PD 20W

Built-In Lightning® Cable Output: 5V=2.4A | 12W

Wireless Charging Output: 15W | 7.5W | 5W

Type-C to Micro Cable Output: 2A

Temperature Range (Operation): 32°-113°F (0°-45°C)

Dimensions: 4.34" x 2.95" x 0.77"

Weight: 7.05oz (0.44lbs) - Without Detachable Cable Strap



WAIVER & RELEASE

By using the Limitless 10,000mAh Magnetic Wireless Power Bank, you hereby agree that Limitless Innovations, Inc., an Illinois corporation and its affiliates ("Limitless") shall have no liability for any losses associated with property damage, personal injury or loss of life that are incurred by you or by any third party in connection with or relating in any manner whatsoever to your use of the Limitless 10,000mAh Magnetic Wireless Power Bank. By using the Limitless 10,000mAh Magnetic Wireless Power Bank, you hereby agree at all times to comply fully with all safety warnings, operating instructions and general safety information in this user manual. By using the Limitless 10,000mAh Magnetic Wireless Power Bank, you further agree to hold harmless Limitless, (and Limitless' officers, directors, shareholders and employees) in connection with any losses sustained by you (including, without limitation, losses arising in whole or in part from property damage, personal injury or loss of life) relating in any manner whatsoever to your use of the Limitless 10,000mAh Magnetic Wireless Power Bank.

WARNINGS

- The 10,000mAh Magnetic Wireless Power Bank is **NOT** a toy and should be kept away from children.
- Do **NOT** use the 10,000mAh Magnetic Wireless Power Bank near a magnetic or electric field.
- Keep the 10,000mAh Magnetic Wireless Power Bank in a cool and dry place away from heat sources, moisture, and dust. Avoid leaving the device in places with high temperatures such as cars parked under the sun.
- Do **NOT** use the 10,000mAh Magnetic Wireless Power Bank if it has been damaged and/or modified.
- Do **NOT** submerge the 10,000mAh Magnetic Wireless Power Bank or its accessories in water.
- Do **NOT** insert any foreign objects into the USB or Type-C output port or joining terminals of the 10,000mAh Magnetic Wireless Power Bank. Short circuits may present risks of excessive heat, fire or explosion.
- Be cautious of drops, bumps, abrasions, or other impacts to the 10,000mAh Magnetic Wireless Power Bank. If there is any damage to the device such as dents, punctures, tears, deformities, or corrosion due to any cause, discontinue use. Contact Limitless Innovations or dispose of it in accordance to state and local guidelines.
- Do **NOT** attempt to disassemble, repair, or open the 10,000mAh Magnetic Wireless Power Bank or its accessories in any way.
CAUTION: Risk of fire and burns. Do **NOT** open, crush, heat above 140° F (60° C) or incinerate.
- Do **NOT** use at an altitude higher than 6,562 feet (2,000 meters).

WARNINGS


- If the 10,000mAh Magnetic Wireless Power Bank is not used for long periods of time, you should charge and discharge once every three months.
- When charging a device, the 10,000mAh Magnetic Wireless Power Bank may feel warm, this is a normal operating condition and should not be cause for concern.
- All products have gone through a thorough quality assurance inspection. If you find that your 10,000mAh Magnetic Wireless Power Bank is excessively hot, is emitting odor, is deformed, abraded, cut, or is experiencing or demonstrating an abnormal phenomenon, immediately stop all product use and contact Limitless Innovations.
- Batteries should be recycled or disposed of, as per state and local guidelines. Do not throw in the trash, as this can create a fire hazard.
- Do **NOT** apply excessive force on the 10,000mAh Magnetic Wireless Power Bank or drop it: By doing so, it may damage the internal components of the device, and risk short circuiting the device when used.
- Do **NOT** overcharge the 10,000mAh Magnetic Wireless Power Bank as this may cause it to overheat and deplete efficiency. If the device becomes excessively hot during charging or discharging, unplug it from the power source or device immediately.
- Do **NOT** subject the 10,000mAh Magnetic Wireless Power Bank to harsh chemicals.
- Do **NOT** attempt to replace the battery as it is a non-serviceable part.
- The Built-In Cables are designed only for use with this Power Bank. While it can be removed, they should **NOT** be used with other USB chargers. Doing so may damage the USB charger or connected device.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

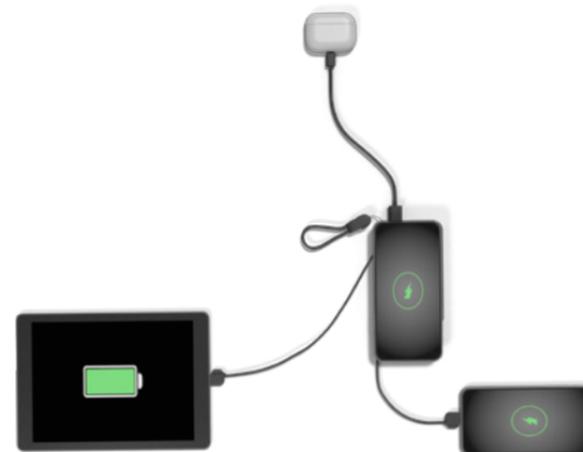

AIR TRAVEL

- This Power Bank is Approved to Carry-On Most Airplanes. Check Your Airline for Latest Guidelines.
- **DO NOT** travel with the Power Bank in your checked baggage. Labels on our shipping box refer to bulk shipping ONLY.
- For more information, visit: <https://www.faa.gov/hazmat/packsafe#hazardousMaterial>

Scan to learn more about using the features of your 10,000mAh Magnetic Wireless Power Bank



LIMITLESS™

Designed in USA. Made in China. All rights reserved. Limitless™ is a trademark of Limitless Innovations, Inc. Design and specifications subject to change without notice. Products may vary from images shown. All other trademarks included herein are property of their respective owners. Accessories sold separately.

LimitlessInnovations.com
Support@LimitlessInnovations.com
(855) 843-4828

© Limitless Innovations, Inc.



@LimitlessInnovations



/LimitlessInnov



/LimitlessInnov



/LimitlessInnov



Limitless Innovations