




# HALO<sup>®</sup>

## BOLT<sup>™</sup> AIR+ 1750

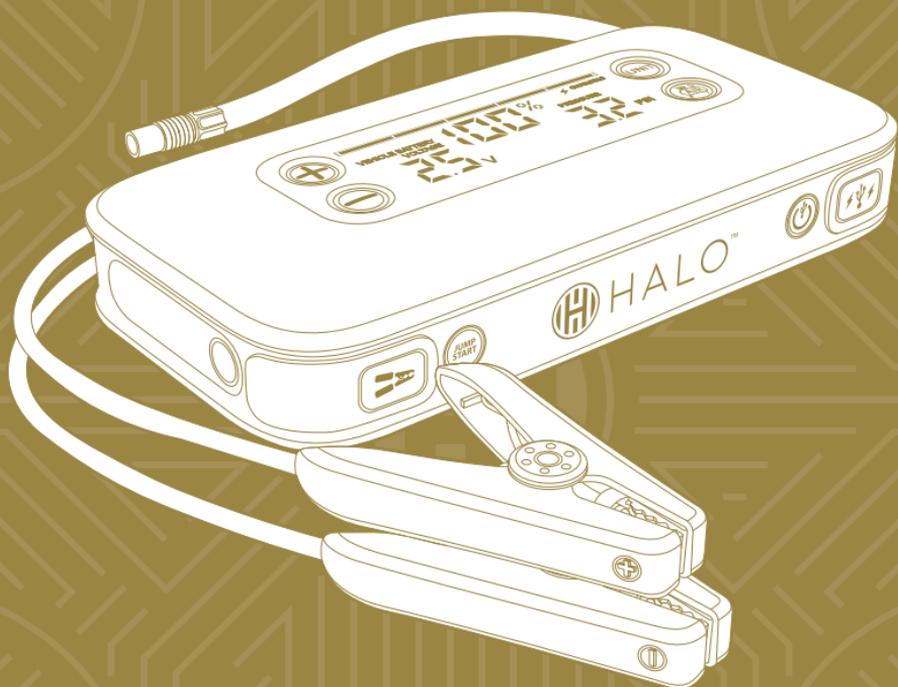

### Operating Instructions

PLEASE READ BEFORE OPERATING THIS EQUIPMENT

**FOR ALL QUESTIONS RELATED TO SAFETY, WARRANTY  
OR EXCHANGE REQUESTS, PLEASE CONTACT US.**

**1-800-255-6061**

**YOUR SAFETY IS IMPORTANT TO US.**

Please read instructions carefully and utilize the proper precautions before operating this equipment.

Save instructions for future reference.

## **HALO BOLT AIR+ 1750**

Thank you for choosing HALO!

Powerful and loaded with features including an easy to use digital display, the HALO BOLT Air+ 1750 can be used to safely jump start your vehicle, inflate your tires and power your electronic devices anywhere. The HALO BOLT Air+ 1750 provides portable power so you can charge your phone, tablet and other electronic devices anywhere! The HALO BOLT Air+ 1750 also includes a convenient floodlight and emergency light. Compact, versatile and simple to use, the HALO BOLT Air+ 1750 and all accessories fit neatly in its carrying pouch and is perfect to store in your home or vehicle for every day use or an emergency need. Never be without a charge, a jump start, or with a flat tire again!

## SAFETY PRECAUTIONS/MOVING AND STORAGE INSTRUCTIONS

**DANGER-CAUTION** Read and understand all safety information before using this product. Failure to follow these instructions may result in electrical shock, explosion, fire which may result in serious injuries, death or property damage.


- When used correctly, lithium-ion rechargeable batteries provide a safe and dependable source of portable power. However, if they are misused or abused, this may result in leakage, burns, fire or explosion, causing personal injury or damage to other devices.
- Misusing or incorrectly connecting your HALO BOLT Air+ 1750 may cause electric shock to users and damage equipment.
- Do not operate in explosive atmospheres such as in the presence of flammable liquids, gases or dust.
- Remove jump start clamps from vehicle battery after jump starting vehicle.
- Keep your HALO BOLT Air+ 1750 dry and away from moisture and corrosive materials. The HALO BOLT Air+ 1750 should not be used near water or wet areas such as bathtubs, showers, bathrooms, sinks, swimming pools or basements.
- Do not expose your HALO BOLT Air+ 1750 to moisture, water, rain, or snow.
- Keep your HALO BOLT Air+ 1750 away from heat sources, including open flames, radiators, stoves, ovens, and any other devices that produce heat.
- The lithium-ion rechargeable battery used in this charging device may present a risk of fire or chemical burn if mistreated. Do not expose to fire or excessive temperature. Do not expose to heat above 212°F (100°C) or incinerate.
- In the unlikely event of leakage or explosion use sand or a chemical fire extinguisher. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Your HALO BOLT Air+ 1750 may become warm under extended high power operation. Do not cover, wrap, or otherwise restrict the HALO BOLT Air+ 1750 during operation.
- Do not disassemble your HALO BOLT Air+ 1750. There are no user-serviceable parts inside. Incorrect reassembly may result in shock or fire hazard.

- Do not drop or subject to strong impacts. Do not operate your HALO BOLT Air+ 1750 if it has received a sharp blow, or has otherwise been damaged in any way.
- Do not puncture, crush or subject to mechanical shock.
- Only charge your HALO BOLT Air+ 1750 by the specified method with the specified charging adapter provided with the unit. Use of an attachment not recommended or sold by power pack manufacturer may result in a risk of fire, electric shock, or injury to persons.
- Do not use any non-HALO-branded accessories with the HALO BOLT Air+ 1750. Doing so may cause electric shock to users and damage equipment.
- Do not operate the power pack with a damaged cord or plug, or a damaged output cable.
- The HALO BOLT Air+ 1750, along with its accessories, are not toys and should be kept away from children.
- To reduce risk of damage to the electric plug and cord, pull the plug rather than the cord when disconnecting the power pack.
- Make sure the jumper cables are fully plugged into the jump start output before trying to jump start your vehicle.
- Do not touch red (positive) and black (negative) jumper clamps together at any point.
- Do not insert any foreign object into the ports or openings of your HALO BOLT Air+ 1750.
- Do not clean your HALO BOLT Air+ 1750 with harsh chemicals, soaps or detergents. Just wipe the case with a soft cloth.
- When charging the internal battery, work in a well ventilated area and do not restrict ventilation in any way.
- Make sure the HALO BOLT Air+ 1750's charging ports do not become contaminated with lint or other debris. Use a canned-air type of product periodically to ensure that the port openings are clear.
- Batteries should be recycled or disposed of as per state and local guidelines.
- Charging: 32°F - 113°F (0°C - 45°C)  
Discharging: 14°F - 122°F (-10°C - 50°C)

## **TABLE OF CONTENTS**

Safety Precautions	1-2
Product Overview	4
Accessories	5
Operating Instructions	6-14
Troubleshooting Guides	10
Specifications	14
FCC Compliance	15
Warranty and Contact Information	16





# HALO BOLT AIR+ 1750 PRODUCT OVERVIEW

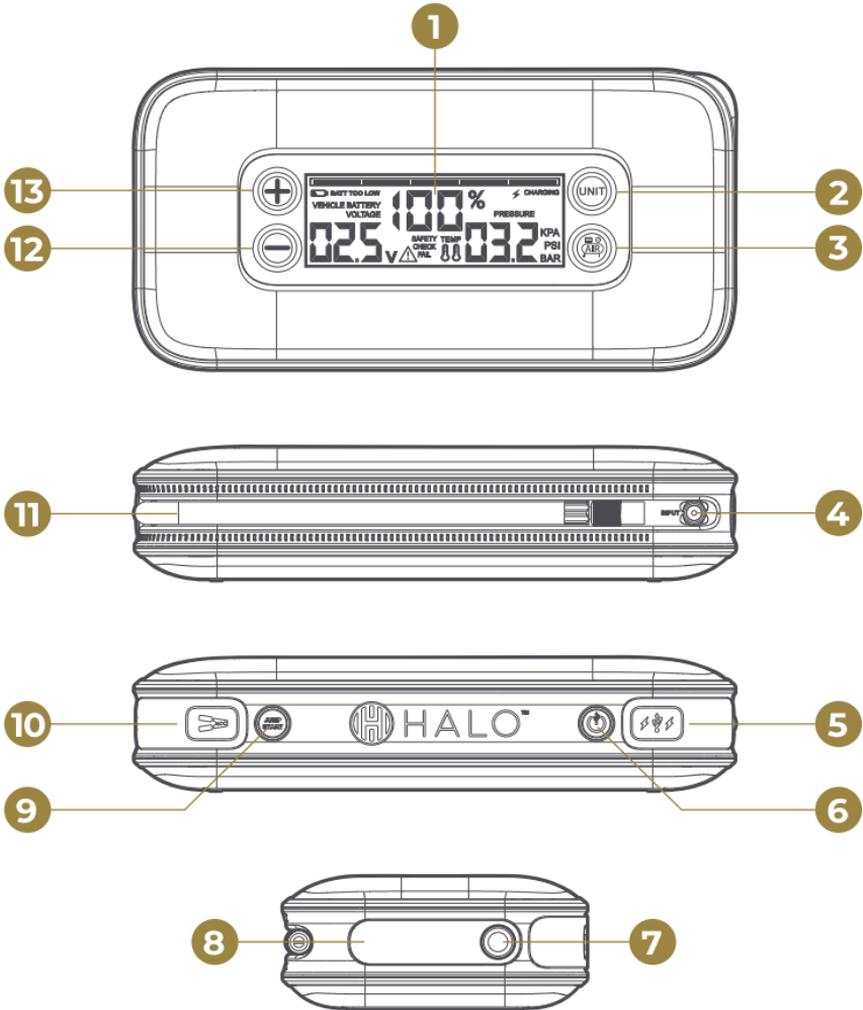

- 1 | Large Digital Display
- 2 | Air Pressure Unit Button
- 3 | Air Compressor On/Off Button
- 4 | DC 14V Input
- 5 | USB-A/USB-C 5V/2.4A Output
- 6 | USB On/Off Button
- 7 | LED Floodlight On/Off Button

- 8 | LED Floodlight
- 9 | Jump Start On/Off Button
- 10 | Jump Start 12V Output
- 11 | Air Compressor Hose
- 12 | Pressure “+” Button
- 13 | Pressure “-” Button

# HALO BOLT AIR+ 1750 ACCESSORIES

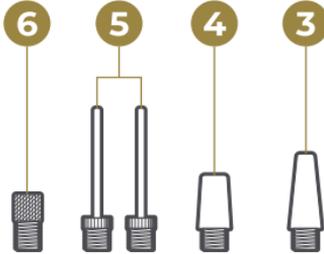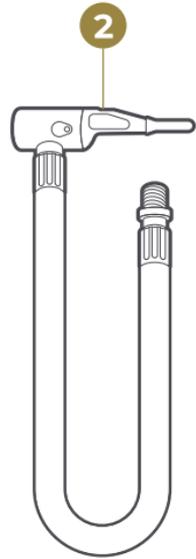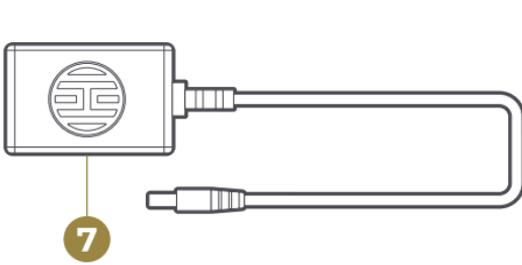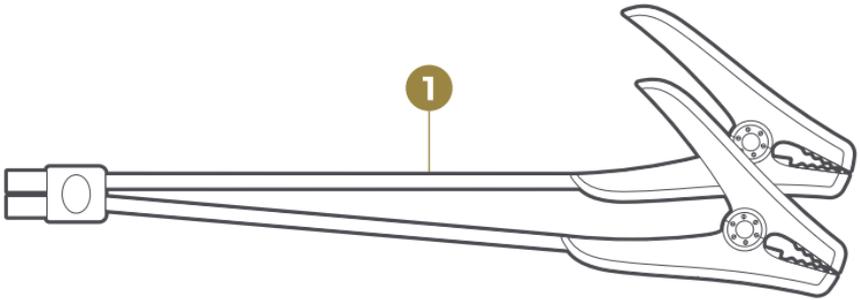

- 1 | Jumper Cables
- 2 | 24 Inch Extension Hose
- 3 | Long Tapered Valve
- 4 | Short Tapered Valve


- 5 | 2 Inflation Needles
- 6 | Presta to Schrader Valve Adapter
- 7 | 12V Wall Charging Adapter

# OPERATING INSTRUCTIONS


## CHARGING YOUR HALO BOLT Air+ 1750

**IMPORTANT:** Before using your HALO BOLT AIR + 1750 for the first time, please fully charge it.


To charge your HALO BOLT AIR + 1750, use the provided Wall Charging Adapter, and plug the Wall Charging Adapter plug into the DC 14V Input. Next, connect the Wall Charging Adapter into a wall outlet. The HALO BOLT AIR + 1750 will automatically begin charging. When the HALO BOLT AIR + 1750 is fully charged, all five battery indicator lights will be solid green and the digital screen will indicate 100% charge. (This could take up to 9 hours)

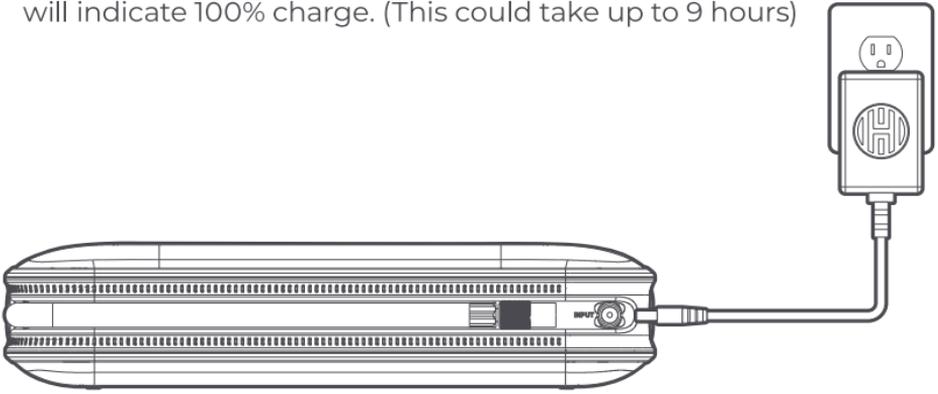

While charging, the digital screen will illustrate the charge percentage of the HALO BOLT Air+ 1750. When fully charged, disconnect the cable.

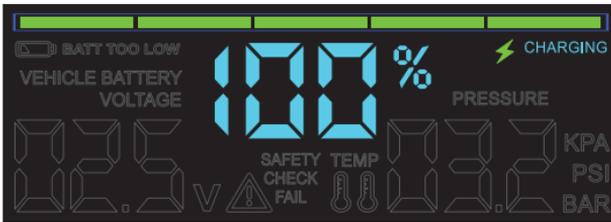


**NOTE:** The HALO BOLT Air+ 1750 is designed to charge between 32°F-113°F (0-45° C). A "TEMP" indicator will be illustrated on the digital display if the HALO BOLT Air+ 1750 is attempted to be charged outside of this temperature range.

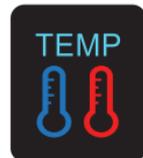


## JUMP STARTING YOUR VEHICLE WITH THE HALO BOLT AIR+ 1750

1. Plug the jumper cables into the jump start output on the HALO BOLT Air+ 1750.

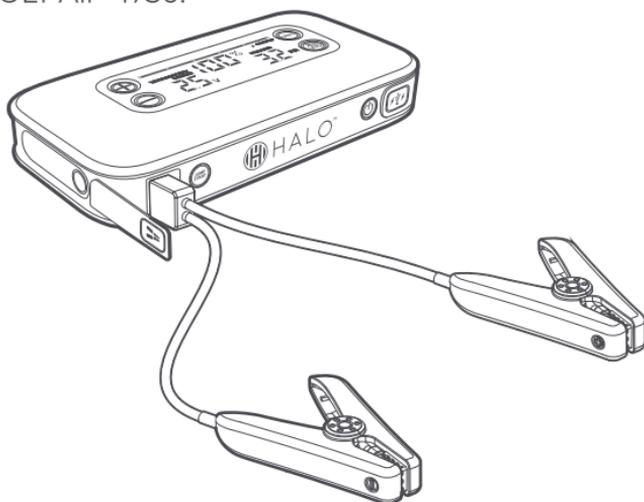

**NOTE:** Make sure the jumper cables are fully plugged into the jump start output before trying to jump your vehicle.

2. Attach the jumper cable clamps to the vehicle battery.
  - Red clamp on positive terminal (+)
  - Black clamp on negative terminal (-)

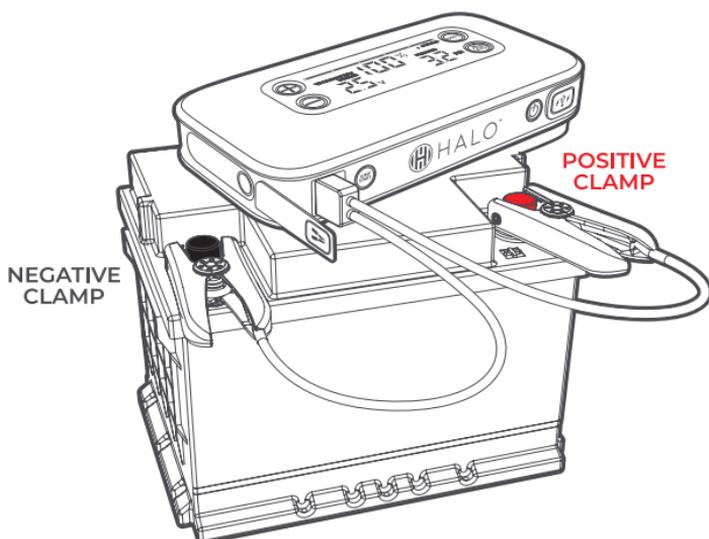

**NOTE:**

- Once the jumper cable clamps are attached to the vehicle battery, the digital screen will display the vehicle battery voltage.
- Do not touch red (positive) and black (negative) clamps together at any point. If the jump start button flashes red, the jumper cables have been connected incorrectly. If this flashing red condition occurs, disconnect the jumper cables from vehicle battery and restart the process from Step 1.

3. Press the “Jump Start” button and wait for solid green light.



**NOTE:** A flashing green light indicates safety checks are in progress.

4. Start your vehicle.

**NOTE:** If your vehicle fails to start after the first attempt, wait 30 seconds and repeat step 3 and step 4.


If your vehicle does not start after three attempts, we recommend you consult a certified mechanic.

5. Disconnect the jumper cable clamps from the car battery.

**NOTE:** The jump start function cannot be used in conjunction with the USB and the air compressor. Please ensure that you have not activated the USB or Air Compressor output modes when attempting to jump start your vehicle.

**NOTE:** The HALO BOLT Air+ 1750 is designed to allow a jump start when used within a safe temperature range. A "TEMP" indicator will be illustrated on the digital display if used outside of the temperature operating range.

## JUMP START TROUBLESHOOTING TIPS

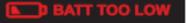
CONDITION	POTENTIAL CAUSE	SOLUTION
HALO BOLT AIR+ 1750 Jump Start button has been pressed but nothing happens.	The USB ON/OFF Button or the Air Compressor ON/OFF Button has been pressed.	The jump start output can not be used in conjunction with the USB output or air compressor modes. Ensure that both USB and AIR Compressor modes are off.
 HALO BOLT AIR+ 1750 displays a red BATT TOO LOW message.	The HALO BOLT AIR+ 1750 is not sufficiently charged to jump start the vehicle.	Recharge the HALO BOLT AIR+ 1750 and verify at least 50% charged. Then try the jump start process again.
 HALO BOLT AIR+ 1750 Jump Start button flashes red and a SAFETY CHECK FAIL message is displayed.	The jumper cables have not been properly connected to the vehicle battery.	Check the jumper cables and ensure that the red clamp is connected to the positive terminal (+) and the black clamp is connected to the negative terminal (-).
HALO BOLT AIR+ 1750 Jump Start button flashes green continuously.	The HALO BOLT AIR+ 1750 is waiting to be connected to a battery or a SAFETY CHECK FAIL has been triggered.	Check the jumper cables and ensure they are properly connected to the battery. Check and ensure the vehicle battery voltage is greater than 2.0V. If the SAFETY CHECK FAIL indicator is triggered during the jump start process, it is recommended that you consult with a certified mechanic.
  HALO BOLT AIR+ 1750 displays a blue or red TEMP indicator.	The HALO BOLT AIR+ 1750 has detected a low or high temperature condition.	Disconnect the HALO BOLT AIR+ 1750 and allow unit to acclimate to temperature operating range (14°F-104°F).
You cannot successfully jump start your vehicle. The HALO BOLT AIR+ 1750 displays a vehicle battery voltage greater than 12.0V.	The HALO BOLT AIR+ 1750 detects that it is connected to a vehicle battery with a normal starting voltage. This could indicate that another vehicle component is faulty.	It is recommended that you consult with a certified mechanic.
HALO BOLT AIR+ 1750 Jump Start and On/Off button flashes red and blue.	This could occur when attempting to jump start a vehicle while other electrical components (i.e. headlights, heater, radio, etc.) are on.	Turn off your headlights and any other components that may drain your car battery and try the jump start process again.
	The vehicle battery may be faulty.	It is recommended that you consult with a certified mechanic.

**NOTE:** If none of these troubleshooting tips work, please consult a certified mechanic for assistance.

## HALO BOLT AIR+ 1750 COMPRESSOR

The HALO BOLT Air+ 1750 comes equipped with a 24 Inch Air Hose Extension and Interchangeable Air Nozzles. Simply twist on the corresponding nozzle to inflate balls, pool floaties, bike tires, and more!

1. Connect the air hose to the tire or use the appropriate nozzle to connect to your inflatable device.
2. Press the (+) or (-) button to set the desired pressure.  
The pressure measuring units can be changed by pressing the UNIT button.
3. Once the desired pressure has been set, begin inflating by pressing the Air Compressor ON/OFF button. The air compressor will shut off automatically once the pressure has been reached.

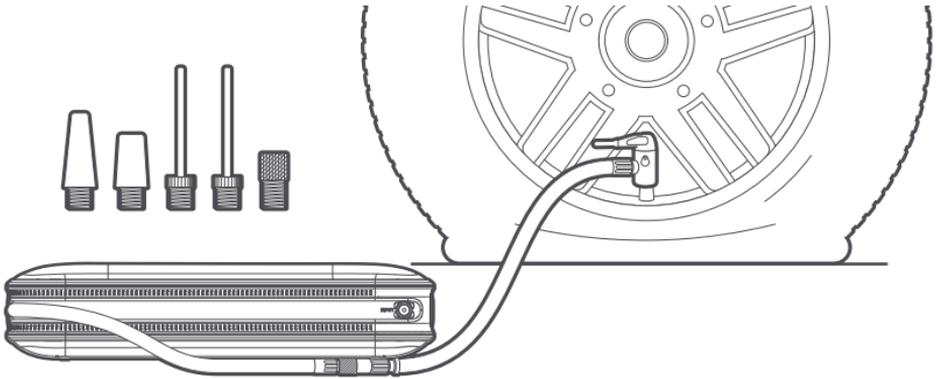

**NOTE:** The air compressor can be started or stopped at any point by pressing the air compressor ON/OFF button. The (+) and (-) may be long pressed to set the desired pressure quickly.


**!** **NOTE:** Always check and follow the manufacturer's recommended pressure. Use caution as the air hose and connectors may get hot after extended use. The HALO BOLT AIR+ 1750 compressor is designed to automatically stop after an extended run-time or if an over-temperature protection set point is reached.

## CHARGING AN ELECTRONIC DEVICE USING THE USB OUTPUT PORTS

1. Use the charging cable provided with your electronic device, connect to either of the USB-A or USB-C outputs, located on the front of your HALO BOLT Air+ 1750.
2. Turn on the USB charging by pressing the USB Power ON/OFF Button on the HALO BOLT Air+ 1750.



**NOTE:** The HALO BOLT Air+ 1750 USB charging feature will automatically power off after 30 minutes of inactivity.

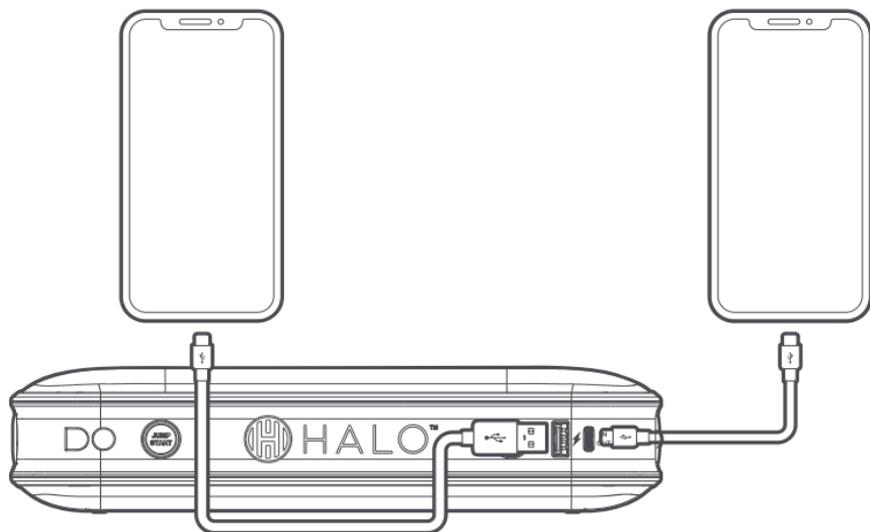

## HALO SMART CHARGE TECHNOLOGY

 
Engineered with Smart Charge Technology, the BOLT AIR+ 1750 can adjust its charging to meet compatibility standards in order to provide the fastest and safest charge to USB-powered devices.

## COMPATIBILITY

Standard 5V USB electronic devices including:



Mobile  
Phones



Tablets



Wireless  
Headphones




Digital  
Cameras



## USING YOUR HALO BOLT AIR+ 1750 FLOODLIGHT

The floodlight can be turned on and off by simply pressing and releasing the floodlight ON/OFF button. The first press will turn on the floodlight. Second press will turn on the red emergency light. Third press will turn on SOS flashing red light. The floodlight will automatically turn off after 2 hours of inactivity.

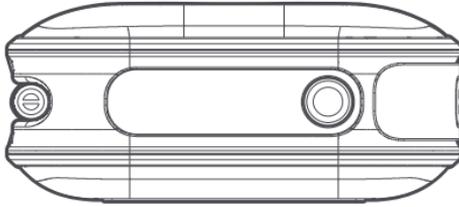

**NOTE:** Do not look directly into the LED floodlight.

## SPECIFICATIONS HALO BOLT AIR+ 1750

Battery Cells:	3x Li-Ion 5400mAh
Battery Pack Energy:	59940mWh
Input:	14VDC/850mA
Jump Start:	12VDC/600A rated, 1750A peak
Air Compressor:	130PSI max
USB-A Output:	5V/2.4A
USB-C Output:	5V/2.4A
Dimensions:	9.62 x 4.87 x 2.17 Inches
Weight:	2.8 lbs
Operating Temperature:	14°F - 122°F (-10°C - 50°C)

## COMPLIANCE WITH FCC REGULATION

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## LIMITED WARRANTY

At HALO, we are dedicated to making the best quality products. To back this up, this product is warranted. HALO warrants its products to be free from defects in material and workmanship under normal use. During the first 90 days from date of purchase, HALO will repair or replace the defective product. This warranty does not affect any statutory rights that you may be entitled to. Keep a copy of your purchase receipt as proof of purchase.

For all questions about the warranty or exchange requests, please call 1-800-255-6061.

All copyrighted and copyrightable materials, including, without limitation, the logo, design, text, graphics, pictures, copy writing and the selection and arrangement (“Materials”) thereof are ALL RIGHTS RESERVED Copyright © 2025 Alliance Sports Group, L.P.

Alliance Consumer Group  
700 Henrietta Creek Road  
Roanoke, Texas 76262



**⚠ WARNING**  
Cancer and Reproductive Harm  
[www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



CONFORMS TO  
UL2743







HALO®



PRODUCT REGISTRATION

[www.HALOPWR.com](http://www.HALOPWR.com)