

HALO AIR BOLT



QUICK START GUIDE

To contact us, email us at
support@BestHALO.com
or call 888-907-6274
www.BESTHALO.com



*Remember to fully charge your HALO BOLT AIR.

Jump Starting Your Vehicle with the HALO BOLT AIR

1. Plug the jumper cables into your HALO BOLT AIR and attach jumper cable clamps to car battery.

- Red clamp on positive terminal (+)
- Black clamp on negative terminal (-)




2. Press the "Jump Start" button and wait for solid green light.
- Pulsing green light indicates safety checks in progress.
- Solid green light indicates ready to start your vehicle.
3. Start your vehicle.
4. Disconnect jumper cable clamps from car battery.

Using the Air Compressor

1. Connect the air hose to the inflatable item using the appropriate adapter.
2. Press the (+) or (-) button to set the desired pressure.



3. Begin inflating by pressing the Air Compressor ON/OFF button.

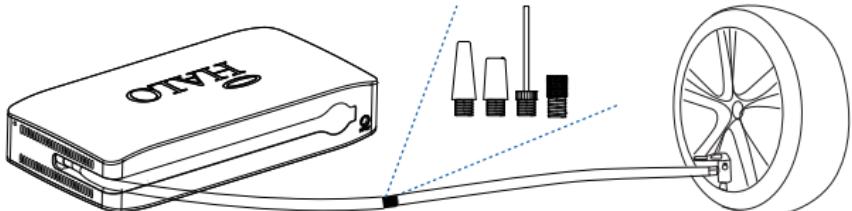

Charging Your Electronic Devices

1. Connect compatible electronic devices to the USB ports to begin charging.
2. Press the USB ON/OFF button.

Using the LED Floodlight

Press the Floodlight ON/OFF button.

