



CPD144

User Manual


14.1" Portable DVD Player Bundle

Table of Contents

Read Before Use	3
Maintenance	5
Main Unit Controls	6
Remote Control Functions	9
Basic Operation	12
Custom Display Effect	13
Language Settings	14
Specifications	14
Need Help?	15
Warranty Information	16

Read Before Use

- Note: Please contact customer service before attempting to repair or disassemble the device yourself.
- Please read this user manual carefully before using this device. Doing so will help avoid improper use or damage to the device.
- Damaged, broken, or distorted discs will not work in this DVD player. Attempting to use such a disc will result in damage to the device.
- Please contact Customer Service for all repair issues and concerns. Do not attempt to repair the device yourself.

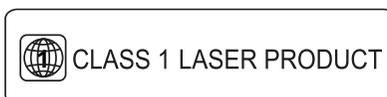

- Attention: In order to avoid the risk of electric shock, do not open the device cover. Please refer to qualified personnel or contact Customer Service for repairs.
- Low laser light; no harmful radiation outside of the device.
- Adjust the volume to a comfortable level when using earphones. Listening at high volumes for prolonged periods of time may lead to hearing damage.
- To avoid electric shock, do not leave the DVD player in humid weather or in the rain. Do not touch the device when your hands are wet, and keep it away from wet areas, such as bathtubs, bathrooms, sinks and swimming pools. Exposure to liquids may cause damage to your device.

Read Before Use

- Keep the DVD player away from sources of extreme heat, such as heaters or stoves.
- Do not use the DVD player in weather conditions where thunder or lightning may be present.
- Use the device in a well-ventilated environment. Leaving it on a bed, sofa or other soft surface while in use may block ventilation, which may cause the device to overheat.
- Do not drop or scratch the LCD screen. In order to avoid screen damage, do not place heavy items on the device. In the event that the screen breaks, avoid contact with the LCD screen liquid. If the liquid comes into contact with your skin, rinse the affected area with water for at least 15 minutes.
- Do not stare at the laser beam.
- Use the power cable, charger and battery included with this device.
- If the device makes any unusual sounds, or has an unusual smell, please unplug the power cord promptly.

Charging:

Fully charge your portable DVD player before initial use. Connect the included charger to the device. The red light indicates that the device is charging. Once it is fully charged, the light will turn green.

Note: You may use the DVD player while it is charging.

Maintenance

Battery Maintenance


- If the indicator light rapidly flashes green while charging, the battery may need to be replaced. Please contact Customer Support for details.
- Please dispose of batteries properly.
Note: The built-in, high capacity rechargeable battery must only be removed or replaced by a professional. Do not attempt to do so yourself.
- To avoid explosion, do not put the battery in a fire.
- Do not let the battery come into contact with water or other liquids.
- Do not drop the device. Doing so may cause damage to the battery.
- Do not open and change the structure of the battery.
- Use within a temperature range of 32° ~ 104° F.

Disc Maintenance

- Handle discs with care. Touching the disc surface may damage digital signals.
- Do not place tape or stickers on the disc.
- Do not leave discs in direct sunlight or exposed to major heat sources.
- Clean discs with a soft cloth before use. Wipe from the center to the outer edges of the disc. Do not use cleansing liquids or solutions.

Main Unit Controls

Note: Buttons may perform different functions in various modes.

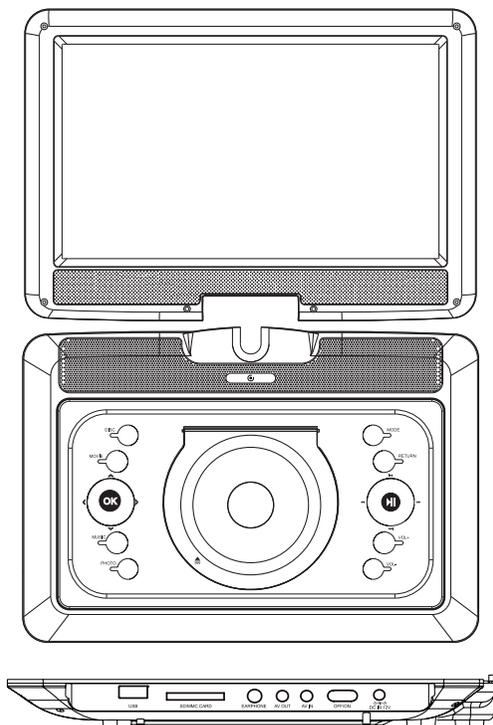

Key

Function

Key	Function
VOL+	Press to increase the volume.
VOL-	Press to decrease the volume.
RETURN	Return to the previous menu.
MODE	Press to access the pop-up mode menu and DVD/AV input function screen.

Main Unit Controls

	Press to move left in the Settings menu.
	Press to move right in the Settings menu.
	During DVD playback, press to return to the last program. In menu mode, press to go up.
	During DVD playback, press to return to the next program. In menu mode, press to go down.
	Press to play or pause playback. Press to confirm a menu selection, or to start playing a disc.
	Press to go up in the Settings menu.
	Press to go down in the Settings menu.
OPEN	Press to open the disc door.
OK	Press to confirm the selection.
	Fast forward during DVD playback.
	Rewind during DVD playback.
MOVIE	Open a file of movie format, play the movie.
MUSIC	Open a file of music format, play the music.
PHOTO	Open a file of photo format, play the photo.
DISC	Open a file of disc format, play the disc.

Main Unit Controls

DC-IN	Power input. Unplug from power source when not in use.
ON/OFF	Device power switch. When not in use, power off your device.
AV IN	External audio/visual signal input.
AV OUT	Device's audio/visual signal output.
HEADPHONES	Headphone input.
SD/MMC	SD/MMC card slot.
USB	USB input.
CHARGE INDICATOR	The charge indicator may vary based on your product: - Red light: charging. - Green light: fully charged.
REMOTE CONTROL RECEIVING WINDOW	Point your remote control here to send signals to your device.
INDICATOR	The indicator light turns blue when the device is powered on.

Remote Control Functions



POWER	Press to turn the device on or off.
MENU	Press during DVD playback to view the program menu.
LCD MENU	Press to adjust screen display settings.
MODE	In DVD mode, press the switch to AV input. Press again to switch back.
▲	Press to go up in the Settings menu.

Remote Control Functions

	Press to go left in the Settings menu.
ENTER	Press to confirm selection in the Settings menu.
	Press to go right in the Settings menu.
	Press to go down in the Settings menu.
MUTE	Mute sound output. Note: AV output cannot be muted.
RETURN	Exit current operation and return to previous screen.
	Press to stop playback.
	Press to play or pause.
REPEAT	Press to repeat a scene during DVD playback.
	Fast forward during DVD playback.
	Rewind during DVD playback.
	During DVD playback, return to the last program.
	During DVD playback, skip ahead to the next program.
SUBTITLE	Press for subtitles. Press again to select your preferred language.
AUDIO	Switch between left/right/stereo.
ANGLE	Change the display angle when watching content on a multi-angle disc.
NUMBER KEYS	Use to search for a specific channel, audio/video file, etc.
VOL+	Press to increase the volume.
VOL-	Press to decrease the volume.
A-B	During DVD playback, repeat a scene starting at point A.

Remote Control Functions

OSD	On screen display.
SLOW	Slow playback.
PBC	Playback control interactive function when play VCD disc.
SETUP	Access general, video or performance menus on your device.
GO TO	Jump to a specific time during DVD playback.
ZOOM	Press to zoom in or out of the screen during DVD playback.
MOVIE	Open a file of movie format, play the movie.
MUSIC	Open a file of music format, play the music.
PHOTO	Open a file of photo format, play the photo.
DISC	Open a file of disc format, play the disc.

Replacing Batteries

This remote control requires 2 AAA batteries (sold separately).

1. Remove the battery lid from the remote control.
2. Place batteries in the remote and replace the battery lid to secure.

Notes:

- This remote control does not use rechargeable batteries.
- Do not mix different types or brands of batteries. Do not mix old and new batteries.
- Replace batteries if your remote's function or signal range weakens.
- Replace batteries if remote is left unused for a long period of time.
- Do not store the remote near extreme heat or moisture.
- Do not disassemble the remote.
- This remote's optimum range is within 10 feet of the device.

Basic Operation

Operation

1. Connect the DVD player to an electric power supply (100-240V). The red light indicates that power is on and the device is charging.
2. Turn the power switch off and unplug the adapter when the device is not in use.
3. You may connect the device to your TV using an AV cable. Be sure to switch your TV's mode to AV.

Play / Pause

1. The device will automatically start playing once a disc is loaded.
2. Press **||** key to pause.
3. Press **▶** key once more to play.

Viewing Content on USB/SD/MMC

- Insert a USB drive or SD/MMC card (sold separately) into the corresponding slot on the device. Press the MOVIE/MUSIC/PHOTO button to view the contents.

Custom Display Effect

Press the Setting to enter the Custom display effect settings. Press the direction keys to move the cursor and select the desired submenu function and adjust settings.

Brightness Adjustment

Press the direction keys to move the cursor and select the desired submenu function and adjust settings.

Contrast Adjustment

Press the direction keys to move the cursor and select the desired submenu function and adjust settings.

Saturation Adjustment

Press the direction keys to move the cursor and select the desired submenu function and adjust settings.

Hue Adjustment

Press the direction keys to move the cursor and select the desired submenu function and adjust settings.

Sharpness Adjustment

Press the direction keys to move the cursor and select the desired submenu function and adjust settings.

Language Settings

Press the Language to enter the language settings, press the direction keys to choose the desired language: English; Chinese; German; Spanish; French; Portuguese; Italian; Press the Enter key to confirm the selection.

Specifications

Compatible discs	DVD, SVCD, VCD, CD, CD-R/RW, JPEG, MPG, MP3, AVI & MP4
Supported output devices	USB/MMC/SD
Anti-shock function	DVD: 3 seconds; VCD/CD: 10 seconds; MP3: 5 seconds
Audio output	Audio: $2.0V \pm 0.2$; Speaker: $8\Omega / 1.7W$; Headphone Output: 15mW
Frequency	20Hz – 20kHz
Audio (S/N) Radio	$\geq 50dB$
Range of activity	$\geq 50dB$
Video output	PAL/NTSC
Laser	Semiconductor Laser, Wave Length: 650 nm
Input	12V 2A
Power consumption	24 W
Laser class	CLASS 1
Test standard	IEC60825-1:2014



Date code : 2421K

PEAK POWER<0.39 mW, COMPLIES WITH 21 CFR 1040.10 and CFR1040.11

Need Help?

For customer support regarding your device, please submit a request by emailing **support@dpaudiovideo.zendesk.com**. You will be provided a ticket number regarding your inquiry, which you can refer to when contacting us further.

You can also reach a Core Innovations customer service representative by calling: **1-833-909-CORE (1-833-909-2673)**.

We are open Monday - Friday 9 AM - 5 PM PST, except weekends and major holidays. Core Innovations strongly urges customers to email their inquiry before calling, as this will enable us to better assist you.

Please make sure to include the model number and brief description of the problem you are encountering.

Thank you for purchasing a Core Innovations product.

For information on recycling, please visit:

<https://www.coreinnovationsinc.com/support/>

Warranty Information

Limited Warranty

DP AV / Core Innovations (the "Company") warrants this new product purchased and contained in this package (the "Product") against defects in material or workmanship for 90 Days (Parts & Labor) and 1 Year (Limited) from the date of delivery. In order for the Company to honor this limited warranty, you must present a valid proof of purchase or delivery, as applicable (e.g. a receipt or delivery notice that also shows purchase) of this Product. **IMPORTANT NOTE:** The customer is encouraged to carefully inspect the Product upon receipt after purchase – especially prior to any assembly, disassembly, mounting, installation or utilizing a third-party product of any kind, such as a decorative or protective cover or case.

This warranty is void if the Company deems, in its discretion, that the Product may have been damaged when the packaging was opened, through modification, improper transport, improper storage, improper use, improper assembly or disassembly, exposure to adverse elements, mounting or other installation, end user negligence, water damage or tampering of the barcode of the Product. This warranty does not apply: (a) to cosmetic damage, including but not limited to screen damage, a cracked display, scratches, dents and broken ports; (b) to damage caused by accident, abuse, misuse, fire, water vapor exposure, excessive exposure to humidity, water or other liquid contact, earthquake or other external cause; (c) to defects caused by normal wear and tear or otherwise due to the normal aging of the product; (d) if any serial number has been removed or defaced from the product; or (e) to damage caused by installation or mounting, assembly or disassembly, use with a third party device, cable, protective or decorative cover/case, component or product that does not meet the Company's product specifications. This warranty is a limited warranty for repair of the Product or replacement of the Product with a new or refurbished product, subject to the conditions set forth herein.

The Company is not liable for consequential, indirect, incidental, special or punitive damages and the Company's total liability hereunder shall not exceed an amount greater than the retail purchase price of the product.

Warranty Information

90 Days Parts & Labor

The Company warrants to you as the original retail purchaser of the Product, that should the Product have any warranted defect out of the packaging, under normal conditions, such defect(s) will be repaired or replaced with a new or refurbished part (at the Company's sole discretion) without charge, if the Product is submitted to the Company within a period of ninety (90) calendar days from the date of delivery of the Product. The customer is responsible for transportation cost and insurance charges (if applicable) to the Company and must be able to document a clear proof of delivery to the Company as well as proof of registered receipt by the Company. It is the customer's responsibility to retain original packaging or provide like packaging in order to facilitate the warranty repair or replacement process. The Company will incur no liability whatsoever to provide packaging for warranty items. Should the product be damaged en route to the Company due to insufficient or improper packaging or improper transport, the warranty may be voided. You must receive a return authorization number (RMA#) before sending the unit in for service. This warranty only applies to manufacturer defects, and the Product must be returned to the Company in its original condition.

1 Year Limited Parts

If determined to be covered under warranty, the one (1) year (from delivery) limited parts warranty gives the customer the option to return the Product to the Company for repair or replacement. The customer will be responsible for labor charges. This warranty does not cover any incidental or indirect costs incurred as a result of a defect in the Product, including any consequential, incidental or indirect damages.



Core Innovations intends to make this manual accurate and complete. However, Core Innovations makes no claim that the information contained herein covers all details and conditions. The information in this document is subject to change without notice at any time. Core Innovations assumes no responsibility for accuracy or completeness of the information contained in this manual.