


VIVITAR®

Instruction manual

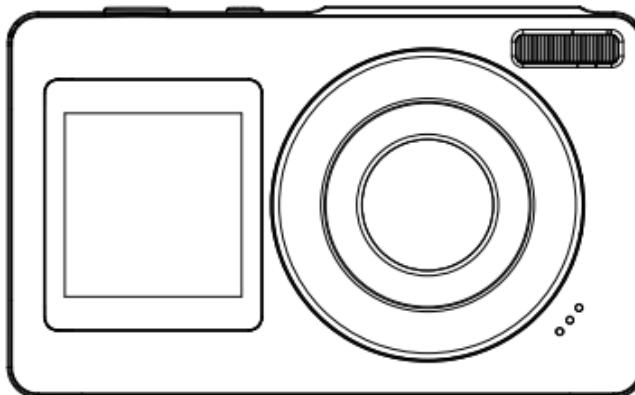

Item# VECS124X2

Read me before use!

Keep manual and all relevant information for future reference.

WARNING

To reduce the risk of fire or electric shock,

1.) Do not expose the unit to rain or moisture.

2.) Do not place objects filled with liquids, such as vases, on the apparatus.

Do not expose the batteries to excessive heat such as sunshine, fire or the like.

Do not ingest battery, chemical burn hazard. The remote control contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of body, seek immediate medical attention.

CAUTION

If the battery is mishandled, the battery pack can burst, cause a fire or even chemical burns.

Observe the following cautions.

Do not disassemble.

Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.

Do not short circuit and do not allow metal objects to come onto contact with the battery terminals.

Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a car parked in the sun.

Do not incinerate or dispose of in fire.

Do not handle damaged or leaking lithium ion batteries.

Keep the battery pack out of the reach of small children.

Keep the battery pack dry.

Replace the battery with the specified type only. Otherwise, burst, fire or injury may result.


Dispose of used batteries according to the instruction.

Use a nearby wall outlet(wall socket) when using the AC Adapter/Battery charger. If any malfunction occurs, disconnect the plug from the wall outlet (wall socket) immediately to disconnect from the power source. If you use the product with a charge lamp, note that the product is not disconnected from the power source even when the lamp turns on.

Do not use the AC adapter/Battery charger placed in a narrow space, such as between a wall and furniture.

If static electricity or electromagnetism cause data transfer to discontinue midway (fair), restart the application or disconnect and connect the communication cable (USB, etc.) again.

Parts and controls

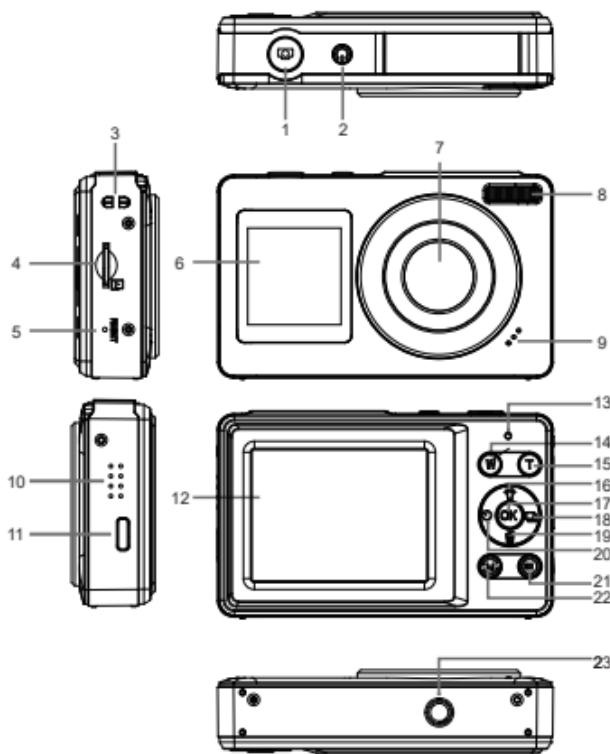


1. Shutter button
2. Power/Selfie button
3. Hole of wrist strap
4. Micro SD card slot
5. Reset button
6. 1.4" Selfie Screen
7. Camera lens
8. LED light
9. Microphone
10. Speaker
11. Type-C USB port
12. LCD display
13. Working/Charging indicator
14. Zoom out button
15. Zoom in button
16. UP/LED light
17. OK button
18. Right/Burst button
19. Down/Delete button
20. Left/Selfie
21. Menu button
22. Mode button
23. Tripod


Charging the battery

Open the battery cover and insert the battery in the direction as shown of following picture, then close the battery cover. Then charge your camera as below steps:

1. Insert one end of the included USB cable into the USB port on your camera.

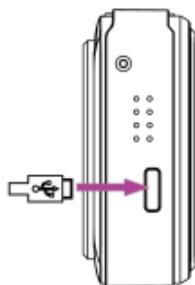


2. Insert one end of the included USB cable into the USB port of a computer or a suitable 5V/1A USB charging adapter (not included).

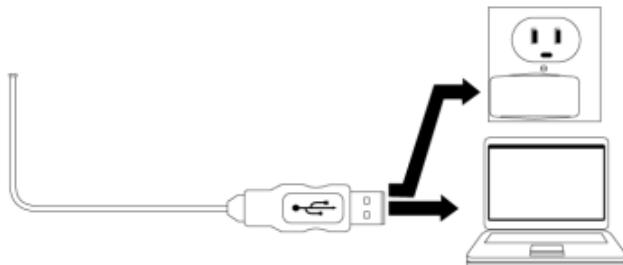

NOTE: A charging indicator light will illuminate while charging and then turn off once charging is complete.

Insert and format the memory card

The camera with an internal memory that support to save up to 100 photos in VGA resolution. For higher resolution photo and video, a class 4 or higher speed memory card is needed for normal use.

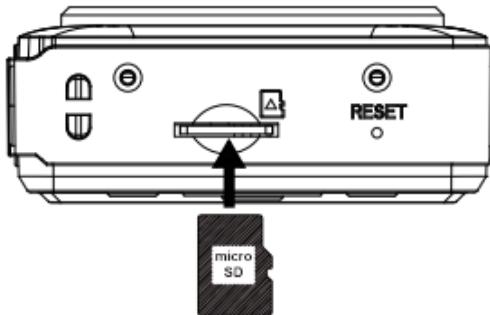


Before turning on your camera, insert a micro SD memory card (not included). The memory card is needed in order to store photos or videos.

Note: Class 4 or higher micro SD memory cards are supported (up to 64 GB).


Using the camera

Turning on your camera

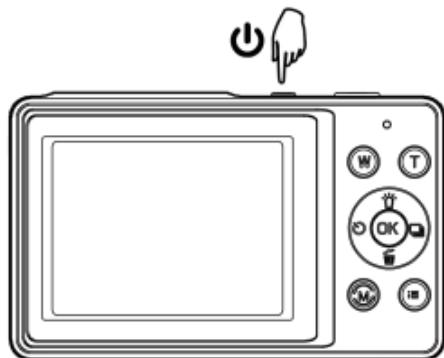

Press and hold the Power/Shutter button for approximately 3-4 seconds to power on or power off your camera.

Press the power button briefly to enter selfie mode.

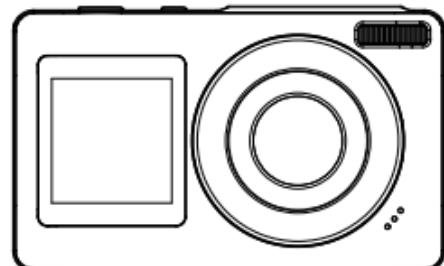

Press Power/Selfie button change to selfie display.

Camera modes

Once the camera is powered on, press the Mode button repeatedly to switch between the camera's different modes.

The camera has three modes:

- **Photo Capture Mode**


(for capturing photos)

- **Video Capture Mode**

(for recording video)


- **Playback Mode**

(for reviewing photos & videos)

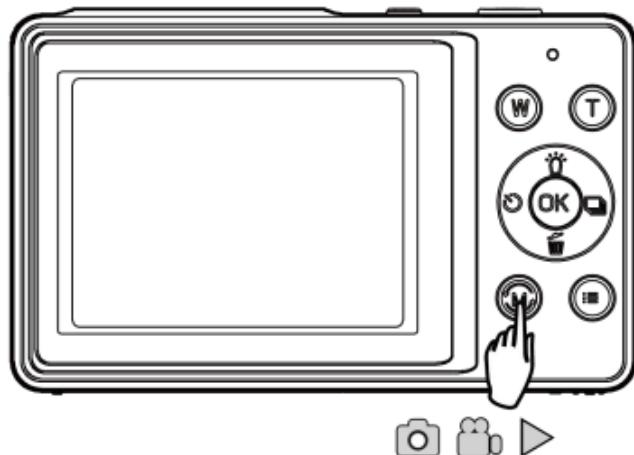

Camera menus

When in photo or video capture modes, you can press Menu button to access the photo/video/playback setting and the general system settings.

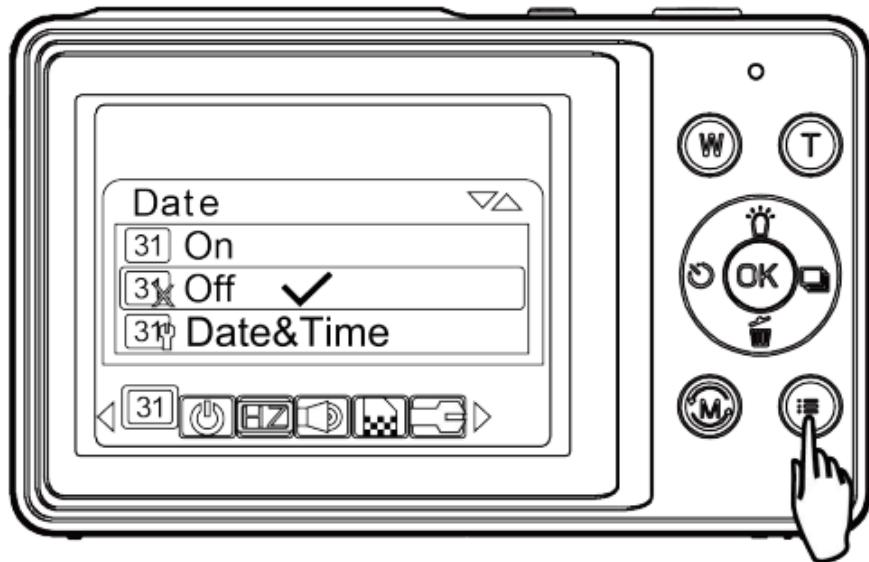

· **Menu for photo mode**

Image size	56M/48M/44M/42M/36M/24M/20M/16M/12M/10M/8M/5M
Anti-shake	On/Off
Face detect	On/Off/Cancel
Smile capture	On/Off
Exposure	3/2/1/0/-1/-2/-3
ISO	Auto/100/200/400
Effect	Normal/B&W/Sepia/Red/Green/Blue/Sunset/Warm/Cool/Over exposure/IR/Binary/Vivid/Undertone/Dog eye/Aibao/Gothic/Japanese style/LOMO/Negative

· **Menu for video mode**

Video size	2688x1520/1080P/720/480P
Exposure	3/2/1/0/-1/-2/-3
Effect	Normal/B&W/Sepia/Red/Green/Blue/Sunset/Warm/Cool/Over exposure/IR/Binary/Vivid/Undertone/ Dog eye/Aibao/Gothic/Japanese style/LOMO/Negative

- **Menu for playback mode**


Delete	This image/All/Cancel
--------	-----------------------

- **Menu for general system**

Language	English/German/French/Spanish/Italy/Russian/ Thai/Portuguese/Dutch/Simplified Chinese/ Traditional Chinese/ Japanese
Date	On/Off/Date&Time
Auto Power Off	Off /1 minute / 2 minutes/ 3 minutes/ 4 minutes/ 5 minutes/ 10 minutes
Frequency	60Hz/50Hz
Exposure	3/2/1/0/-1/-2/-3
Format	Yes/No
Default settings	Yes/No

Connect to computer

Connect the camera to computer is able to transfer the images to computer, also can use the camera as a PC camera.

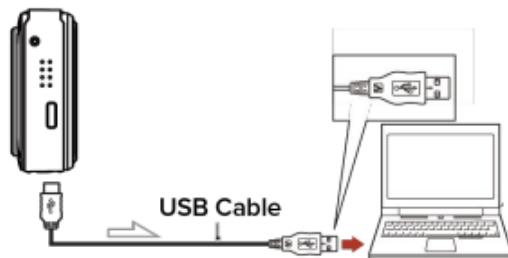

· Mass storage mode

Connect the Type-C USB port of the camera and the USB port of the computer with supplied USB cable. Then turn on the camera, it will enter to MSDC mode. The computer will display the memory card disk of the camera, and you can transfer the images from memory card to the computer.

· PC camera mode

Connect the Type-C USB port of the camera and the USB port of the computer with supplied USB cable. Then press and hold the Shutter and Power button together, release the buttons while the camera turning on. The camera can be used as a webcam, live streaming, etc.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this

device may not cause harmful interference, and (2) this device must accept any interference received, including

interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15

of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a

residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed

and used in accordance with the instructions, may cause harmful interference to radio communications. However,

there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

VIVITAR WARRANTY

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or Visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures.

Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service.

It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned without repair.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE SHALL APPLY.

DISTRIBUTOR FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON DISTRIBUTOR.

REPAIR, REPLACEMENT, OR REFUND OF THE ORIGINAL PURCHASE PRICE - AT DISTRIBUTOR'S SOLE DISCRETION - ARE THE EXCLUSIVE REMEDIES OF THE CONSUMER.

IN NO EVENT WILL DISTRIBUTOR, ITS MANUFACTURERS, OR SAKAR INT. BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT.

EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY. NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST DISTRIBUTOR SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY DISTRIBUTOR.

THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE.

Some countries, states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific

legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies. This product is manufactured, distributed and sold by SAKAR International, Inc. All other trademarks are the property of the respective owner, who has not sponsored, endorsed or approved this product.

Technical Support

For technical support issues please visit our website at www.vivitar.com. You can find manuals, software and FAQ's on the website. Can't find what you are looking for? E-mail us at support@vivitar.com and one of our technical support team members will answer your questions.

For phone support in the US please call 1-800-592-9541.

SAKAR / VIVITAR INTERNATIONAL
195 Carter Drive
Edison, NJ 08817

