




HALO[®]
SHINE MINI

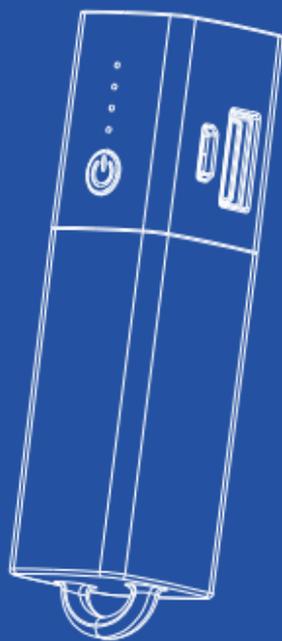

OPERATING INSTRUCTIONS
PLEASE READ BEFORE OPERATING THIS EQUIPMENT

HALO SHINE MINI

Thank you for choosing HALO. Innovative, fashionable and easy to use, the HALO SHINE MINI provides a powerful and universal charging source. The HALO SHINE MINI can charge any phone with the included Micro USB cable or by using the cable that came with your phone.

Please read the operating instructions carefully before using the HALO SHINE MINI.

IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

WARNING: When using this product, basic precautions should always be followed, including the following:

- Read all the instructions before using the product.
- To reduce the risk of injury, close supervision is necessary when the product is used near children.
- Do not put fingers or hands into the product.
- Do not expose power bank to rain or snow.
- Use of a power supply or charger not recommended or sold by power bank manufacturer may result in a risk of fire or injury to persons.
- Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
- Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- Do not expose a power bank to fire or excessive temperature. Exposure to fire or temperature above 70°C/158°F may cause explosion.
- Switch off the power bank when not in use.
- Improper use of this product may result in product damage, excess heat, toxic fumes, fire or explosion, for which damages you ("Purchaser"), and not HALO2CLOUD LLC. (HALO) ("Manufacturer") are responsible.
- This product should be operated only in open-air conditions. It should not be operated in an enclosed, unventilated space such as a carrying bag, pocket, purse or

bedding. Failure to follow these instructions may damage the product by overheating.


- Be cautious of drops, bumps, abrasions, or other impacts to this product. If there is any damage to the product such as dents, punctures, tears, deformities, or corrosion due to any cause, discontinue use. Contact Manufacturer or dispose of it in an appropriate manner at your local battery-recycling center.
- Do not disassemble this product or attempt to re-purpose or modify it in any manner.
- Do not attempt to replace any part of this device.
- For questions or instructions for the various ways to charge this device, refer to the illustrations in this operating instructions.
- If this device is accessible to or may be used by a minor, purchasing adult agrees to be solely responsible for providing supervision, instruction, and warnings. Purchaser agrees to defend, indemnify, and hold Manufacturer harmless for any claims or damages arising from unintended use or misuse by a minor.
- All products have gone through a thorough quality assurance inspection. If you find that your device is excessively hot, is emitting odor, is deformed, abraded, cut, or is experiencing or demonstrating an abnormal phenomenon, immediately stop all product use and contact Manufacturer.
- Never dispose of batteries in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws and regulations. Always take used batteries to your local battery-recycling center.
- This device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

TABLE OF CONTENTS

Safety Precautions	4-5
Included Items	7
Operating Instructions	8-10
Maintenance and Care	10-11
Specifications	11
Warranty and Contact Information	13-14

INCLUDED ITEMS

- HALO SHINE MINI
- Micro-USB Cable

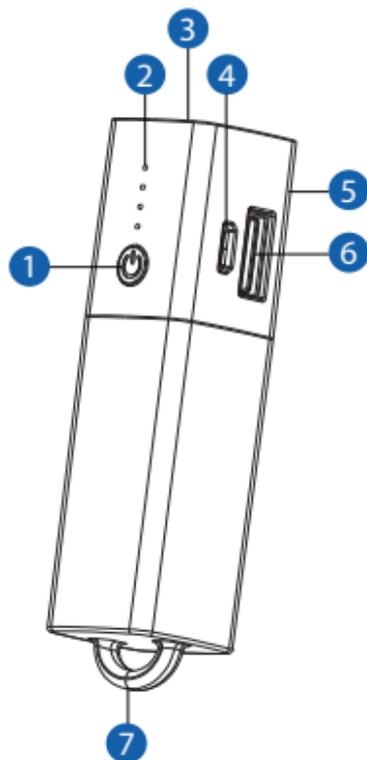

LOCATION OF CONTROLS

- 1 | Power ON/OFF Button
- 2 | LED Battery Indicator Lights
- 3 | Flashlight
- 4 | Micro-USB input port
- 5 | Flashlight Power Button
- 6 | USB Output Port
- 7 | Loop

OPERATING INSTRUCTIONS

Prior to first use, it is recommended to fully charge the HALO SHINE MINI.

Press the Power ON/OFF Button to display the power level on the HALO SHINE MINI. The LED battery indicator will display four solid blue lights when fully charged.

CHARGING THE HALO SHINE MINI

Using the supplied Micro-USB cable, plug the micro-USB end of the cable into the micro-USB input port of the HALO SHINE MINI and plug the other USB connector into a computer or an AC adapter with a USB 5V output.

CHARGING YOUR PERSONAL ELECTRONIC DEVICE

Using the Micro-USB cable, plug the standard end of the USB connector into the USB output port of the HALO SHINE MINI. You may also use your own USB cable that was supplied with your personal electronic device. The HALO SHINE MINI will automatically begin charging your electronic device.

HALO SHINE MINI POWER LEVEL INDICATORS

Indicator Lights	How to Read	Amount of Charge
● ○ ○ ○	One solid light	0%-25%
● ● ○ ○	Two solid lights	26%-50%
● ● ● ○	Three solid lights	51%-75%
● ● ● ●	Four solid lights	76%-100%

HALO SHINE MINI POWER LEVEL INDICATORS: WHILE CHARGING

Indicator Lights	How to Read	Amount of Charge
☼ ○ ○ ○	First light blinking	0%-25%
● ☼ ○ ○	First light solid, second light blinking	26%-50%
● ● ☼ ○	First two lights solid, third light blinking	51%-75%
● ● ● ☼	First three lights solid, fourth blinking	76%-99%
● ● ● ●	All four lights solid	100% fully charged

TURNING ON/OFF YOUR HALO SHINE MINI

The HALO SHINE MINI will automatically turn on and begin charging as soon as it is plugged into your personal electronic device. To preserve the battery, the HALO SHINE MINI will automatically turn off if the electronic device is fully charged and no longer drawing power. When the HALO SHINE MINI is manually unplugged from your device it will automatically turn off after 16 seconds. The HALO SHINE MINI may also be turned off by manually double clicking the power button.

FLASHLIGHT OPERATION

1. Press the flashlight button to turn the flashlight on.
2. When the flashlight is on, press the flashlight button again to activate the Dim Mode.
3. When the Dim Mode is on, press the flashlight button again to activate the SOS Mode.
4. When the SOS Mode is on, press the flashlight button again to turn off.

MAINTENANCE AND CARE

After prolonged use, the internal battery will become weak and the operation may become intermittent. When the battery is very low, the first battery indicator will flash to alert you to recharge the internal battery as soon as possible.

To maximize battery life: once the battery is fully

discharged, immediately recharge (regardless of whether you plan to use this unit or not). If you do not plan to use the battery for an extended period of time (one week or longer), we recommend that you fully charge the battery. For longer periods of storage, please recharge the battery at least every two months to maintain the battery in optimum condition.

SPECIFICATIONS

Model: HALO SHINE MINI

Battery Capacity: 900mAh

Micro USB Input: 5V  0.5A

USB Output: 5V  1A

Dimensions (W x H x D): .9 inches x 3.37 inches x .9 inches

Weight: 0.1 lbs

Charging Time: 2.5 hours

Working Temperature: 5°F to 120°F

COMPLIANCE WITH FCC REGULATION

This device complies with part 15 of the FCC Rules and RSS-Gen of IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with

the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.
- Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

CAUTION: To comply with the limits of the Class B digital device, pursuant to Part 15 of the FCC Rules, this device must be used with certified peripherals and shielded cables. All peripherals must be shielded and grounded. Operation with non-certified peripherals or non-shielded cables may result in interference to radio or reception.

MODIFICATION: Any changes or modifications of this device could void the warranty.

LEGAL

Manufacturer shall not in any way be liable to you or to any third party for any damages you or any third party may suffer as a result of use, intended or unintended, or misuse of this product in conjunction with any device or accessory other than the appropriate device for which this product is designed. Manufacturer will not be responsible for any damages you or any third party may suffer as a result of misuse of this product as outlined above. Purchaser agrees to defend, indemnify, and hold Manufacturer harmless for any claims or damages arising from unintended use or misuse, including use with an unintended device.

LIMITED WARRANTY

HALO2CLOUD LLC. (HALO) warrants its products to be free from defects in material and workmanship under normal use.

For all questions about the warranty or exchange requests, please call 888-907-6274, or contact us at:
<https://www.zagg.com/warranty-policies>.

This Limited Warranty sets forth the full scope of HALO's obligations and liabilities with respect to the product. All implied warranties, including without limitation the implied warranties of merchantability and fitness for a

particular purpose, are limited to the duration of this Limited Warranty. In no event shall HALO be liable for any incidental, special, consequential or punitive damages or any damages or losses of or to electronic equipment or products that are used with any of HALO's products.



FOR TECHNICAL SUPPORT PLEASE
CONTACT US AT:

ZAGG.COM/SUPPORT
OR
CALL US AT: **888-907-6274**

HALO
910 W LEGACY CENTER WAY
STE. 500, MIDVALE, UTAH 84047

WWW.ZAGG.COM/HALO

© 2020 ZAGG Inc | www.ZAGG.com/HALO
The HALO and H trademarks are the property of ZAGG Inc.
All rights reserved.

ZAGG Inc | 910 W Legacy Center Way,
Ste. 500, Midvale, Utah 84047
Made in China.

