


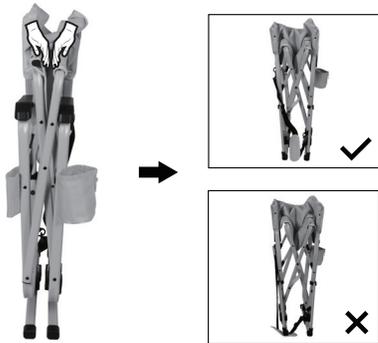

UNFOLD THE CHAIR

Step 1: Begin with the chair in the position shown below. Ensure the shoulder strap is not hooked onto the foot tube.

Step 2: To unfold the chair, press down on the seat tubing as shown.




FOLD THE CHAIR

Step 1: Pull up the seat tubing on both sides to fold the chair.



Step 2: To carry the chair, first fold it, then rotate it to a horizontal position. Adjust the shoulder strap to a comfortable length and you're ready to go. The strap can be removed if needed.

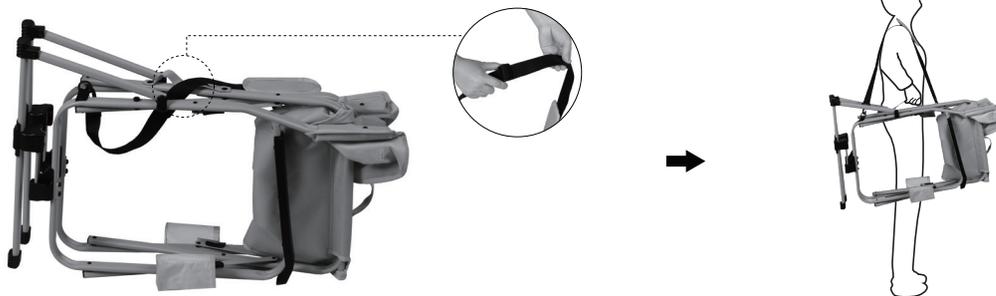

Timber Ridge®, 8675 Purdue Rd., Indianapolis, IN 46268
Customer Service: 877-579-1550 • Email: info@timberridgeproducts.com • www.timberridgeproducts.com
Timber Ridge® is a registered trademark of Westfield Outdoor, Inc.



FRONT

170mm



REDWOOD FLOWMOTION®
DIRECTOR'S CHAIR
INSTRUCTION MANUAL



136 KGS
WEIGHT CAPACITY

250mm

OUTDOOR YOUR WAY™



GRAYSCALE