



# BlissLights Spright Lite

## User's Guide

### LIMITED WARRANTY

The manufacturer warrants this product to be free from defects in materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. **The manufacturer does not warrant any warranty, whether expressed or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss of damage, including any labor/expense costs involved in the replacement or repair of said product.** Please contact BlissLights at warranty@blisslights.com, or (626) 709- 3319.



### Owner Registration Card

Please fill out, cut along dashed line, affix proper postage and return this Owner registration card within 10 days to insure that your new BlissLights Spright Lite is covered by the limited warranty. Please mail to:  
Blisslights, 745 S Vinewood St., Escondido, CA 92029

Purchaser's Name \_\_\_\_\_  
 Address \_\_\_\_\_  
 State \_\_\_\_\_ Zip \_\_\_\_\_  
 Model No: \_\_\_\_\_ Purchase Date: \_\_\_\_\_  
 Where Purchased (Store Name) \_\_\_\_\_  
 Store Address \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_  
 Type of store where purchased:  
 Lighting Center  Building Supply Center  Department Store  
 Where will the BlissLight be used: \_\_\_\_\_  
 If commercial institution, what type of business?  
 Restaurant  Bar  Store  Office  Other  
 If home installation, where?  
 Walkway  Patio  Garden Area  Porch  Other \_\_\_\_\_  
 Vendor No: \_\_\_\_\_  
 UPC: \_\_\_\_\_

Manufactured By:



Please ONLY use  
 manufacturer provided  
 transformer.

Phone: (626) 709-3319  
 Fax: (626) 205-4013


<http://www.BlissLights.com>  
[info@BlissLights.com](mailto:info@BlissLights.com)  
 MADE IN CHINA

## CONTENTS

|   |   |
|---|---|
| Notice.....                                   | 2 |
| Before You Begin.....                         | 3 |
| Parts List.....                               | 3 |
| Setting up the BlissLight.....                | 4 |
| Installation Tips.....                        | 6 |
| Operating the BlissLight/Using the timer..... | 5 |
| Limited Warranty.....                         | 5 |
| Product Specifications.....                   | 6 |

### Installation Tips:

- For scheduled or nighttime-only operation, use with provided timer. **Do not connect the light to a dimmer pack. Use with manufacturer provided transformer only.**
- The darker the area the light is being used in, the brighter the projection. Try to stay away from areas with street lights or other bright lights.
- If you are going to hang your Spright Lite, for safety purposes, it is recommended that it is properly mounted using a suitable hanging clamp and safety cable.
- See below 'PROJECTION COVERAGE' under Product Specifications for estimated light throw.

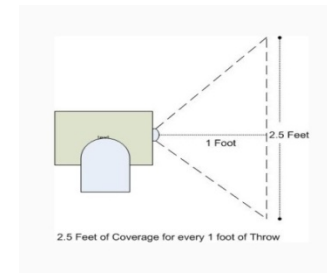

### Product Specifications

|  | BlissLights Spright Lite                                       |
|--|--|
| <b>Laser Classification</b>              | Class 2  |
| <b>Maximum Laser Power (Single Beam)</b> | Less than 1 mw   |
| <b>Laser Wavelength</b>                  | 532 nm – Green, 650nm-Red, 445nm-Blue                          |
| <b>Laser Optics</b>                      | Single source holographic optical element                      |
| <b>Power Consumption</b>                 | Up to 8 watts  |
| <b>Power Input</b>                       | 110/120V<br>(when used with manufacturer provided transformer) |
| <b>Operation</b>                         | Indoor / Outdoor   |
| <b>Operating Temperature</b>             | -15° F to 90° F  |
| <b>Projection Coverage</b>               | 50ft x 50ft at 20ft away, 30ft x 30ft at 10ft away             |
| <b>Maintenance</b>                       | Maintenance Free   |
| <b>Dimensions</b>                        | 13”H x 5”L x 4.5”W   |
| <b>Warranty</b>                          | Limited 1 Year   |

## NOTICE

### Operating the BlissLight

The BlissLights Spright Lite operates in temperatures of -15° F to 90° F. There may be a slight delay if operating in temperatures below 55° F. Please allow up to 10 minutes for light to warm up and reach its full projection.

### Using the Timer

The BlissLights Spright Lite will function without the timer included. The consumer has the choice to use the Spright Lite with, or without the timer. Essentially, the timer is to be utilized so that the consumer does not have to manually turn their Spright Lite on every night. By using the timer, the Spright Lite will turn on automatically at the same time every night. The timer that is included is a 6-18 timer. The timer will set the Spright Lite to stay on for 6 hours, and then automatically shut off for 18 hours.

To use the timer, the transformer must be plugged into a standard 110V wall outlet, the two prong connector on the timer is then connected into the transformer, and the two prong connector on the Spright Lite is then inserted into the timer. Once the timer, transformer, and Spright Lite are connected, the Spright Lite will run for a total of 6 hours, and then shut off for a total of 18 hours. For example, the consumer may want to initially plug in their Spright Lite at 8 PM in the summer time. This will ensure that the Spright Lite will turn on every night at 8pm and run for a total of 6 hours, then shut off for the next 18 hours. The Spright Lite will then turn on every night at 8 PM without the consumer having to manually turn it on. If the consumer would like to change the time the Spright Lite turns on, they would simply just need to unplug the transformer from the wall, then plug it back in at the desired time.

**CAUTION – Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.**

**This laser product is certified as a CLASS 2 laser product to the requirements of the US Federal Laser Product Performance Standard (FLPPS) contained in the regulations in 21 CFR Subchapter J. Class 2 laser products can be hazardous when directly viewed.**

**Avoid direct viewing of Class 2 laser energy. For reference the FLPPS requirements for demonstration laser products like laser pointers are limited to Class 2 levels of laser energy. This product uses diffractive optics to scatter the beam energy. This scattering effect causes the energy concentration to drop below the exposure limits for momentary or accidental viewing at a relatively short distance from the laser aperture. As similar with all bright light sources, when you operate this device in unsupervised general public areas, it is recommended that up close access to the BlissLight be restricted or prevented.**

**This laser display device incorporates a Class 2 laser system which, by itself, may be hazardous. However, this laser display device incorporates a protective housing and diffractive holographic optics in the machine design such that there is no exposure or human access to laser radiation during operation or maintenance above the Class 2 limits. Each individual laser beam power is under 1mw which is less than a standard laser pointer.**

**UNDER NO CIRCUMSTANCE shall attempts be made to open the protective housing or operate the device if the aperture windows are damaged. All service to this laser display device requiring the protective housing to be opened and/ or removed shall be performed by *BlissLight* service personnel or their authorized agents. Opening the BlissLight protective housing voids the warranty.**

## Setting up the BlissLights Spright Lite

Thank you for purchasing the BlissLights Spright Lite. The BlissLights Spright Lite projects thousands of pin points of light that is perfect for a “fire fly” effect in your garden or creating a truly unique holiday display. We hope you enjoy this incredibly unique lighting fixture.

### Before you Begin

Immediately upon receiving the fixture, carefully unpack the carton, check the contents to ensure that all parts are present, and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that the fixture must be returned to the factory, it is important that the fixture be returned in the original factory box. Please see parts list below for box contents.

### Parts List

(1) BlissLights- Spright Lite



(1) Transformer



(1) 6/18 Hour Timer



**\*\*Before operating your Spright Lite, please read the “Before you Begin” section and “Notice” section of this user guide.\*\***

First locate the 2 prong plug connected to the cable exiting the Spright Lite head. If using the timer, plug this end into the matching hole on the end of the timer and screw the cap on to complete the water tight seal. Then plug the two prong connector on the timer into the matching holes on the end of the 12V Manufacture provided transformer. Screw the cap on to complete the water tight seal.



Next plug the standard US plug on the other end of the transformer into an outdoor outlet.

To attach or detach the stake, twist the stake into place on the bottom of the Spright Lite. Twisting the stake clockwise will tighten the stake into place. Twisting the stake counter clockwise will detach the stake. Insert the BlissLight Spright Lite into the desired location. **Do not use fixture head to insert light into the ground, grasp by stake only.** Use the thumb screw on the side of the fixture to adjust the angle.

