



Instruction Manual Aquaflame Flameless Candle Fountain with Timer

Your item has been carefully packaged for transit, however due to the nature of the materials used; some debris may appear in the bottom of the packaging or while unpacking. We have designed this item so its beauty will not be diminished by the debris.

Safety Precautions

Caution! Before using for the first time, please read this instruction manual carefully. This manual contains important information, safeguards and operating instructions.


- Remove batteries before storing.
- Remove wall adaptor from wall and unit before storing.
- Do not add any other liquid other than distilled water to the Candle Fountain.
- Do not place or use foreign articles in Candle Fountain.
- Do not drop unit.
- Store in cool dry location when not operating.
- Do not use near tub or shower.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be performed by children without supervision.
- The appliance is only to be used with the power supply provided with the appliance.

Battery Information and Disposal:

- Do not dispose of batteries in a fire.
- For best results, do not mix old and new batteries; do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries).
- For best results, use alkaline batteries
- Install only new batteries of the same type in your product.
- Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak.
- If this device is not being used for a long period of time remove batteries and place in a cool dry location.
- Improper handling/disposal of batteries may cause batteries to explode or leak.
- Batteries should be recycled or disposed of as per country, state and local guidelines.

Technical Data

Power Requirements: 5V DC 1.5 watt
Batteries: 3 "D" Batteries
Electrical: 100-240VAC, 50/60Hz, 0.2A

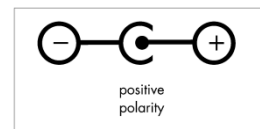

This mark is the confirmation that the unit conforms to the EU guidelines and has been tested accordingly.

This device complies with Canadian ICES-001
Cet appareil est conforme à la norme NMB-001 du Canada

Indoor Use Only

Made In China

H205035INST112014

Included:

One (1) Aquaflame Flameless Candle Fountain with LED lights, Timer and Pump – Wall Adaptor Plug (included), 3D batteries (not included).

Installation Instructions:


1. Carefully remove Flameless Candle Fountain from packaging.
2. If using plug in adaptor, remove from packaging. Plug it into base. Then, place cord through channel area on back side of candle. The space was designed specifically to allow the cord to fit through and your Aquaflame will sit level on a flat surface. Next, skip to step 6



3. If using batteries, battery box is located at the base.
4. Open the battery box cover by pinching the tabs. Insert 3 D batteries (not included). Follow diagram in battery box for proper orientation. (Do not mix old and new batteries; do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries).



5. Close battery box cover.
6. Set power switches to desired modes.
 - Select **LED** or **LED+PUMP**. LED only will have lights on. LED+PUMP will have both the lights and pump on.
 - Select **ON**, **OFF** or **TIMER**
 - **LED and ON** – Lights only are on constantly.
 - **LED and TIMER** - The lights only will stay lit for 5 hours and then switch off for 19 hours. The lights will turn on every day at the same time as originally set and stay on for 5 hours each time. For example: If you want the lights to turn on every day at 5pm you need to turn the power switch to **TIMER** and **LED** at 5pm. Lights will turn on every day at 5pm and stay lit until 10pm.
 - **LED+PUMP and ON** – Lights and pump are on constantly. Water will flow.
 - **LED+PUMP and TIMER** - The lights and pump will stay on for 5 hours and then switch off for 19 hours. Water will flow. The lights and pump will turn on every day at the same time as originally set and stay on for 5 hours each time.

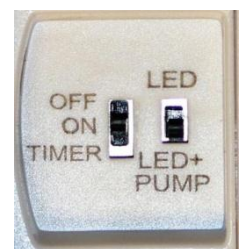



For example: If you want the lights and pump to turn on every day at 5pm you need to turn the power switch to LED+PUMP and TIMER at 5pm. Lights and pump will turn on every day at 5pm and stay lit and water flow until 10pm.



- OFF – Lights and pump are off. No Water will flow.
- 7. Place in desired location.
- 8. For optimum results, it is highly recommended to use Distilled Water Only. The flameless candle fountain holds a minimum of 16 oz. of water. It holds a maximum of 22 oz. of water. The more water put in the candle fountain, the softer or quieter the sound of water will be. The less water put in candle fountain will create a louder water sound. Also, the more water you add, the higher the fountain stream will rise and the higher chance of splashes.
- 9. If your Aquaflame flameless candle fountain stops working, please check your batteries as they may need to be replaced. Batteries should last 120 hours.
- 10. Check water level periodically. The pump has dry run protection which means the pump will shut off automatically when the water level is too low. As with any fountain, water evaporates over time.
- 11. This product is a fountain that contains water that can splash. Do not place product on surfaces or fine furniture that can be damaged by water. Place product on a decorator plate or other water resistant material if concerned with water damage.

Care Instructions:

- **Check water level periodically. Water evaporates over time.**
- To clean the pump and prevent mineral build up, pour about 8 oz. of white distilled vinegar into the inside of the candle and let the pump soak for 15 minutes. Rinse out the vinegar.
- **Before you return, if your pump stops working, please follow the cleaning instructions and run vinegar through it to clean the pump. Also check the batteries, as the pump may not be broken, but the batteries may have run out.**
- If product becomes dusty or dirty, clean with a dry cloth. Do not use detergent as it may discolor the product.
- Change distilled water periodically
- LED lights are not replaceable
- If this device is not being used for a long period of time remove batteries and place in a cool dry location.

Indoor Use Only



Disposal Responsibilities

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice.



FCC Information (Adapter):

Model: JOD-S-050030A5-C-2 manufactured by Huizhou Jodeway Electron Technology Co., Ltd

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Indoor Use Only

Made In China

H205035INST112014